



# PTZ Network Camera User Manual

Version: V3.0 Date: 2022-01-18

Chapter 1. Introduction	4
1.1 Copyright Statement	4
1.2 Industry Canada ICES-003 Compliance	4
1.3 Safety Instruction	4
1.4 EU Conformity Statement	5
Chapter 2. Product Description	6
2.1 Product Overview	6
2.2 Key Features	6
2.3 Hardware Overview	7
23X/30X/36X/42X Speed Dome Network Camera	7
AI 23X/30X/36X/42X Speed Dome Network Camera	9
(AI) 12X Mini PTZ Bullet Network Camera	10
AI 5X/20X/23X Mini PTZ Bullet Plus Network Camera	13
(AI) 12X/20X/23X Mini PTZ Dome Network Camera	14
2.4 How to Connect to Alarm Interface	
2.5 How to Connect the Water-proof Connector	
2.6 System Requirements	16
Chapter 3. Network Connection	
3.1 Setting the Camera over the LAN	17
3.1.1 Connect the Camera to the PC Directly	17
3.1.2 Connect via a Switch or a Router	17
3.2 Dynamic IP Connection	
Chapter 4. Accessing the Network Camera	
4.1 Assigning An IP Address	
4.1.1 Assigning An IP Address Using Smart Tools	
4.1.2 Assign An IP Address via Browser	24
4.2 Accessing from the Web Browser	26
4.2.1 Access with Plugin	
4.2.2 Access without Plugin	
4.3 Accessing from Milesight VMS (Video Management Software)	
Chapter 5. System Operation Guide	
5.1 Live Video	

5.1.1 Operations on Live View Page	
5.1.2 3D Positioning	
5.1.3 Set / Call a Preset / Patrol / Pattern	
5.2 Playback	
5.3 Local Settings	44
5.4 Basic Settings	44
5.4.1 Video	
5.4.2 Image	47
5.4.3 Audio	
5.4.4 Network	60
5.4.5 Date&Time	77
5.5 Advanced Settings	
5.5.1 Storage	
5.5.2 Security	
5.5.3 SIP	
5.5.4 PTZ	
Logs	
5.6 Event	
5.6.1 Basic Event	
5.6.2 VCA Event	
5.6.3 People Counting	140
5.6.4 Face Detection (Optional)	
5.7 LPR (Optional)	
5.7.1 Live Video	
5.7.2 Settings	
5.7.3 Smart Search	
5.8 System	
5.9 Maintenance	
5.9.1 System Maintenance	
5.9.2 Auto Reboot	
Chapter 6. Services	

# Chapter 1. Introduction

Thank you for purchasing our product. If there is any questions or requests, please do not hesitate to contact your dealer.

This Manual explains how to use and manage Milesight network cameras on your network. Previous experience of networking will be of use when using the products. Please read this manual carefully before operation and retain it for future reference.

This manual may contain several technically incorrect places or printing errors, and the content is subject to change without notice. The updates will be added into the new version of this manual. We will readily improve or update the products or procedures described in the manual.

# 1.1 Copyright Statement

This manual may not be reproduced in any form or by any means to create any derivative such as translation, transformation, or adaptation without the prior written permission of Milesight Technology Co., Ltd(Hereinafter referred to as Milesight).

Milesight reserves the right to change this manual and the specifications without prior notice. The latest specifications and user documentation for all Milesight products are available on our official website <u>www.milesight.com</u>

## 1.2 Industry Canada ICES-003 Compliance

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada.

# 1.3 Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss. The precaution measures are divided into "Warnings" and "Cautions"

Warnings: Serious injury or death may be caused if any of these warnings is neglected.

• This installation must be conducted by a qualified service person and should strictly comply with the electrical safety regulations of the local region

- To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installed.
- Do not touch components such as heat sinks, power regulators, and processors, which may be hot
- Source with DC/AC 12V or PoE
- Please make sure the plug is firmly inserted into the power socket
- When the product is installed on a wall or ceiling, the device should be firmly fixed
- If the product does not work properly, please contact your dealer. Never attempt to disassemble the camera by yourself

Cautions: Injury or equipment damage may be caused if any of these cautions are neglected.

- Make sure that the power supply voltage is correct before using the camera
- Do not store or install the device in extremely hot or cold temperatures, dusty or damp locations, and do not expose it to high electromagnetic radiation
- Only use components and parts recommended by manufacturer
- Do not drop the camera or subject it to physical shock
- To prevent heat accumulation, do not block air circulation around the camera
- Laser beams may damage image sensors. The surface of image sensors should not be exposed to where a laser beam equipment is used
- Use a blower to remove dust from the lens cover
- Use a soft, dry cloth to clean the surface of the camera. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes
- Save the package to ensure availability of shipping containers for future transportation

## 1.4 EU Conformity Statement

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see:www.recyclethis.info.

2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury(Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see:www.recyclethis.info.

# Chapter 2. Product Description

## 2.1 Product Overview

Milesight provides a consistent range of cost-effective and reliable network cameras to fully meet your requirements. Based on embedded Linux operating system, Milesight network cameras could be easily accessed and managed either locally or remotely with great reliability. With built-in high-performance DSP video processing modules, the cameras pride on low power consumption and high stability. They support state-of-the-art H.265/ H.264/ MJPEG video compression algorithm and industry-leading HD dual-stream technology to achieve the highest level of video image quality under the limited network resources. It is fully functional, supporting for flexible and comprehensive alarm linkage mechanism, day and night auto switch and privacy masking, etc.

In practical applications, Milesight network cameras could either work independently in the LAN, or be networked to form a powerful safety monitoring system. It is widely used in fields such as finance, education, industrial production, civil defense, health care for security's sake.


## 2.2 Key Features

- Up to 30X Optical Zoom for Speed Dome, 42X for Speed Dome II, 23X Optical Zoom for Mini PTZ Bullet and 23X for Mini PTZ Dome
- 360° continuous pan and 0°~ 90° (Auto Flip) tilt for Speed Dome/ Speed Dome II
- 360° continuous pan and -45°~30° tilt for Mini PTZ Bullet
- 360° continuous pan and -5°~90° (Auto Flip) tilt for Mini PTZ Dome
- 300 Preset Points, 8 Patrols and 4 Patterns
- · Based on Linux OS with high reliability
- H.265/ H.264/ MJPEG video compression capability
- Support AI Video Analytics
- Support Plugin-Free mode
- Support Smart Stream
- Support ONVIF Profile G & Q & S & T
- Support activation and set-up of the security questions for cameras(V4x.7.0.69 or above)
- ICR filter with auto switch, true day/night
- Built-in WEB server, support IE/ Firefox/ Chrome/ Safari browser
- UPnP protocol for the easy management of IPC
- Support Milesight DDNS
- Auto Tracking, 3D Positioning, PTZ Motion, PTZ Limit, Scheduled Tasks and Auto Home function
- White LED for Mini PTZ Bullet
- Motion Detection, Privacy Masking, Network Fault Detection and ROI

- FTP upload, SMTP upload, SD card record and SIP function
- G.711/AAC audio compression capability
- Audio Input/Output and Alarm Input/Output
- Three-privilege levels of users for flexible management
- Micro SD/SDHC/SDXC card local storage support, expand the edge storage
- Local PAL/NTSC signal output

## 2.3 Hardware Overview

## 23X/30X/36X/42X Speed Dome Network Camera

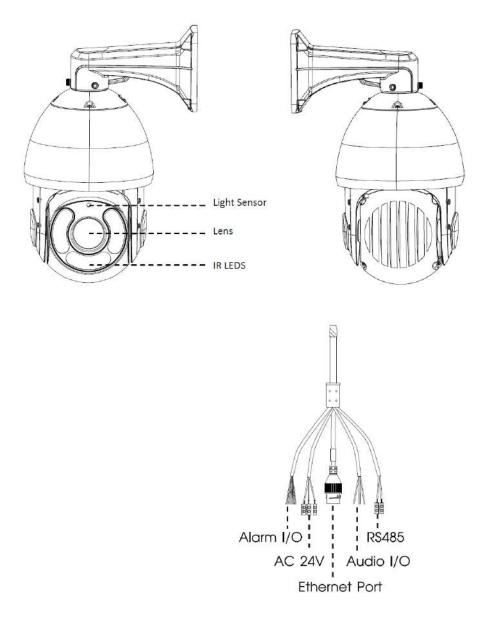

- Only AC 24V is available for Speed Dome power supply. AC 24V and PoE (802.3at) are available for PoE Speed Dome power supply.
- Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default.




## AI 23X/30X/36X/42X Speed Dome Network Camera


- Only AC 24V is available for AI Speed Dome power supply. AC 24V and PoE (802.3at) are available for PoE AI Speed Dome power supply.
- Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default.

## (AI) 12X Mini PTZ Bullet Network Camera

Wall Mount:

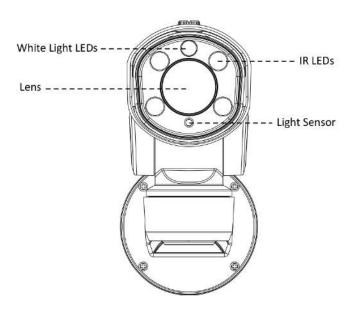


Pedestal Mount (Only for non-AI Mini PTZ Bullet) :

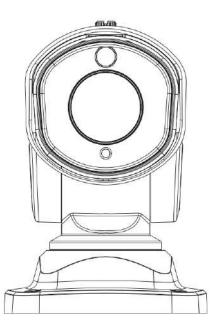


Mini PTZ Bullet (Only for non-AI PTZ bullet) :

Micro SD/SDHC/SDXC Card Slot

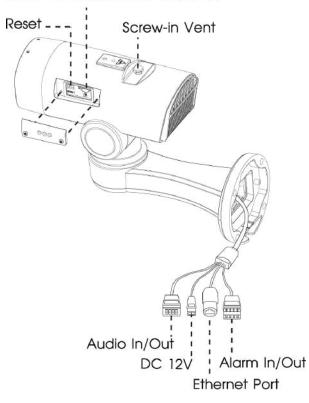


(AI) Mini PoE PTZ Bullet:

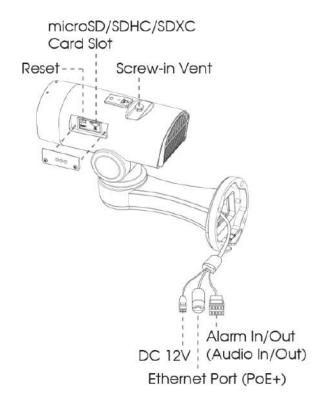


- Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default.
- Only DC 12V is available for Mini PTZ Bullet power supply. DC 12V and PoE (802.3at) are available for (AI) Mini PoE PTZ Bullet power supply.

## AI 5X/20X/23X Mini PTZ Bullet Plus Network Camera

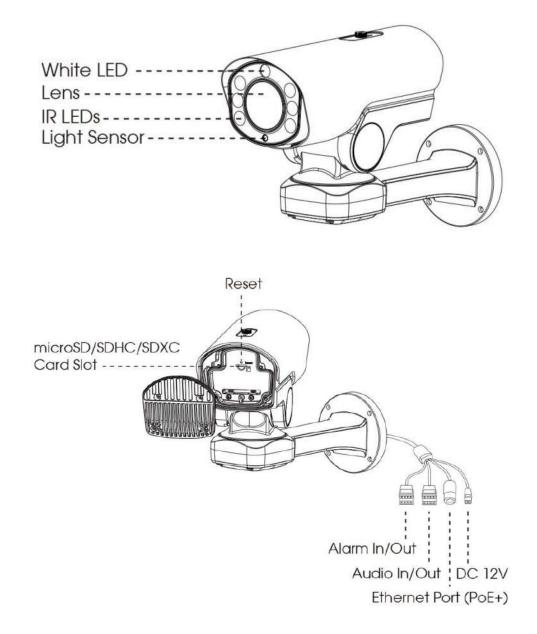

- Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default.
- DC 12V and PoE (802.3at) are available for power supply.


## (AI) 12X/20X/23X Mini PTZ Dome Network Camera

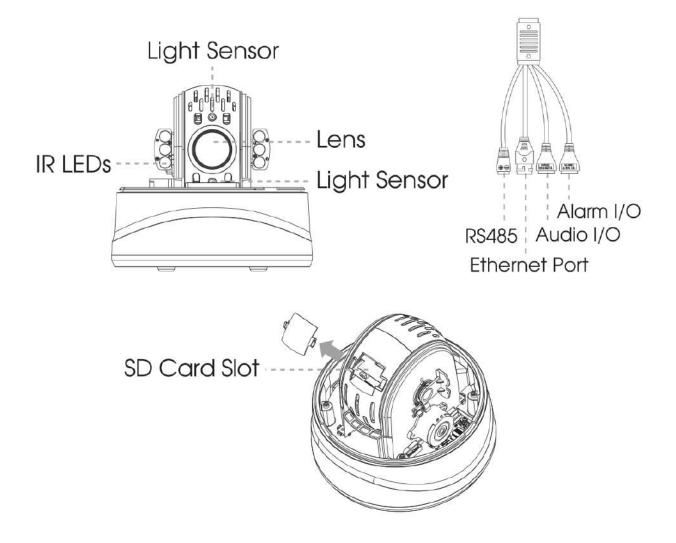

- Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default.
- DC 12V and PoE (802.3at) are available for power supply.


# 2.4 How to Connect to Alarm Interface

External interface of camera is as the following, you can refer to the picture to install the external alarm device:

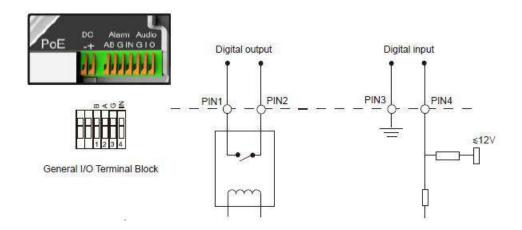

- PIN1: Alarm Output NC/NO 24V DC 1A
- PIN2: Alarm Output NC/NO 24V DC 1A
- PIN3: Alarm Input NC/NO  $\leq 12V$
- PIN4: Alarm Input NC/NO  $\leq 12V$

## 2.5 How to Connect the Water-proof Connector

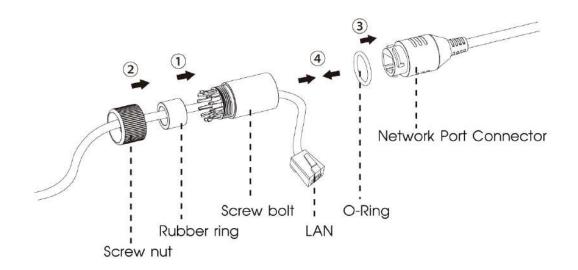

Step1: Get the network cable through the screw nut, rubber ring and the screw bolt.

Step2: Insert the rubber ring into the screw bolt.

Step3: Connect the screw nut to the screw bolt.

Step4: Place the O-Ring on the network port connector.

Step5: Connect the RJ45 to the network port connector, and tighten the screw bolt and the connector.

## 2.6 System Requirements

Operating System: Windows XP/Vista/7/8/10/Server 2000/Server 2008

CPU: 1.66GHz or higher

**RAM:** 1G or higher

Graphic memory: 128MB or more

Internet protocol: TCP/IP (IPv4/IPv6)

**Web Browsers:** Internet Explorer 8.0 and above version, Mozilla Firefox, Google Chrome and Safari.


# Chapter 3. Network Connection

## 3.1 Setting the Camera over the LAN

Connecting the camera to a switch or a router is the most common connection method. The camera must be assigned an IP address that is compatible with its LAN.

## 3.1.1 Connect the Camera to the PC Directly

In this method, only the computer connected to the camera will be able to view the camera. The camera must be assigned a compatible IP address to the computer. Details are shown as the following figure.

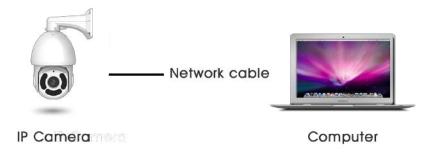

#### 3.1.2 Connect via a Switch or a Router

Refer to the following figure to set network camera over the LAN via the switch or router.



## 3.2 Dynamic IP Connection

#### Connecting the network camera via a router

Step1: Connect the network camera to a router;


Step2: On the camera, assign a LAN IP address, the Subnet mask and the Gateway;

Step3: On the router, set port forwarding. E.g. 80, 8000 and 554 ports. The steps for port forwarding vary depending on different routers. Please look up the router's user manual for assistance with port forwarding;

Step4: Apply a domain name from a domain name provider;

Step5: Configure the DDNS settings in the setting interface of the router;

Step6: Visit the camera via the domain name.

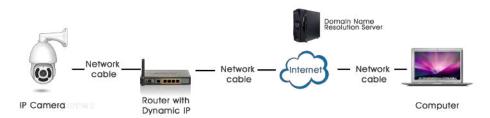

# Chapter 4. Accessing the Network Camera

The camera must be assigned an IP address to be accessible.

## 4.1 Assigning An IP Address

The Network Camera must be assigned an IP address to be accessible. The default IP address of Milesight network cameras is 192.168.5.190.

You can either change the IP address of the camera via Smart Tools or browser. Please connect the camera in the same LAN of your computer.

#### 4.1.1 Assigning An IP Address Using Smart Tools

Smart Tools is a software tool which can automatically detect multiple online Milesight network cameras in the LAN, set IP addresses, and manage firmware upgrades. It's recommended to use when assigning IP addresses for multiple cameras.

Step1: Install Smart Tools (The software could be downloaded from our website);

**Step2:** Start Smart Tools, click the IPC Tools page, then enter the device information, such as IP address, MAC address, Status, Port number, Netmask, and Gateway, then all related Milesight network cameras in the same network that will be displayed. Details are shown as the figure below;

•	No.	Device Name	Status	MAC	Survey of the survey of	Port	Netmask	Gateway	Model	Run-up Time	Version
r	58	Network Camera	Active	1C:C3:16:22:0C:74	192.168.7.81	80	255.255.240.0	192.168.7.1	MS-C8262-FPB	13:49:07	43.7.0.68
Г	59	Network Camera	Active	1C:C3:16:23:C8:4D	<b>192.168</b> .7.86	80	255 255 240.0	192.168.8.2	MS-C5362-EPB	2019-03-08 06:32:58	41.7.0.67-r1
r.	60	MS-C2975-PB	Active	1C:C3:16:24:60:DE	192.168.7.93	80	255 255 240.0	192.158.7.1	MS-C2975-PB	2019-03-11 16:38:03	40.7.0.69
n	61	Network Camera	Active	1C:C3:16:20:00 EF	192.158.7.100	80	255 255 240.0	192.158.7.1	MS-C2862-FPB	2019-03-06 09:34:46	41.7.0.67-r14
r	62	Network Camera	Active	1C:C3:16:21.EC:5A	192,168.7.105	80	255,255,240.0	192.168.7.1	MS-C2972-FPB	2019-03-07 09:16:01	40.7.0 68-r3
r	63	MS-C2964-FPB	Active	1C.C3.16.24:09.D2	192.168.7. <mark>11</mark> 0	80	255.255.240.0	192.168.7.1	MS-C2964-FPB	2019-03-11 09:34:42	40.7.0.69-r2
r	64	Network Camera	Active	1C:C3:16:24:5F:53	192.168.7.113	80	255.255.240.0	192.168.7.1	MS-C2975-EPB	2019-03-11 15:35:33	40.7.0.68-r7
C.	65	MS-C3772-FIPB	Active	1C-C3-16:21:FA-67	192.168.7.128	80	255 255 255.0	192.168.7.2	MS-C3772-FIPB	2019-03-07	41.7.0 69-r2
Г	66	Network Camera	Active	1C:C3:16 19:00 6E	192.168.7 129	80	255 255 240.0	192.168.7.2	MS-C5364-PB	2019-03-11 09114:09	41.7 0.67-84
n	67	Network Camera	Active	1C:C3:16:11:02:40	192.168.7.190	80	255 255 255.0	192.158.7.1	NC3253-PNA	2019-01-10	30 7.1.63-r20
r	68	Network Camera	Active	1C:C3:16 22:01:0B	192.168.7.202	80	255,255,240.0	192.168.7.2	MS-C9674-PB	2019-02-27	42.7.0.67-1
-		~~~ <u>+</u> ^ / 1 <del>/1</del> +	and the			~				2019-03-07	
0/253		Jevice Namer	_	PP(	Port:		Netmas & 🦲		deteway		184
								0	🕘) Activate 🛛 🚣	Excort Device L	lat 🗶 Mo
Operat									9		

Step3: Select a camera or multiple cameras according to the MAC addresses;

				Network	Setting		Preview	Upgrade		Q Sea	chihere	į
•	No.	Device Name	Status	MAC	- IR 🔺	Port	Netmask	Gateway	Model	Run-up Time	Version	
r	58	Network Camera	Active	1C:C3:16:24:60:F6	192,158,7.80	80	255.255.240.0	192,158.7.1	MS-C2975-PB	2019-03-11 14.14:32	40.7.0.67 <b>-r</b> 6	
0	59	Network Camera	Active	1C:C3:16:22:0C:74	192.168.7.81	80	255.255.240.0	192.168.7.1	MS-C8262-FPB	2019-03-11 13:49:07	43.7.0.68	
r	60	Network Camera	Active	1C:C3:16.23:C8:4D	192.168.7.86	80	255.255.240.0	192.168.8.2	MS-C5362-EPB	2019-03-08 08:32:58	41.7.0.67-r1	
c	61	MS-C2975-PB	Active	1C:C3:16:24:60:DE	192.168.7.93	80	255.255.240.0	192.168.7.1	MS-C2975-PB	2019-03-11	40.7.0.69	
6	62	Network Camera	Active	1C:C3:16:20:00:EF	192.168.7.100	80	255 255 240.0	192.168.7.1	MS-C2862-FPB	2019-03-06	41 7.0 67-r14	1
r.	63	Network Camera	Active	1C:C3:16:21:EC:5A	192,158,7,105	80	255 255 240 0	192.168.7.1	MS-C2972-FPB	2019-03-07	40.7.0 68-r3	
c	64	MS-C2964-FPB	Active	1C:C3:15:24:09:D2	192,168,7,110	80	255 255 240 0	192,158,7,1	MS-C2964-FPB	09:16:00 2019-03-11	40.7.0 69-r2	
c	65	Network Camera	Active	1C C3 16:24:5F 53		80	255 255 240 0	192,168.7.1	MS-C2975-EPB	09:34:43 2019-03-11	40.7.0 68-17	
с. Г	66	MS-C3772-FIPB	Active	1C C3 16:21 FA 67		80	255 255 255 0	192,158,7.2	MS-C3772-FIPB	15.35.34 2019-03-07	41.7.0.69-12	
÷										10:14:26 2019-03-11		
r	67	Network Camera	Active	1C:C3:16.19:00.6E	192.168.7.129	80	255.255.240.0	192.168.7.2	MS-C5364-PB	09:14:10 2019-01-10	41.7.0.67-a4	
F	68	Network Camera	Active	10:03:16:11:02:40	192.168.7.190	80	255.255.255.0	192.168.7.1	NC3263-PNA	11:07:21	30.7.1.63-r20	Č.
-	- 20	Mult of Su	ursa dh	10.00.13.00.01.00.	•00 • 00 7 000	20	0000000000	400.400.7.0	.00 00031.00	2019-02-27		
1/354		Bevice Name: (letwo	rk Camer	a ⊫ (192.168.7 .	100 Fort (8	0	Nelmask. (25	5 255.240.0	Galeway 192.	68.7.1 Eh	8.8.8.8	1
									3) Activate 🔳	) Export Device L	iat 🗶 Ma	
lpera	ting Info	rmation							James C	1		
PALITICAL D												Ĩ

Select multiple cameras:

•	No.	Device Name	Status	MAC	IP 🔺	Port	Netmask	Galeway	Model	Run-up Time	Version	
r	58	Network Camera	Active	1C.C3 16:24:60 F6	192,168.7.80	80	255,255,240.0	192.168.7.1	MS-C2975-PB	2019-03-11 14.14.32	40.7.0.67-16	
r	59	Network Camera	Active	10:03:16:22:00:74	192.168.7.81	80	255.255.240.0	192,168.7.1	MS-C8262-FPB	2019-03-11 13.49.07	43.7.0.68	
•	60	Network Camera	Active	1C.C3.16.23.C8.4D	192.168.7.86	80	255.255.240.0	192.168.8.2	MS-C5362-EPB	2019-03-08 08:32:57	41.7.0.67-r1	
	61	M3-C2975-PB	Active	1C:C3:16:24:60:DE	192.168.7.93	80	255.255.240.0	192,168.7.1	MS-C2975-PB	2019-03-11 16:38:03	40.7.0,69	
•	62	Network Camera	Active	1C:C3:16:20:00:EF	192.158.7.100	80	255,255,240.0	192.158.7 1	MS-C2862-FPB	2019-03-06 09:34:45	41.7.0.67-r14	
•	63	Network Camera	Active	1C.C3.16.21.EC.5A	192.168.7.105	80	255,255,240.0	192,168.7.1	MS-C2972-FPB	2019-03-07 09:16:00	40.7.0.68-r3	1
	64	MS-C2964-FPB	Active	1C:C3:16:24:09:D2	192.168.7.110	80	255.255.240.0	192.168.7.1	MS-C2964-FPB	2019-03-11 09:34:42	40.7.0.69-12	3
C	65	Network Camera	Active	1C.C3:16:24:5F.53	192.168.7.113	80	255.255.240.0	192.168.7.1	MS-C2975-EPB	2019-03-11 15:35:34	40.7.0.68-r7	
r	66	MS-C3772-FIPB	Active	1C-C3-16:21 FA-67	192.168.7.128	80	255.255.255.0	192.168.7.2	MS-C3772-FIPB	2019-03-07 10:14:25	41.7.0.69-r2	
C.	67	Network Camera	Active	1C:C3:16:19:00:5E	192.158.7.129	BO	255,255,240.0	192.168.7.2	MS-C5364-PE	2019-03-11 09:14:09	41.7 D.67-a4	
r	68	Network Camera	Active	10:03:16:11:02:40	192.168.7 190	80	255 255 255 0	192,158,7,1	NG3253-PNA	2019-01-10 11.07:21 2019-02-27	30 7.1.53-r20	
		🕤 Sams T	Start IF 🌘	192 168 7 100	9 th (80		tmasir <b>255 255</b> .	240.0	itiewa/ 192.168 1	(1) DNS	8.8.8.8	2
								(	🕑 Activato 👌	Export Device L	iei 🛪 Mos	
operat	ng niçi	macon										

**Step4:** If the selected camera shows "Active" in the status bar, you can directly type the User Name and Password (Camera with version lower than 4x.7.0.69 is using admin/ms1234 by default), change the IP address or other network values, and then click "Modify" button;

	No.	Device Name	Status	MAC	P A	Port	Netmask	Gateway	Model	Run-up Time	Version	Ē
r	58	Network Camera	Active	1C:C3 16:24 60:F6	192.168.7.80	80	255.255.240.0	192.168.7.1	MS-C2975-PB	2019-03-11	40.7.0.67-r6	1
c	59	Network Camera	Active	1C.C3.16:22.0C.74	192.168.7.81	80	255.255.240.0	192.168.7.1	MS-C8262-FPB	2019-03-11 13:49:07	43.7.0.68	1
r	60	Network Camera	Active	1C:C3:16:23:C8:4D	192.168.7.86	80	255.255.240.0	192 168 8 2	MS-C5362-EPB	2019-03-08	41.7.0.67-r1	1
r	61	MS-C2975-P8	Active	1C:C3:16:24:60:DE	192.168 7.93	80	255 255 240 0	192 168 7.1	MS-C2975-PB	2019-03-11 16:38:03	40.7.0.69	1
•	62	Network Camera	Active	1C:C3:16:20:00 EF	192.168.7.100	80	255.255.240.0	192,168,7,1	MS-C2862-FPB	2019-03-06 09:34 45	41.7.0.67-r14	1
n	63	Network Camera	Active	1C:C3:16:21:EC:54	192.168.7.105	80	255 255 240.0	192.168.7.1	MS-C2972-FPB	2019-03-07 09:16:00	40.7 0.68-r3	
r	64	MS-C2964-FPB	Active	1C.C3.16:24:09.D2	192,168.7.110	80	255 255 240.0	192.168.7.1	MS-C2964-FPB	2019-03-11 09:34:42	40.7.0.69-12	
r	65	Network Camera	Active	1C:C3 16:24.5F:53	192.168.7.113	80	255.255.240.0	192.168.7.1	MS-C2975-EPB	2019-03-11 15:35:33	40.7.0.68-7	1
r	66	MS-C3772-FIPB	Active	1C.C3.16.21.FA.67	192.168.7.128	80	255.255.255.0	192.168.7.2	MS-C3772-FIPB	2019-03-07	41.7.0.69-12	Ì
r i	67	Network Camera	Active	1C:C3:16:19:00:6E	192.168.7.129	80	255.255.240.0	192.168.7.2	M8-C5364-PB	2019-03-11	41.7.0.67-a4	1
r	63	Network Camera	Active	10:03 15:11:02:40	192,168 7,190	80	255 255 255 0	192.168.7.1	NC3263-PNA	2019-01-10 11:07:21 2019-02-27	30.7 1.63-r20	in the second
1/354		Device Name. (letwo	k Carner	a IP <b>1</b> 92.168.7 .	100 Pot 80	2	Neimask. (25	5.255 240.0	Gateway, 1921	251/10/00/00	8 8 8 8	
								9	🕖 Artivate 👌	) Бярап Цемсе Ц	st 🔀)1/0	цц,
- hera	anginia	maten										

If the selected camera shows "Inactive" in the status bar (Camera with version V4x.7.0.69 or above), click Activate to set the password when using it for the first time. You can also set the security questions when activating the camera in case that you forget the password(You can reset the password by answering three security questions correctly). Click 'Save' and it will show that the activation was successful.

#### **Note:**

- Password must be 8 to 32 characters long, contain at least one number and one letter.
- You need to upgrade Smart Tools version to V2.4.0.1 or above to activate the camera.

		() ()		- 🕢	- 9		adr	4 —
		Network			Opgrade		A (70	ssword Irch here
	No. Device Name S	atus MAC-	P 🔺	Port Nelmask	Galeway	Model	Run-up Time	Version
	59 Network Camera Ina	idive 10:03:16:24:09:D2	192,168,5,190	80 255.255.255.0	192.168.5.1	MS-C2964-FPB	2018-12-19 17:48:04	40.7.0.65-pv a6
	C C Holing Comment	Activation	400 470 7 74	on per ore avaia	100 168.7.1 ×	MS-C3762-FIPB	2018-12-21 17:43:15	41.7.0.65-pv a6
IFC Tools		PERMIT			168.5.1	MS-C4472-FIPB	2018-12-24 15:00:51	41.7.0.68-8
					168.7.1	M9-02975-PB	2018-12-24 17:02:43	40.7.0.68
	3				168,7,1	MS-C5362-EPB	2018-12-18 16:10:37	41.7.0.65-pn a6
	3				168.2.1	MS-C2862-FPB	2018-12-21 16:44:30	41.7.0.68-8
	User Name: admin			8	168.5.1	MS-C2963-PB	2018-12-18 13:38:35	40.7.0.67-r
	Password:				168.7.1	MS-C2972-FPB	2018-12-20 13:27:14	40.7.0.67-6
	Confirm:				168.7.1	MS-C5372-FIPB	2018-12-18	41.7 0.67-p dome-a6
$\smile$		r father's name?			168.7.2	MS-C3772-FIPB	2018-06-15	41.7.0.65-1
NVR Tools	Security Answer 1:	r lather's harner			168.7.1	M9-C4462-PB	2018-12-20	41.7.0.65-pv
		ir fathar's nama?					10.70.0100	-
	Security Answer 2:				255.0	Gateway 192.1	68.5.1	
		r father's name?		*		🕄 Activate 上	) Export Device I	
	Security Answer 3:			8		grante -	/	
(+)						2		
$\sim$								
Calculators					_			
				(4) 📀	Save		😐)s.	ve 🙁) Cli
1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1				V2.4.0 3-#8				

After activation, you can change the IP address or other network values, and then click "Modify" button.

	10040000		0000000000	1 ////	1///15					A CONTRACTOR OF CONTRACTOR		
2	No.	Device Name	Status	MAC	IP 🔺	Port	Netmask	Gateway	Model	Run-up Time 2019-09-24	Version	
6	58	Network Camera	Active	1C.C3.16.90.81.5E	192.108.7.92	80	255.255.240.0	192.168.7.1	NC9674-PB	17:36:18	43.7.1.72	6
6	59	Network Camera	Active	1C:C3 16:20:00:EF	192.168.7.100	80	255.255.240.0	192.168.7.1	MS-C2862-FPB	2019-09-23 14:06:52	41.7.0.72-35	0
r.	50	Network Camera	Active	1C:C3:16:21:00:22	192.168.7.104	80	255.255.240.0	192.168.7.1	MS-C2962-FIPB	2019-09-02 03.22.14	40.7.0.69-r11	0
	61	Network Camera	Active	1C:C3:16:24:09:	192.168.7.114	80	255.255.240.0	192,168 7.1	MS-C2964-FPB	2019-09-30 08:55.39	40.7.0.72	0
4	62	Network Camera	Active	10:03:16:23:01:39	192 168 7 124	80	255.255.240.0	192.168.9.2	MS-C2962-FPB	2019-09-26	41.7.0.71-r35	6
	63	IPCAM	Active	1C:C3 16:21:FA:67	192.168.7.132	80	255,255,255.0	192.168.5.1	MS-C3772-FIPB	2019-09-27	41.7.0.71-r15	C
Ē.	64	Network Camera	Active	1C.C3.16.24.66.A1	192.168.7.161	80	255.255.240.0	192.168.5.1	MS-C2962-FPB	2019-09-26	40.7.0.71-r8	C
51	55	Network Camera	Active	1C:C3-16:22 19:5F	192 168.7.201	80	255 255 240.0	192.168.7.1	MS-C9674-PB	2019-09-17 11.20.43	43.7.0.72-fsh- autotrack-a2	d
1	66	Network Camera	Active	1C:C3:16:22:01:0B	192 168 7 202	4200	255,255,240.0	192.168.7.2	MS-C9674-PB	2019-07-31	42.7.0.67-r1	C
10	67	202大会设室1	Active	1C:C3.16.21.01.10	192.168.7.212	80	255.255.240.0	192.168.7.1	MS-C2972-FPB	2019-09-25	40.7.0.71-r15	0
÷	RQ	20.2本-4-20元2	Action	10:02 16 21 22	102 169 7 214	en	255,255,240,0	102 169 7 1	MS C2072 88	2019-09-26	407071416	0
17:86	27	Jevice Namer (etwor	k Comar	192 168 7	114 Por 8	0	Netmask- 25	955 940 0	Cateway 1921	68 7 1 UN	8888	_
			i come	102 100.1			Contraction and					
								L.	) Activates 📥	Explort Device Li	et 🗶 Mar	
1		9-09-30 09:10:53		1	1C:C3:16:24:09:D2	21 Modi	fy IP:192.168.7.11	3-> 192,168,7,1	14 successfully,			

Step6: By double clicking the selected camera or the browser of interested camera, you can access the camera via web browser directly. The Internet Explorer window will pop up.



More usage of Smart Tools, please refer to the *Smart Tools User Manual*.

## 4.1.2 Assign An IP Address via Browser

If the network segment of the computer and that of the camera are different, please follow the steps to change the IP address:

**Step1:** Change the IP address of computer to 192.168.5.0 segment, here are two ways as below:

a. Start $\rightarrow$ Control Panel $\rightarrow$ Network and Internet Connection $\rightarrow$ Network Connection $\rightarrow$ Local Area Connection, and double click it;

Internet Protocol Version 4 (TCP/IPv4) I	Properties	? X								
General										
You can get IP settings assigned autor this capability. Otherwise, you need to for the appropriate IP settings.										
Obtain an IP address automatically										
• Use the following IP address:										
IP address:	192.168.1.10									
Subnet mask:	255.255.255.0									
Default gateway:	192.168.1.1									
<ul> <li>Obtain DNS server address autom</li> <li>Obtain DNS server address autom</li> </ul>										
Preferred DNS server:	192.168.1.1									
Alternate DNS server:										
Validate settings upon exit	Adva	nced								
	ОК	Cancel								

b. Click "Advanced", and then click "IP settings"# "IP address"# "Add". In the pop-up window, enter an IP address that in the same segment with Milesight network cameras (e.g. 192.168.5.61, but please note that this IP address shall not conflict with the IP address on the existing network);

ettings DNS W	INS
P addresses	
IP address	Subnet mask
192.168.1.10	255.255.255.0
	Add Edit Remov
Default gateways:	
Gateway	Metric
192.168.1.1	Automatic
Automatic metric	
	ОК
	СК
Interface metric:	
Interface metric:	
Interface metric:	192 . 168 . 5 . 61

**Step2:** Start the browser. In the address bar, enter the default IP address of the camera: <u>http://192.168.5.190;</u>

Step3: If the camera's firmware version is lower than V4x.7.0.69, it will directly display the login

page, enter the user name and password when the LOGIN page appears;

- Default user name: admin
- Default password: ms1234

Language: English *
Cogin
Download Popin for Network Carriera Copyright © Milesight All rights reserved.

If the camera's firmware version is V4x.7.0.69 or above, you need to set the password first when using it for the first time. And you can also set three security questions for your device after activation. Then, you can log in the device with You can log in to the camera with the username(admin) and a custom password.

#### **Note:**

- Password must be 8 to 32 characters long, contain at least one number and one letter.
- You can click the "forget password" in login page to reset the password by answering three security questions when you forget the password, if you set the security questions in advance.

**Step4:** After login, please select "Configuration"  $\rightarrow$  "Basic Settings"  $\rightarrow$  "Network"  $\rightarrow$  "TCP/IP". The Network Settings page appears (Shown as below Figure);

Step5: Change the IP address or other network values. Then click "Save" button;

Step6: The change of default IP address is completed.

## 4.2 Accessing from the Web Browser

The camera can be used with the most standard operating systems and browsers. The recommended browsers are Internet Explorer, Firefox, Chrome, Microsoft Edge, Safari.

## 4.2.1 Access with Plugin

Currently you can only access the camera with plugin via Internet Explorer.

#### Access over IE Browser

Before using the browser to get access to your camera, you need to install the MsActiveX firstly. You can refer the steps as follows:

Step1: Launch the IE browser and enter the IP address of the camera;

Step2: Enter the User Name and Password and click "Login";

**Step3:** At the first time to log in the device, the browser will prompt to install Controls, please click "Click here to download and install controls manually" as shown in the figure below;

Click here to download and install controls manually

**Note:** During installing the controls, please keep the browsers close.

**Step4:** Follow the prompts to install the Controls, when it's finished, it will pop out a window as shown in the figure below. Please click "Finish" and refresh the browser, then you will see the video.

If IE9 or higher version browser is used, it is suggested that the Milesight network cameras web link should be added as a trusted site. See the instructions as follows:

Step1: Start the IE9 or higher version browser, and select "Tools"→"Internet Options";

ile Edit View Favorites	Tools Help		
	Delete browsing history InPrivate Browsing Tracking Protection ActiveX Filtering Diagnose connection problems Reopen last browsing session Add site to Start menu	Ctrl+Shift+Del Ctrl+Shift+P	
	View downloads Pop-up Blocker SmartScreen Filter Manage add-ons	Ctrl+J ,	
	Compatibility View Compatibility View settings		
	Subscribe to this feed Feed discovery Windows Update	ĸ	
	F12 developer tools		
	Send to Bluetooth Device		


Step2: Select "Security" to "Trusted";

Select a zone to	view or change	ecurity setting.	
Internet	Local intranet	Viusted altes	lestricted sites
This zou trust no your file	ed sites ne contains websi of to damage you es. ve websites in thi	r computer or	Sites
Security level f	or this zone		
Allowed level	s for this zone: A		
	Minimal safeguar Most content is o All active conten Appropriate for s	lownloaded and r t can run ites that you abs	rompts are provided un without prompts solutely trust g Internet Explorer)
		Custom level	Default level

Falar	t a zone to view or change securit				1
Selec		Trusted sites			
1	nternet Local intranet Truste		u can add and remove website s zone wil use the zone's secur		ebsites in
	Trusted sites This zone contains websites the				
	trust not to damage your com your files.		baite to the zone:		Add
	You have websites in this zone				
1.2.2	curity level for this zone Nawed levels for this zone: All - Medium - Prompts before downl content	about bler http://*.al	ipay.com lisoft.com	* Re	move
-	- Unsigned ActiveX cont	rols will not be	1 1PA P 191		
1			server verification (https:) for	all sites in this zone	
	Enable Protected Mode (require Custo	es restarting Di om level		2	lose
		Reset al zones to default level		_	

Step3: Enter the IP address of the camera in the blank and click "Add";

**Step4:** Enter the IP address. After logging on network camera's web GUI successfully, user is allowed to view live video as follows.

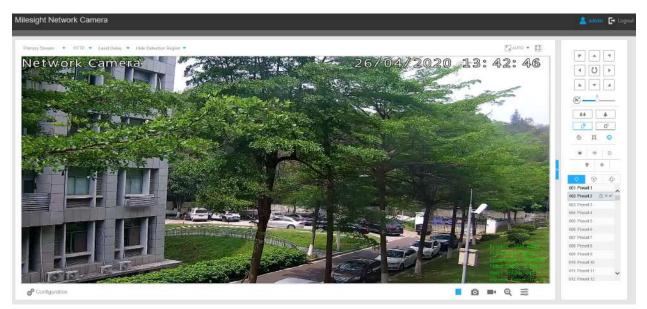

#### 4.2.2 Access without Plugin


As browser security becomes more and more important, some browsers don't support installing plugin. In order to normally preview the video on the browser, The camera was upgraded to support Plugin-Free Mode. In Plugin-Free Mode, you can preview the video on the browser without plugin. Currently Plugin-Free Mode is supported in Firefox & Google Chrome & Safari & Edge browser for

Windows system, MAC system, iOS system and Android system. Both H.265&H.264 video codec are supported in Plugin-Free Mode for camera, and it will play the secondary stream by default.

Note:

- You need to upgrade camera to V4x.7.0.70 or above to use Plugin-Free Mode.
- For the firmware which below V4x.7.0.74, please upgrade the Network Camera to V4x.7.0.74 or above (Please upgrade the browser to the latest version).
- For V4x.7.0.74 or above, you can enjoy Plugin-Free Mode without any configuration about the browser (Please upgrade the browser to the latest version).

You can preview the video without plugin by selecting Plugin-Free Mode in Live View interface.

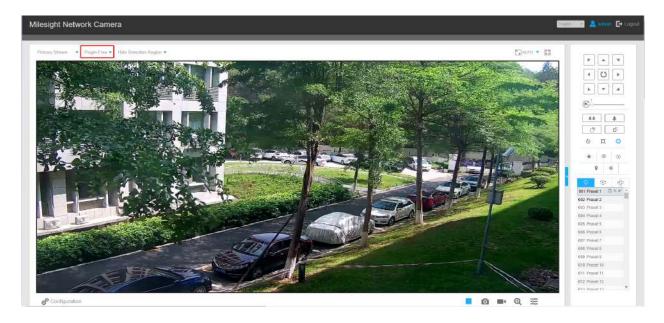


It supports previewing the video in Live View and other setting interfaces.

# 4.3 Accessing from Milesight VMS (Video Management Software)

Milesight VMS(ONVIF compatible) is a handy and reliable application designed to work with network cameras in order to provide video surveillance, recording settings and event management functions. The interface of Milesight VMS is very easy to use, intuitive, with easy access to the most common activities, such as viewing live video, searching through recordings and exporting videos and snapshots. It's able to be integrated with other devices through ONVIF. It is designed to work on

Windows XP/ 7/ 8/ Vista/ Server 2000/ Server 2008. The software could be downloaded from our website <u>www.milesight.com</u>.


Please install Milesight VMS; then launch the program to add the camera to the channel list. For detailed information about how to use the software, please refer to user manual of Milesight VMS.

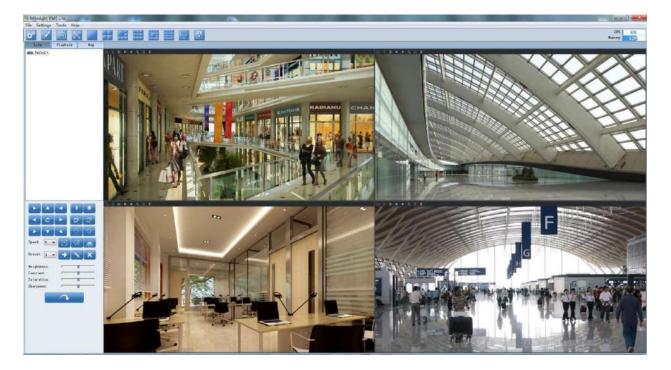

# Chapter 5. System Operation Guide

# 5.1 Live Video

After logging in the network camera web GUI successfully, user is allowed to view live video as follows.

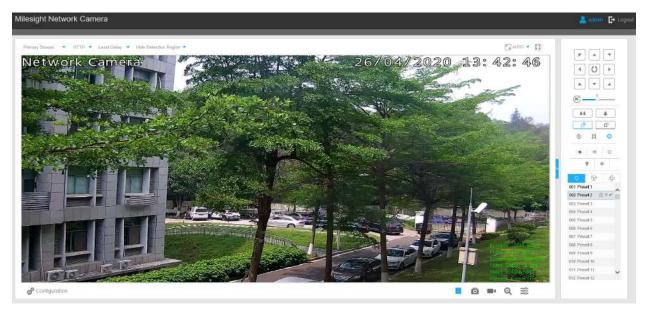

## 5.1.1 Operations on Live View Page

#### **Table 1. Description of the buttons**

No.	Parameter	Description
1	PTZ Control	Navigation key is used to control the direction. The rotation key is used for auto-rotation.

No.	Parameter	Description
1	PTZ Speed	To adjust the speed of pan/tilt movements, from 1 to 10
2	<b>*</b>	Click to zoom in and zoom out
3		Click to focus near or far of the lens
4	٥ [ت] ٥	Lens Initialization, Auxiliary Focus and Auto Iris
		Lighting For 30s: Click to open/ close the White LED for lighting 30s.
		<b>3D Positioning:</b> Click to enable/ disable 3D positioning.
5	·•• 🐵 🛈	One-touch Patrol: Click to carry out the patrol.
	<b>♀</b> ●	Auto Home: Click to enable Auto Home.
		Manual Tracking: Click to track the moving objects.
		Brightness: Adjust the Brightness of the scene
	Image Config	Contrast: Adjust the color and light contrast
-	50 50 0 50 50	<b>Saturation</b> : Adjust the Saturation of the image. Higher Saturation makes colors appear more "pure" while lower one appears more "wash-out"
))î		<b>Sharpness</b> : Adjust the Sharpness of image. Higher Sharpness sharps the pixel boundary and makes the image looks "more clear"
	Image Config	3D DNR: Adjust the noise reduction level
		Default: Restore brightness, contrast and saturation to default settings
6	o <sup>o</sup> Configuration	Click to access the configuration page
7	Primary Stream 🔻	Choose the Stream ( <b>Primary/Secondary/Tertiary</b> )to show on the current video window

No.	Parameter	Description
8	Web Components <b>v</b>	Only available for camera whose software version is 43 or above <b>Web Components</b> : Support Firefox, Safari, Chrome (Chrome version 44 or below); need to install the component to display the view; <b>MJPEG</b> : Support to display the view on Firefox, Safari, Chrome (Chrome version 45 or above); <b>Note:</b> IE choose Web Components mode for default, in this case, it will not show the options
9	UDP 🔻	<ul> <li>TCP: More reliable connection;</li> <li>UDP: More instantaneous connection, but if you cannot get the live view successfully, please turn into TCP connection;</li> <li>HTTP: Faster and safer connection especially in Internet environment.</li> </ul>
10	Balanced	Least Delay: The most instantaneous mode; Balanced: A balanced mode between Least Delay and Best Fluency, maintains the fluency while keeps an acceptable delay; Best Fluency: The most fluent mode;
11	لاّ AUTO Window size	Click to display images at a window size
12	لاً 🖉 100% Real size	Click to display images at a real size
13	Full Screen	Click to display images at full-screen
14	Recording	When recording, the icon will turn red
15	Alarm	When an alarm of Smart Event was triggered, the icon appears

No.	Parameter	Description
16	<del>्र्द्र</del> Alarm	When an alarm of Motion Detection was triggered, the icon appears
17	<mark>☆</mark> Alarm	Except for the two kinds of alarms above, when other alarms were triggered, the icon appears
18	▶,■	Start/Stop live view
19	Capture	Click to capture the current image and save to the configured path. The default path is: C:VMS\+-1\ IMAGE-MANUAL
20	Start Recording	Click to start recording video and save to the configured path. The default path is C:VMS\+-1\MS_Record. Click again to stop recording
21	<b>u</b> ∰≫ Play Audio	Enable Audio Input/Output. It can also be set in Audio configuration page
22	Saving Path Settings	Set the saving path for captured images and video recordings of operating on the live view
23	<b>Enable Digital Zoom</b>	When enabled, you can zoom in in a specific area of video image with your mouse wheel
24	Left Start Talking	When it is enabled, you can start real-time talking
25	English 🔻	Click to select system language.

## 5.1.2 3D Positioning

3D Positioning allows user to use mouse clicking and dragging to control the PTZ.

Steps:

1. Click on the toolbar of Live View interface.

- 2. Operate the 3D positioning function
  - Left click a position of the Live View, the corresponding position will be moved to the center of the Live View.
  - Hold down the left mouse button and drag the mouse to the lower right or upper right on the Live View, you can see a blue rectangle. The corresponding position will be moved to the center of the Live View and Zoom in.
  - Hold down the left mouse button and drag the mouse to the lower left or upper left on the Live View, you can see a blue rectangle. The corresponding position will be moved to the center of the Live View and Zoom out.
  - The Bigger the rectangle is, the smaller zoom in/out will be acted.


#### 5.1.3 Set / Call a Preset / Patrol / Pattern

A preset is a predefined image position. You can click the call button from the preset list to quickly go to the desired image position.

#### Set a preset:

Step1: In the PTZ control panel, select a preset number from the preset list, and you can also customize the preset name displayed on the screen. The patrol name displayed on the screen will also be customized if you customize preset name and set a patrol as shown below;

ς	2	$\odot$	Ę	Þ
001	road	F	3 × #	
002	1			
003	2			
004	3			
005	Prese	t 5		
006	Prese	t 6		
007	Prese	t 7		
800	Prese	t 8		
009	Prese	t 9		
010	Prese	t 10		
011	Prese	t 11		
012	Prese	t 12		~

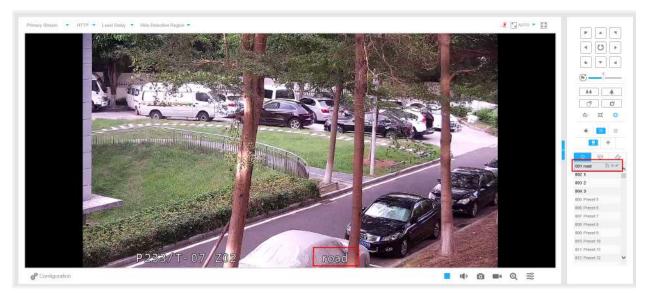





Step2: Use the PTZ control buttons to move the lens to the interested position;


Step3: Click 🔳 to save the setting of the current preset;

Step4: Click  $\times$  to delete the chosen preset.

**Note:** Up to 300 presets can be configured (18 presets are not modifiable).

#### Calling a preset:


Select a defined preset form the preset list and click 🖉 to call the preset.

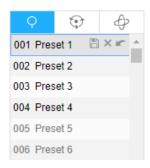

**Note:** The following presets are predefined with special commands. You can only call them but can't configure them. For example, preset 037 is the "Self Check". If you call the preset number 037, the PTZ camera will start self check function at once.

Special Preset	Function	Special Preset	Function
33	Auto Flip(Speed Dome only)	42	Path6
34	Goto Zero	43	Path7
35	Self Check	44	Path8
36	Patrol	45	Pattern1
37	Path1	46	Pattern2
38	Path2	47	Pattern3
39	Path3	48	Pattern4
40	Path4	49	Stop Scan
41	Path5	50	Auto Scan

#### **Table 2. Special Presets**

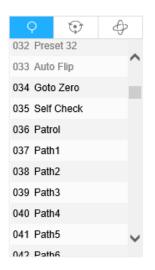

#### Set / Call a patrol

A patrol is a memorized series of preset function. It can be configured and called on the patrol setting list. You can customize up to 8 patrols and it can be configured with 48 presets. Before configuring the patrol, you should make sure that the presets you want to add to the patrol have been defined.

#### Set a patrol:

Step1: In the PTZ control panel, click 🔯 to enter the patrol settings interface;

Step2: Select a patrol number, the setting icon will appear \*, click it;

Step3: Click + to add presets to this patrol, as shown in Figure;

Q	Ŷ	Ð
Path 1	+ ×	+ +
Preset	Speed	Time(s)
01 1	30	▼ 15
Save		Cancel

Step4: Configure the preset number, patrol speed and patrol time;

#### **Table 3. Description of Patrol Settings**

Name	Description
Patrol Speed	The speed of moving from one preset to another.
Patrol Time	The duration staying on one patrol point. The PTZ camera moves to another patrol point after the set patrol time.


Step5: Click Save to save the patrol settings.

### **\_** Note:

- Patrol Speed only works in Patrol mode.
- Patrol Time should be 15~120s for Mini PTZ Bullet and 0~120s for Speed Dome.

#### Call a patrol:

In the PTZ control panel, select a defined patrol from the patrol list, and click  $\triangleright$  to call the patrol, as shown below.

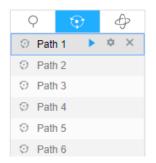

**Note:** The three buttons behind the Patrol list means: Play, Set and Delete.

#### Set / Call a pattern

A pattern is a memorized series of pan, tilt, zoom and preset functions. It can be called on the pattern settings interface. There are up to 4 patterns can be set.

#### Set a pattern:

Step1: In the PTZ control panel, click  $\Leftrightarrow$  to enter the pattern settings interface;

Step2: Select a pattern number from the pattern list as shown in the figure below;

Q	Ţ	Þ
Patt	ern 1	۲
Patt	em 2	
🖗 Patt	ern 3	
Patt	ern 4	

Step3: Click store to activate recording the panning, tilting and zooming actions;


Step4: Use the PTZ controller buttons to move the lens to the interested position;

Step5: Click • to save all the pattern settings.

**Note:** The percentage of number on the OSD is the remaining space of pattern. Start with 100% and run out of 0%.

#### Call a pattern:

In the PTZ control panel, select a defined pattern from the pattern list, click  $\triangleright$  to call the pattern, as shown in the figure below.

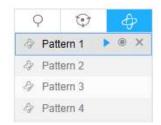

#### **Note:**


The three button behind the Pattern list means: Play, Record and Delete.

When configuring the pattern, pan and tilt are valid but the limit stops and auto flip will be invalid. Also, 3D Positioning operation is not supported.

# 5.2 Playback

This section explains how to view the recorded video files stored in SD cards or NAS.

Step1:Click **Playback** on the menu bar to enter playback interface;

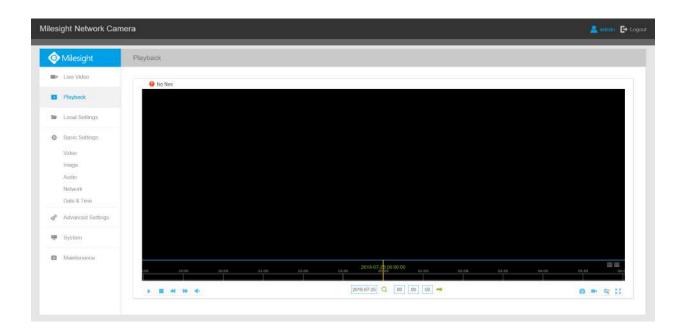

Step2: Click the date button, choose the date when date window pops up;

•		Apr		2020	)	• •
Sun	Mon	Tue	Wed	Thu	Fri	Sat
29	30	31	1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30	1	2
3	4	5	6	7	8	9
				Toda	ay	ок
2020	-04-2	8	ג [	00	00	0

#### **Note:**

- The date with bright red means current date; one with a dark red number and white background means weekend day; one with a dark red number and blue background means that the date is selected now.
- It supports Plugin-free Playback function which allows to preview the playback without installing plugin in Firefox (Version 65 and above) & Google Chrome (Version 69 and above). You need to configure the browser properties before using this function. Please refer to for more browser configuration.

Step3: Click **b** to play the video files found on this date.

The toolbar on the button of playback interface can be used to control playing progress.

04:00					17-05-23 09:43:45			13:00 13:00
	() <b>()</b> (4)	20	17-05-23 Q 00	00 00 🖚				

### Table 4. Description of the buttons

Button	Operation
	Play
	Pause
	Stop
*	Speed Down
	Speed Up
	Audio On/Off
Q	Search
	Go To
	Time Narrow/Expand
	Start/Stop Recording
	Snapshot
	Zoom On/Off
$\otimes$	Full Screen

## **Note:**

Drag the progress bar with the mouse to locate the exact playback point. You can also input the



# 5.3 Local Settings

Record File Length and storage path can be customized in this setting page.

Milesight Network C	amera			💄 ontrin 🛛 🕒 Logenst
📀 Milesight	Local Settings			
■+ Live Video				
Pinyback		Live View Settings		
a Physics.		Record File Length	[30 minufes 🗸	
Local Settings		Record File Path	C. WVMS1+-1MS_Becont. Revue: Open	
		Preview Picture Path.	C.WVMSW-TUMAGE-MANIL Browset Open	
Besic Settings		Playback Settings		
Video		Playback Record File Path.	C.WMSH-WEbybackMS Rowce Open	
lmage .		Playback Picture Path:	C.WWRST+T/PhybackYMAI Browse Open	
Audio			the second se	
Network			Site	
Elato & Timo				
d <sup>B</sup> Advanced Settings				
🖷 System				
Maintenance				

# 5.4 Basic Settings

# 5.4.1 Video

Stream parameters can be set in this module, adapting to different network environments and demands.

#### **Primary Stream Settings**

Record Stream Type (General)

Primary Stream	Secondary Stream	Tertiary Stream			
			Record Stream Type :	General	~
			Video Codec :	H.264	~
			Frame Size	1080P(1920*1088)	~
			Maximum Frame Rate :	25	❤ tps
			Bit Rate :	4095	V kops
			Smart Stream	On	✓
			Level		-
			Bit Rate Control	CBR	Y
			Profile I	Main	~
			I-frame Interval :	50	frame (1-120)

# Record Stream Type (Event)

Primary Stream	Secondary Stream	Tertiary Stream			
			Record Stream Type	Event	~
			Enable Event Stream :	<b>⊠</b>	
			Video Codec :	H 264	Y
			Frame Size :	1080P(1920*1080)	
			Maximum Frame Rate	25	✓ fps
			Bit Rate (	4096	₩ kbps
			Smart Stream :	Off	0
			Bit Rate Control	CBR	~
			Profile :	Main	~
			i-frame interval	50	frame (1-120)

## **Secondary Stream Settings**

mary Stream Secondary Stream Tertiary Stream				
	Enable	2		
	Video Godec	H 265	v]	
	Frame Stee	640*480	~	
	Maximum Frame Hate:	25	✓ tps	
	B# Rate:	512	₩ ktups	
	Smart Stream.	On	~	
	Level:			
	Bit Rate Control:	QBII	~	
	Profile:	Main.	~	
	1-trame interval	50	trame(1-120)	

**Tertiary Stream Settings** 

Enable:	2
Video Codec:	(H.264 V)
Freme Size	[540°400 👻]
Maximum Frame Rate.	[25 V] tbs
Bit Rate	1024 V Mps
Smart Stream	On 👻
Levet	
Bit Rate Control:	CER. 👻
Profile:	Main
I-trame Interval	50 (tame(1-120)

٦

# Table 5. Description of the buttons

Parameters	Function Introduction
	<b>General &amp; Event</b> are available only for <b>Primary Stream</b> . <b>General</b> refers to continuous record video, while <b>Event</b> includes events that can trigger alarms, such as Motion, Exception, LPR and so on.
Record Stream Type	This item can separately set different bit rate and frame rate for different Recording Stream Types. If user chooses <b>Event</b> , video will be recorded according to the configuration of video stream type when an event happens, thereby greatly reducing the recording storage space.
Enable Event Stream	This item is optional only if you selected the <b>Event</b> .
Video Codec	H.265/H.264/MJPEG are available
	Options include 5M(2592*1944)(only for 5MP Mini PTZ Bullet and 5MP Speed Dome), 4M(2592*1520)(only for 5MP Mini PTZ Bullet and 5MP Speed Dome), 3M(2304*1296), 1080P(1920*1080), 1.3M(1280*960), 720P(1280*720), D1 (704*576).
Frame Size	For <b>Secondary Stream</b> , it includes 704*576, 640*480, 640*360, 352*288, 320*240, 320*192, 320*176.
	For <b>Tertiary Stream</b> , it include 1920*1080, 1280*720, 704*576, 640*480, 640*360, 352*288, 320*240, 320*192, 320*176.
Maximum Frame Rate	Maximum refresh frame rate of per second
Bit Rate	Set the bitrate to 32~16384 Kbps. The higher value corresponds to the higher video quality, and the higher bandwidth is required as well.


Parameters	Function Introduction
Smart Stream	Smart Stream mode remarkably reduces the bandwidth and the data storage requirements for network cameras while ensuring the high quality of images, and it is a 10-level adjustable codec. It is optional to turn On/Off Smart Stream mode. Level: Level 1~10 are available to meet your need.
Bit Rate Control	CBR: Constant Bitrate. The rate of CBR output is constant
	VBR: Variable Bitrate. VBR files vary the amount of output data per time segment
Image Quality	Low/Medium/High are available, this item is optional only if you select VBR.
Profile	The option is for H.264, Main/High/Base can be selected according to your needs.
I-frame Interval	Set the I-frame interval to 1~120, 50 for the default. The number must be a multiple of the number of frames.
JPEG Quality	Low/Medium/High/Higher are available, this item is optional only if you selected the MJPEG

**Note:** The options of **Frame Size** are variable according to the model selected.

# 5.4.2 Image

Display information, enhancement of image and Day/Night setting can be set in this module. OSD (On Screen Display) content and video time can be displayed to rich the image information.

# Display

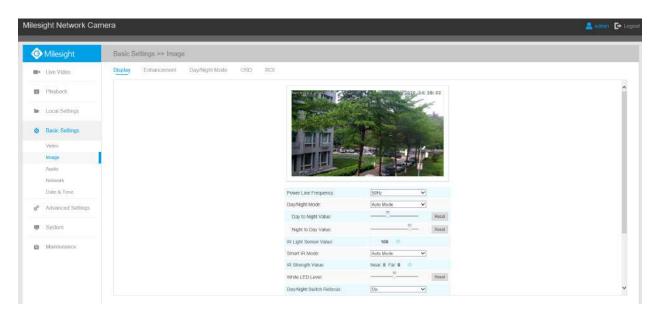

٦

## Table 6. Description of the buttons

Г

Parameters	Function Introduction
Power Line Frequency	60Hz flicker for 30fps camera model and 50Hz flicker for 25fps camera model
Day/Night Mode	<ul> <li>There are several parameters such as Exposure Level, Maximum Exposure Time and IR-CUT Interval, etc, associated with this mode</li> <li>Night Mode: Shown in live view based on Night Mode settings</li> <li>Day Mode: Shown in live view based on Day Mode settings</li> <li>Auto Mode: Shown in live view based on environment, set the sensitivity for switching Day Mode to Night Mode, or Night Mode to Day Mode</li> <li>Customize: Shown in live view based on your own settings' time to start/end Night Mode</li> </ul>
Day To Night Value	This is the sensitivity for switching <b>Day Mode</b> to <b>Night Mode</b> . When IR Light Sensor Current Value is lower than this value, it will switch Day Mode to Night Mode
Night To Day Value	This is the sensitivity for switching <b>Night Mode</b> to <b>Day Mode</b> . When IR Light Sensor Current Value is higher than this value, it will switch Night Mode to Day Mode
IR Light Sensor Value	The current value of the IR light sensor

Parameters	Function Introduction					
Smart IR Mode	<ul> <li>With the combination of the High Beam and Low Beam, The IR LEDs technology has been upgraded to provide better image clarity and quality regardless of the object distance. Also, the Low Beam and High Beam's brightness can be adjusted manually or automatically on the basis of the Zoom ratio. Moreover, with the IR antireflection panel, the infrared light transmittance is highly increased.</li> <li>Support to set the strength of the IR to Auto Mode or Customize to achieve the best effect.</li> <li>Speed Dome has 8 LED lights, 4 are High Beams and 4 are Low Beams.</li> <li>And Mini PTZ Bullet has 4 LED lights, 2 are High Beams and 2 are Low Beams.</li> </ul>					
Near view level	Adjust the light strength of Low-Beams LED light level from 0 to 100.					
Far view level	Adjust the light strength of High-Beams LED light level from 0 to 100.					
IR Strength Value	The current value of Low-Beams LED and High-Beams LED light value					
Day/Night Switch Refocus	With this option enabled, the camera will refocus when switching between day mo and night mode.					
Outdoor/Indoor Mode	Select indoor or outdoor mode to meet your needs					
Corridor Mode	There are three options available, you can select one to meet your need Off: Keep the image in normal direction Clockwise 90°: Rotate the image by 90° clockwise Anticlockwise90°: Rotate the image by 90° anticlockwise					
Image Rotation	There are four options available, you can select one to meet your need Off: Keep the image in normal direction Rotating 180°: Upside down the image Flip Horizontal: Flip the image horizontally Flip vertical: Flip the image vertically					

**Note:** The PTZ Network Camera which with optical zoom of 20X or above supports Zoom Limit function. Take the 20X Mini PTZ Dome camera as an example:

Power Line Frequency:       S0Hz         Day/Hight Mode:       Auto Mode         Day to Night Value:       30         Day to Night Value:       60         Night To Day Value:       00         R Light Sensor Value:       100         R Strength Value:       00         Brister II R Mode:       Auto Mode         R Strength Value:       00         Outdoor/Indoor Mode       On         Outdoor/Indoor Mode       Outdoor         Outdoor/Indoor Mode       Outdoor         Outdoor/Indoor Mode       Outdoor         Image Rotation:       Off	play	Enhancement	Day/Night Mode	OSD ROI					
Day/Night Mode:     Auto Mode       Day to Night Value:     Meant       Night lo Day Value:     Reant       Right Bensor Value:     100 °       Right Sensor Value:     Meant       Smart IR Mode     Auto Mode       R Strength Value:     Near © Far: 0 °       Day/Night Switch Relocus     On       Outdoor/Indoor Mode     Outdoor       Corridor Mode     Off       Image Rotation:     Diff						Smirt Strin Ourrent Os	nni Ariaetican		
Day to Night Value:     35     Reset       Night Io Day Value:     48     Reset       IR Light Sensor Value:     100 0     Reset       Right Robot     Auto Mode     1       Smart IR Mode     Mean of Fair 0     1       Right Sensor Value:     Near of Fair 0     0       Right Sensor Value:     Near of Fair 0     0       Day/Night Switch Relocus     On     0       Outdoor/Indoor Mode     Outdoor     0       Image Rotation:     DB     1					Power Line Frequency:	50Hz	~		
Day to Night Value:     Rest       Night Io Day Value:     60       RR Light Sensor Value:     100       Smart IR Mode.     Auto Mode       IR Strength Value:     Near: 0       Day/Night Switch Refocus:     On       Outdoor/Indoor Mode     Outdoor/Indoer       Corridor Mode:     Off       Image Rotation:     Diff					Day/Night Mode	Auto Mode	¥		
Night to Day Value:     Too       IR Light Sensor Value:     100       Smart IR Mode.     Auto Moda       IR Strength Value:     Near 0 Far: 0       Day/Night Switch Refocus:     On       Outdoordindoor Mode     Outdoor       Corridor Mode     Off       Image Rotetton:     Cliff					Day to Night Value:			Repot	
Smart IR Mode:     Auto Mode       IR Strength Value:     Near: 0 Far: 0        Day/Night Switch Refocus:     On       Outdoor/Indoor Mode     Outdoor       Corridor Mode     Oditor       Image Rotetion:     On					Night to Day Value:			Rest	
IR Strength Value: Near: 0 Far: 0 Day/Night Switch Refocus: On Outdoor/Indoor Mode: Outdoor Corridor Mode: OH Image Rotetion: OH Image Rotetion: OH					IR Light Sensor Value:	100 📀			
Day/Night Switch Refocus     On       Outdoor/Indoor Mode     Outdoor       Corridor Mode     Off       Image Rotation     Off					Smart IR Mode.	Auto Mode	~		
Outdoor/Indoor Mode     Outdoor       Corridor Mode     Off       Image Rotation:     Off					IR Strength Value:	Near 0 Far 0			
Corridor Mode Off					Day/Night Switch Refocus:	0n	~		
Image Rotation: Oli V					Outdoor/Indoor Mode:	Outdoor	~		
					Corridor Mode	OH	~		
					Image Rotation:	04	Y		
Smoked Dome Cover					Smoked Dome Cover	On	~		
Keep Correct Aspect Ratio : On 🗸					Keep Correct Aspect Ratio	On	~		
Zoom Limi 20					Zoom Limit .	20 40	2		

# Enhancement

Milesight	Basic Setti	ngs >> image	9						
Livo Video	Display	Enhancement	Day/Night Mode	OSD	ROI				
Playback						Network of the Party of the Par		Ja 14: 29: 11	
<ul> <li>Local Settings</li> </ul>								C.	
Basic Settings									
Video							WH Same	A CARLES	
Image	10								
Audio						E E	Jos Sp	1	
Network									
Date & Time						IR Balance Mode:	[CH	V	
Advanced Settings						White Balance	Auto White Balance	~	
						Reduce Motion Blut	Off	~	
B System						Defog Mode:	OH.	~]	
						Digital image Stabilisation:	[CH	V	
Maintenance						Exposure Mode:	Auto Mode	~	
						Sincle Mode C D	ay/Night Mode () Schedule N	lode	


# Table 7. Description of the buttons

Parameters	Function Introduction
IR Balance Mode	There is an option to turn On/Off the IR LED. IR Balance Mode would avoid the problem of overexposure and darkness, and the IR LED will change according to the actual illumination.

Parameters	Function Introduction
	To restore white objects, removed color distortion caused by the light of the environment
	Auto White Balance: This option will automatically enable the White Balance function
	<b>Manual White Balance:</b> This option is only for H.265 series. Set Red Gain Level and Blue Gain Level manually.
White Balance	Incandescent Lamp: Select this option when light is similar with incandescent lamp
	Warm Light Lamp: Select this option when light is similar with warm light lamp
	Natural Light: Select this option when there is no other light but natural light
	Fluorescent Lamp: Select this option when light is similar with Fluorescent Lamp
	Schedule mode: Select this option that you can customize the schedule to enable/ disable above modes
	Enable this function to reduce the motion blur of objects effectively.
Reduce Motion Blur	You can adjust the deblur level from 1 to 100.
Defog Mode	Better image effect in foggy weather.
Digital Image Stabilisation	Decrease the blur and shakiness of the image.
	Auto Mode, Manual Mode and Schedule Mode are available.
	Auto Mode: The camera will adjust the brightness according to the light environment automatically;
Exposure Mode	<b>Manual Mode:</b> The camera will adjust the brightness according to the value you set, you can set the exposure time from 1~1/100000s, the higher the value is, the brighter the image is;
	<b>Schedule Mode:</b> You can customize the schedule to enable/disable Auto Mode and Manual Mode.
Single Mode	Set single mode for BLC/WDR/HLC.
Day/Night Mode	Support BLC/WDR/HLC on Day Enhancement Mode/Night Enhancement Mode separately.
Schedule Mode	Set schedule mode for BLC/WDR/HLC.

Parameters	Function Introduction
	Off, Customize, and Centre are available (in single mode, only enable when WDR is disable)
	Off: Calculate the full range of view and offer appropriate light compensation
BLC Region	<b>Customize:</b> This option enables you to customize inclusive or exclusive region manually
	<b>Centre:</b> This option will automatically add an inclusive region in the middle of the window and give the necessary light compensation
	This function which can capture and display both bright and dark areas in the same frame enables details of objects in both bright and dark areas to be visible.
Wide Dynamic Range	Off: Disable WDR function
	On: Enable the WDR, there are Low/High/Auto three levels
	<b>Customize:</b> Customize the schedule to enable/disable the WDR function and set the levels with Low/High/Auto
Wide Dynamic Level	Set WDR with Low/High/Auto level
Anti-flicker Level	Reduce flickers that appear on screen in some lighting conditions and there are 10 levels of anti-flicker adjustments
	This function is only for H.265 series to adjust the brightness to a normal range when the light is strong, refers to Figure 4-4-11
	Off: Disable HLC function
High Light Compensation	<b>General Mode:</b> Enable the general mode of HLC, and there is a setting for HLC Level
	Enhanced Mode: Enable the enhanced mode of HLC, and there is a setting for HLC Level
HLC Level	Select level for HLC
Day Enhancement Mode	BLC/WDR/HLC are available.
Night Enhancement Mode	BLC/WDR/HLC are available.
Schedule Setting	Customize the schedule to enable/disable BLC/WDR/HLC mode



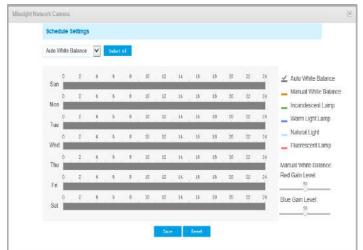


• You can customize the schedule to enable/disable the difference White Balance modes.

• You can customize the schedule to enable/disable the difference exposure modes.

ñode	~	milect A												
0	2	4	8	e	10	÷ii	14	16	18	20	2	24	4	, Auto Mode
0	Ŧ.,	4	6	ę.	19	17	14	36	18	20	17	24	-	Manual Mode 0
8	÷.	4			10	10	18	36	18	28	17	24		priority than exposure settings during the same
0	2	4		e	10	10	- 14	16	18	20	-12	24		time frame.
9	τ.	.6	. 6	e	10	42	- 14	36	18	20	12	24		
0	2	4	6	6	10	12	3140	16	18	25	.12	24		
	2	4	6	0	10	12	14	36	18	20	12	24		
	0	0 2 0 2 0 2		0 2 6 6 0 2 6 6 0 2 6 6 0 2 6 6	0         2         4         5         9           0         2         4         6         8           0         2         4         6         8           0         2         4         6         9	2         4         5         8         10           0         2         4         6         9         10           0         2         4         6         9         10           0         2         4         6         9         10           0         2         4         6         9         10	0         2         4         8         9         10         12           0         2         4         6         9         10         12           0         2         4         6         6         10         12           0         2         4         6         6         10         12           0         2         4         6         6         10         12	0         2         4         6         9         10         12         14           0         0         4         6         9         10         13         14           0         2         4         6         9         10         13         14           0         2         4         6         9         10         12         14           0         2         4         6         9         10         12         14           0         2         4         6         9         10         12         14           0         2         4         6         9         10         12         14	0         2         K         6         0         10         12         14         36           0         0         4         6         0         10         12         14         36           0         0         4         6         0         10         12         14         36           0         0         4         6         0         10         12         14         36           0         2         4         6         0         10         12         14         36           0         2         4         6         0         10         12         14         36           0         2         4         6         0         30         12         14         36           0         2         4         6         0         30         45         36	0         2         4         5         0         10         12         13         16         10           0         2         4         4         9         10         12         14         16         10           0         2         4         6         9         10         12         14         16         10           0         2         4         6         9         10         12         14         16         10           0         2         4         6         0         10         12         14         16         10           0         2         4         6         0         30         12         14         16         10	0         2         4         5         0         10         12         14         16         10         20           0         2         4         6         0         10         12         14         16         10         20           0         2         4         6         6         10         12         14         16         10         20           0         2         4         6         6         10         12         14         16         10         20           0         2         4         6         6         10         12         14         16         10         20           0         2         4         6         6         10         12         14         16         10         20           0         2         4         6         6         10         12         14         16         10         20	0         2         4         5         0         10         12         14         16         10         20         22           0         2         4         6         9         10         10         14         16         10         20         22           0         2         4         6         9         10         12         14         16         10         20         22           0         2         4         6         9         10         12         14         16         10         20         22           0         2         4         6         9         10         12         14         16         10         20         22           0         2         4         6         9         10         12         14         16         10         20         22           0         2         4         6         9         10         12         14         16         10         20         22           14         16         16         10         20         22         22         23	2         K         6         8         10         12         14         36         10         20         22         24           0         2         4         6         10         12         14         36         10         20         22         24           0         2         4         6         10         12         14         36         10         20         25         24           0         2         4         6         10         12         14         36         10         20         25         24           0         2         4         6         0         10         12         14         36         10         20         25         24           0         2         4         6         0         10         12         14         36         10         20         25         24	2         K         5         10         10         14         16         10         20         20         24         4           0         2         4         4         10         10         14         16         18         20         20         24         4           0         2         4         4         10         12         14         16         18         20         22         24           0         2         4         4         10         12         14         16         18         20         22         24           0         2         4         6         10         12         14         16         18         20         22         24           0         2         4         6         10         12         14         16         18         20         22         24           0         2         4         6         10         12         14         16         18         20         22         24

• You can customize the schedule to enable/disable BLC/WDR/HLC mode.

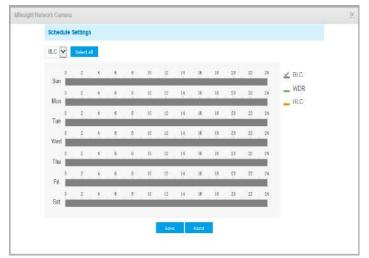

- WDR/HLC has higher priority than exposure settings at the same time frame.
- Defog Image.



• HLC Image.



# Day/Night Mode

٩	Milesight	Basic Se	stlings >:	> Image									
140	Live Video	Display	Enhano	ement Day/Night Mode	050 801								
	Playback					Network Carries		1.1000/2020.24	30: 14				
	Local Settings						A Property	AND A CONTRACTOR	e,				
							ante rela	-					
	Basic Settings								1				
	Video						A Real Property	1 - Cale Inches	Contraction of the local division of the loc				
	hruge							1	Sec.				
	Audio					TELE							
						TEL							
	Autio						Day/Night M	ode					
	Audio Network Date & Time			Day/Night Mode	Exposure Level	Minitum Stuffer	Maximum Shutter	Limit Gain Level	IR-CUT Latency	IR-CUT	LED	Color Mode	
	Autio Network			Night Mode:	5 - 1	1/26 🗸	Maximum Stutter	Limit Gain Level	6e 💙	OH V	IR LED ON V	B/W 💙	
	Autio Network Date & Time Advanced Settings						Maximum Shutter	Linit Gein Leven				B/W 💙	
	Audio Network Date & Time			Night Mode. Day Mode	5 V 5 V	1/26 V 1/25 V	Maximum Shutter 1/100000 V 1/100000 V Schedule Me	Linkt Gen Lever	66 ¥ 58 ¥	OH V Da V	AFLED ON V	B/W       Color	
	Autio Network Date & Time Advanced Settings			Night Mode Day Mode Tabur	5 V 5 V Exposure Lew	1/26 V 1/25 V Minimum Shutter	Maximum Shuter	Linit Gan Levin 100 500 de Linit Gan Level	5a V 5a V	Dr V IR-CUT	IR LED ON V AR LED ON V	Color Mode	
	Audio Network Date & Time Advanced Settings System			Night Mode Day Mode Taner [00] : [00] - [24] : [00]	5 V 5 V Exposure Lew	1125 V 1125 V Minimum Stutter 1125 V	Maximum Shutter Triboood  Triboood Schedule Me Maximum Stutter Triboool	Linit Gan Levin 100 100 100 100 Linit Gan Level	6s ♥ 5a ♥ IR-CUT Latency 5s ♥		AILED ON V	Calor Mode	
	Audio Network Date & Time Advanced Settings System		0	Night Mode Day Mode Tabet 00 - 00 - 24 00 00 - 00 - 24 00	Exposure Leve	1125            1125            1125            1125            1125            1125            1125            1125            1125            1125	Maximum Shutter           1/100000 ~           1/100000 ~           Schiedule Mit           Maximum Stutter           1/100000 ~           1/100000 ~           1/100000 ~           1/100000 ~	Limit Gan Levin 190 190 Limit Gan Level 100 100	Ga ♥ Sa ♥ IR-CUT Lationcy Sa ♥		LED ON CONCEPTION	Color Mode	
e P	Audio Network Date & Time Advanced Settings System			Night Mode Day Mode Taner [00] : [00] - [24] : [00]	S V S V Exposure Lew V V S V S V V V V	1125 V 1125 V Minimum Stutter 1125 V	Maximum Shutter Triboood  Triboood Schedule Me Maximum Stutter Triboool	Linit Gan Levin 100 100 100 100 Linit Gan Level	6s ♥ 5a ♥ IR-CUT Latency 5s ♥		AILED ON V	State     Bit     State       Color Mode       State       State       State       State       State       State	

**Table 8. Description of the buttons** 

Parameters	Function Introduction
Exposure Level	Level 0~10 are available to meet your need
Minimum Shutter	Minimum Shutter is the same as Maximum Exposure Time. Set the minimum Shutter to 1~1/100000s
Maximum Shutter	Maximum Shutter is the same as Minimum Exposure Time. Set the maximum Shutter to 1~1/100000s
IR-CUT Latency	The interval time of switching one mode to another
IR-CUT	Turn on or turn off IR-CUT
IR LED	Turn on or turn off IR-LED
Color Mode	Select B/W or Color mode under Day/Night mode
Schedule Mode	Here you can customize your special demands for different time, then the Day mode and Night mode will switch automatically according to your settings

# On Screen Display(OSD)

📀 Milesight	Basic Settings >> Image	0					
■+ Live Video	Display Enhancement	Day/Night Mode	OSD ROL				
<ul> <li>Playback</li> </ul>				Network Server		0 44: 90: 51	
<ul> <li>Local Sattings</li> </ul>						E.	
Basic Settings							
Video						il	
Image	<ul> <li>Control</li> </ul>						
image							
Audio	2			THE			
Audio Network	2						
Audio				Video Stream:	Primary Stream		
Audio Network Date & Time				Video Stream: Font Size	Ptimary Steam Medium		
Audio Network Date & Time							
Audio Network Date & Time				Font Size		~	
Audio Network Date & Tame Advanced Settings System				Font Size: Font Color:	Medium	~	
Audio Network Date & Time Advanced Settings System				Font Size Font Color Shaw Video Title:	Medium	~	
Audio Network Date & Time Advanced Settings System				Font Size: Font Color: Show Video Title: Video Title:	Medium	•	
Audio Network				Font Bize Font Color: Show Video Title: Video Title: Text Position	Medium Se Network Camera Top-Left	•	

 Table 9. Description of the buttons


Parameters	Function Introduction				
Video Stream	Enable to set OSD for primary stream and secondary stream				
Font Size	Smallest/Small/Medium/La	Smallest/Small/Medium/Large/Largest/Auto are available for title and date			
Font Color	Enable to set different color for title and date				
Background Color		ors for display information background on screen s for font and background of image , then the image OSD			
	Video Stream:	Primary Stream			
	Font Size:	Medium			
	Font Color:				
	Background Color:				
	Show Video Title:				
	Video Title:	Network Camera			
	Text Position:	Top-Left			
	Show Timestamp:				
	Date Position:	Top-Right			
Show Video Title	Check the checkbox to sh	ow video title			
Video Title	Customize the OSD conte	nt			

Parameters	Function Introduction
Text Position	OSD display position on the image
Show Timestamp	Check the checkbox to display date on the image
Date Position	Date display position on the image
Date Format	The format of date
Copy to Other Streams	Copy the settings to other streams

## ROI

Region of interest(often abbreviate ROI), is a selected subset of samples within a dataset identified for a particular purpose. Users can select up to 8 key regions of a scene to transmit through separate streams for targeted preview and recording.

By using Milesight ROI technology, more than 50% of bit rate can be saved and therefore less bandwidth demanded and the storage usage reduced. So according to this, you can set a small bit rate for high resolution.

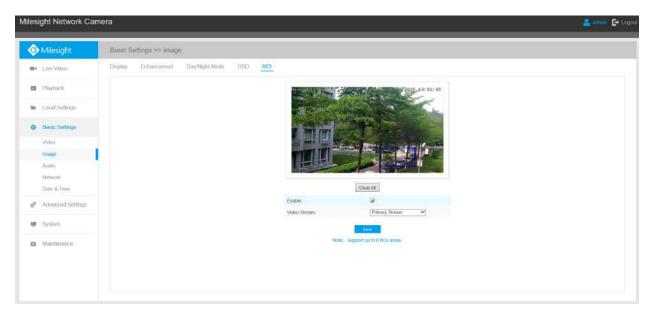

**Table 10. Description of the buttons** 

Parameters	Function Introduction
Enable	Check the checkbox to enable the ROI function
Clear All	Clear all areas you drew before
Video Stream	Choose the Video Stream

## **Note:**

• You can set a low bit rate. For example, you can set a bit rate with 512Kbps and a resolution with 1080P, then you can see the image quality of ROI is more clear and fluent than the other region.

# 5.4.3 Audio

This audio function allows you to hear the sound from the camera or transmit your sound to the camera side. A two-way communication is also possible to be achieved with this feature. Alarm can be triggered when the audio input is above a certain alarm level you set, and configured audio can be played when an alarm occurs.



Enable Audio:	V	
Audio Mode:	Both Audio Input & Output	~
Audio Input		
Denoise:	8	
Encoding:	AAC LC	~
Sample Rate:	48KHz	~
Audio Bit Rate:	144kbps	~
Input Gain:		
Audio Output		
Auto Gain Control:	V	
Output Volume:	76	

 Table 11. Description of the buttons

Parameters	Function Introduction
Enable Audio	Check on the check box to enable audio feature
	Denoise: Set it as On/Off. When you set the function on, the noise detected can be filtered Encoding: G.711-ULaw, G.711-ALaw, AAC LC, G.722 and G.726 are available
Audio Input	<b>Audio Bit Rate:</b> The function is available only for AAC LC, and supports up to 256kbps
	Sample Rate: 8KHz, 16KHz, 32KHz, 44.1KHz, and 48KHz are available
	Input Gain: Input audio gain level, 0-100
	<b>Alarm Level:</b> Alarm will be triggered if voice alarm is enabled and input gained volume is higher than the alarm level, 1-100
Audio Output	Auto Gain Control: This function is only for H.265 series, improve the quality of audio
	Output Volume: Adjust volume of output

You can upload up to 5 audio files manually to Flash or SD Card on the Audio web page and you can also edit the audio file's name when upload.

Audio File Storage Type:	Flash	~
Audio File Upload		
Audio File Name:		
Audio File:		Browse
	Upload	
ID Aud	io File Name	Delete
1	audio	×

Note:Only support '.wav' audio files with codec type PCM/PCMU/PCMA, 64kbps or 128kbps bitrate and no more than 500k!

**Note:** Only support '.wav' audio files with codec type PCM/PCMU/PCMA, 64kbps or 128 kbps and no more than 500k.

# 5.4.4 Network

# TCP/IP

O Get IPv4 address automatically			
Use fixed IPv4 address			
IP Address:	192.168.8.156 Test		
IPv4 Subnet Mask:	255. 255. 252. 0		
IPv4 Default Gateway:	192.168.8.1		
Preferred DNS Server:	8.8.8.8		
IPv6 Mode:	Manual 🗸		
IPv6 Address:			
IPv6 Prefix:			
IPv6 Default Gateway:			
c-	11/2		

 Table 12. Description of the buttons

Parameters	Function Introduction
Get IPv4 Address Automatically	Get an IP address from the DHCP server automatically
Use fixed IP address	<ul> <li>IPv4 Address: An address that used to identify a network camera on the network</li> <li>IPv4 Subnet Mask: It is used to identify the subnet where the network camera is located</li> <li>IPv4 Default Gateway: The default router address</li> <li>Preferred DNS Server: The DNS Server translates the domain name to IP address</li> <li>IPv6 Mode: Choose different mode for IPv6: Manual/Route Advertisement/ DHCPv6</li> <li>IPv6 Address: IPv6 Address used to identify a network camera on the network</li> <li>IPv6 Prefix: Define the prefix length of IPv6 address</li> <li>IPv6 Default Gateway: The default router IPv6 address</li> <li>IPv6 Default Gateway: The default router IPv6 address</li> <li>IPv6 Default Gateway: The default router IPv6 address</li> </ul>

**Note:** The **Test** button is used to test if the IP is conflicting.

# HTTP

HTTP Enable:		$\checkmark$
HTTP Port:		80
HTTPS Enable:		
HTTPS Port:		443
HTTPS Settings		
Installed Certificate:	C=US, H	H/IP=IPC Reset
Attributes:	Issuer: C=US, H Period Dec 18	I/IP=IPC
Installation Type:		Create a Private Certificate
Create a Private Certificate:		Create
	Sa	we

 Table 13. Description of the buttons

Parameters	Function Introduction
HTTP Enable	Start or stop using HTTP
HTTP Port	Web GUI login port, the default is 80, the same with ONVIF port
HTTPS Enable	Start or stop using HTTPS
HTTPS Port	Web GUI login port via HTTPS, the default is 443
HTTP Settings	Upload and set the SSL certificate.

٦

Table 14. HTTP URL are as below:

Stream	URL
Main Stream	http://username:password@IP:port/ipcam/mjpeg.cgi
Secondary Stream	http://username:password@IP:port/ipcam/mjpegcif.cgi
Tertiary Stream	http://username:password@IP:port/ipcam/mjpegthird.cgi

# RTSP

RTSP Port:	554 (i)
Playback Port:	555
RTP Packet:	Better Compatibility
Multicast Group Address:	239.6.6.6
QoS DSCP(0~63):	0

Save

## Table 15. Description of the buttons

Parameters	Function Introduction
RTSP Port	The port of RTSP, the default is 554
Playback Port	Playback Port The port of playback, the default is 555
RTP Packet	There are Better Compatibility and Better Performance two options, if your camera's image mess up, please switch this option
Multicast Group Address	Support multicast function
QoS DSCP	The valid value range of the DSCP is 0-63

Table 16. RTSP URL are as below:

Stream	URL
Main Stream	rtsp://username:password@IP:port/main
Secondary Stream	rtsp://username:password@IP:port/sub
Tertiary Stream	rtsp://username:password@IP:port/third

Rote:

- Get the format of RTSP URL by clicking "<sup>①</sup>" on the right side of RTSP Port.
- Get the playback tip by clicking "<sup>①</sup>" on the right side of Playback Port.
- DSCP refers to the Differentiated Service Code Point; and the DSCP value is used in the IP header to indicate the priority of the data.
- A reboot is required for the settings to take effect.
- The tertiary stream is only equipped on camera whose model with "-A" or "-B".

### UPnP

Universal Plug and Play (UPnP) is a networking architecture that provides compatibility among networking equipment, software and other hardware devices. The UPnP protocol allows devices to connect seamlessly and to simplify the implementation of networks in the home and corporate environments. With the function enabled, you don't need to configure the port mapping for each port, and the camera is connected to the Wide Area Network via the router.

Enable UPnP:			
Port Mapping			
Enable Port Mappir	ig: E	2	
Name:	I	UPnP	
Туре:	1	Auto	~
Protocol Name	External Port	Internal Port	Status
HTTP	21202	80	Invalid
RTSP	23202	554	Invalid
IXIOI			

Parameters	Function Introduction
Enable	Check the checkbox to enable the UPnP function
Enable Port Mapping	Check the checkbox to enable the Port Mapping
Name	The name of the device detected online can be edited
Туре	Auto: Automatically obtain the corresponding HTTP and RTSP port, without any settings Manual: Need to manually set the appropriate HTTP port and RTSP Port. When choose Manual, you can customize the value of the port number by yourself

#### Table 17. Description of the buttons

### DDNS

DDNS allows you to access the camera via domain names instead of IP address. It manages to change IP address and update your domain information dynamically. You need to register an account from a provider.

nable DDNS:	
Provider:	ddns.milesight.com
External HTTP Port :	80
External RTSP Port:	554
External Playback Port:	555
DDNS URL: http://ddns.milesigh	it.com/210C1E

You can choose "ddns.milesight.com" as provider for DDNS. After enabling it, you can access the device via the URL "http://ddns.milesight.com/MAC address".

## Table 18. Description of the buttons

Parameters	Function Introduction
Enable DDNS	Check the checkbox to enable DDNS service
Provider	Get support from DDNS provider: ddns.milesight.com, freedns.afraid.org, dyndns.org, www.no-ip.com, www.zoneedit.com. You can also customize the provider for DDNS.
Hash	A string used for verifying, only for "freedns.afraid.org"
User name	Account name from the DDNS provider, unavailable for "freedns.afraid.org"
Password	Account password, unavailable for "freedns.afraid.org"
Host name	DDNS name enabled in the account

**Note:** 

- Please do the Port Forwarding of HTTP Port and RTSP Port before you use Milesight DDNS.
- Make sure that the internal and the external port number of RTSP are the same.

## Email

Alarm video files can be sent to specific mail account through SMTP server. You must configure the email settings correctly before using it.

Enable:	
User Name:	hdipnc
Sender Email Address:	hdipnc@sina.com
Password:	00000
Email Server:	smtp.sina.com
Email Port:	25
Recipient Email Address1:	user@domain.com
Recipient Email Address2:	
Encryption:	SSL TLS
Snapshot Settings	
Alarm Snapshot File Name:	Customize
	&Device_&Y&M&D_&h&m Network Camera_2021061
Timing Snapshot File Name:	Add prefix
Save	Test

## Table 19. Description of the buttons

Parameters	Function Introduction
Enable	Check the checkbox to enable Email function
User Name	The sender's name. It is usually the same as the account name
Sender Email Address	Email address to send video files attached emails
Password	The password of the sender

Parameters	Function Introduction
SMTP Server	The SMTP server IP address or host name(e.g. smtp.gmail.com)
SMTP Port	The default TCP/IP port for SMTP is 25(not secured). For SSL/TLS port, it depends on the mail you use
Recipient Email Address1	Email address to receive video files
Recipient Email Address2	Email address to receive video files
Encryption	Check the checkbox to enable SSL or TLS if it is required by the SMTP server.
Alarm Snapshot File Name	Default(YYYY-MM-DD) /MM-DD-YYYY/ DD-MM-YYYY/ Add prefix/ Overwrite with the base file name/ Customize are available.
Timing Snapshot File Name	Default(YYYY-MM-DD) /MM-DD-YYYY/ DD-MM-YYYY/ Add prefix/ Overwrite with the base file name/ Customize are available.

**Note:** You can refer to the following file name tip to customize the file name.

File Name Tip: &Device - Device Name &Y - Year &M - Month &D - Day &h - hour &m - minute &s - second && - &

## FTP

Alarm video files can be sent to specific FTP server. You must configure the FTP settings correctly before using it.

FTP Server Settings	
Server Address:	192.168.5.1
Server Port:	21
User Name:	admin
Password:	•••••
FTP over SSL/TLS(FTPS):	
FTP Storage Settings	
Storage Path:	Child Directory
Parent Directory:	Date 🗸
Child Directory:	IP Address V
Alarm Action File Name:	Customize 🗸
Video File Name:	YYYY-MM-DD 🗸
Image File Name:	YYYY-MM-DD 🗸
Timing Snapshot File Name:	Default(YYYY-MM-DD)
Pre-record:	0 second 🗸

Save

Test

# Table 20. Description of the buttons

Parameters	Function Introduction
Server Address	FTP server address
Server Port	The port of the FTP server. Generally it is 21
User Name	User name used to log in to the FTP sever
Password	User password

Parameters	Function Introduction
Storage Path	Storage Path where video and image will be uploaded to the FTP server. Four FTP storage path types are available, including Root Directory, Parent Directory, Child Directory and Customize.
Parent Directory	Choose IP Address/ Device Name/ Date as the folder name of Parent Directory, or customize the folder name.
Child Directory	Choose IP Address/ Device Name/ Date as the folder name of Child Directory, or customize the folder name.
Multilevel Folder Name	If the storage path is more than two levels, enter Multilevel FTP storage path here manually.
Alarm Action File Name	Choose the default(YYYY-MM-DD) or customize the alarm action file name.
Video File Name	If you choose to customize the alarm action file name, YYYY-MM-DD/ MM-DD- YYYY/ DD-MM-YYYY/ Add prefix are available.
Image File Name	If you choose to customize the alarm action file name, YYYY-MM-DD/ MM-DD- YYYY/ DD-MM-YYYY/ Add prefix are available.
Timing Snapshot File Name	Default(YYYY-MM-DD) /MM-DD-YYYY/ DD-MM-YYYY/ Add prefix/ Overwrite with the base file name are available.

## **Note:**

- Parent Directory will be under Root Directory, and Child Directory will be under Parent Directory.
- You can refer to the following file name tip to customize the file name.
  - File Name Tip: &Device - Device Name &Y - Year &M - Month &D - Day &h - hour &m - minute &s - second && - &

## VLAN

A virtual LAN (VLAN) is any broadcast domain that is partitioned and isolated in a computer network at the data link layer (OSI layer 2). LAN is an abbreviation of local area network. VLANs allow network administrators to group hosts together even if the hosts are not on the same network switch. This can greatly simplify network design and deployment, because VLAN membership can be configured through software. Without VLANs, grouping hosts according to their resource needs necessitates the labour of relocating nodes or rewiring data links.

VLAN Enable:	$\checkmark$
VLAN ID(1~4094):	1
VLAN IP:	· · ·
VLAN Netmask:	
VLAN Gateway:	
	Save

**Note:** How to set up VLAN in switches, please refers to your switches user manual.

## PPPoE

This camera supports the PPPoE auto dial-up function. The camera gets a public IP address by ADSL dial-up after the camera is connected to a modem. You need to configure the PPPoE parameters of the network camera.

Enable PPPoE:	
Dynamic IP:	0.0.0.0
User Name:	
Password:	
Confirm Password:	
Sa	ve



- The obtained IP address is dynamically assigned via PPPoE, so the IP address always changes after rebooting the camera. To solve the inconvenience of the dynamic IP, you need to get a domain name from the DDNS provider (e.g. DynDns.com).
- The user name and password should be assigned by your ISP.

## **SNMP**

You can set the SNMP function to get camera status, parameters and alarm related information and manage the camera remotely when it is connected to the network.

Before setting the SNMP, please download the SNMP software and manage to receive the camera information via SNMP port. By setting the Trap Address, the camera can send the alarm event and exception messages to the surveillance center.

SNMP v1/v2	
SNMP V1 Enable:	
SNMP V2c Enable	
Write Community:	public
Read Community:	private
SNMP v3	
SNMP V3 Enable:	
Read Security Name:	
Level of Security:	no auth,no priv 🗸 🗸
Write Security Name:	
Level of Security:	no auth,no priv 🗸
SNMP Port	
SNMP Port:	161

 Table 21. Description of the buttons

Parameters	Function Introduction
SNMP v1/2/3	The version of SNMP, please select the version of your SNMP software. SNMP v1: Provide no security SNMP v2: Require password for access SNMP v3: Provide encryption and the HTTPS protocol must be enabled
Write Community	Input the name of Write Community
Read Community	Input the name of Read Community
Read Security Name	Input the name of Read Security Community
Level of Security	There are three levels available: (auth, priv), (auth, no priv) and (no auth, no priv)
Write Security Name	Input the name of Write Security Community
Level of Security	There are three levels available: (auth, priv), (auth, no priv) and (no auth, no priv)
SNMP Port	The port of SNMP, the default is 161

## **Note:**

- The settings of SNMP software should be the same as the settings you configure here;
- A reboot is required for the settings to take effect.

### 802.1x

The IEEE 802.1X standard is supported by the network cameras, and when the feature is enabled, the camera data is secured and user authentication is needed when connecting the camera to the network protected by the IEEE 802.1X.

Enable 802.1x:	
Protocol:	EAP-MD5
Eapol Version:	1 🗸
User Name:	
Password:	
Confirm Password:	
Sa	ve

### Bonjour

Bonjour is based on Apple's multicast DNS service. Bonjour devices can automatically broadcast their service information and listen to the service information of other devices.

If you don't know the camera information, you can use the Bonjour service on the same LAN to search for network camera devices and then to access the devices.

Enable Bonjour:	$\checkmark$
Bonjour Name:	MS-C2962-FPB-1CC316210991
S	ave

### RTMP

Real-Time Messaging Protocol (RTMP) was initially a proprietary protocol for streaming audio, video and data over the Internet, between a Flash player and a server. RTMP is a TCP-based protocol which maintains persistent connections and allows low-latency communication. It can realize the function of live broadcast so that customers can log in to the camera wherever there is a network.

Enable RTMP:	
Stream Type:	Secondary Stream
Server Address:	rtmp://a.rtmp.youtube.com/
S	ave

For more information, please refer to Troubleshooting-How to Use RTMP for Live Broadcast

### **Note:**

- For YouTube live broadcast, if you use a newly created account to live broadcast, you need to wait for 24hrs to activate the account for using live function.
- For RTMP, since G.711 is not available for YouTube, so you can only play video from Milesight network cameras with H.264 video coding and AAC audio coding on YouTube.
- Server Address in Network Camera RTMP interface needs to be filled with the format: rtmp://< Server URL >/< Stream key >, remember it needs '/' to connect between < Server URL > and < Stream key >.

### More

Here you can set more functions, like Push Message Settings and ONVIF Settings.

### **Push Message Settings**

Push Message Settings	
Enable Push Message:	$\checkmark$
Push Event Type:	Edit

When enabling the Push Message function, you can click to choose the types of Events' message which will be pushed to M-sight Pro App as shown below:

Push Event Type		
☑ All		
✓ Motion Detection	☑ Region Entrance	
✓ Region Exiting	☑ Advanced Motion Detection	
✓ Tamper Detection	☑ Line Crossing	
✓ Loitering	☑ Human Detection	
✓ People Counting	☑ Object Left/Removed	
☑ Face Detection		
Sa	ve	

**Note:** There must be Opened Alarm Push of corresponding cameras in M-sight Pro APP.

### **ONVIF Settings**

Here you can choose whether to enable or disable camera ONVIF function. If camera ONVIF function is enabled, it can be searched out, added and connected by third-party software through ONVIF protocols. Generally, the default status of ONVIF function is enabled.



# 5.4.5 Date&Time

Current System Time		
Date:	26/04/2020	
Time:	14:49:33	
Set the System Time		
Time Zone:	(UTC+08:00) China(Beijing, Hon ្ 🗸	
Daylight Saving Time:	Disabled 🗸	
NTP server		
Server Address:	192.168.14.101	
NTP Sync:	✓ Interval: 1 day ∨	
⊖ Manual		
Time:	26/04/2020 14:48:34	
O Synchronize with computer time		
Date:	26/04/2020	
Time:	14:49:35	
Save		

## **Current System Time**

Current date&time of the system

## Set the System Time

## Table 22. Description of the buttons

Parameters	Function Introduction
Time Zone	Choose a time zone for your location
Daylight Saving time	Enable the daylight saving time
NTP server	Input the address of NTP server

Parameters	Function Introduction
NTP Sync	Regularly update your time according to the interval time
Manual	Set the system time manually
Synchronize with computer time	Synchronize the time with your computer

# 5.5 Advanced Settings

## 5.5.1 Storage


### Before you start:

To configure record settings, please make sure that you have the network storage device within the network or the SD card inserted in your camera.

Choose the storage mode according to your needs.

### **Storage Management**

### SD Card:

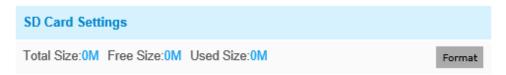

Note: Please insert SD card.

#### Table 23. Description of the buttons

Parameters	Function Introduction
Format	Format SD card, the files in SD card will be removed
Mount/UnMount	Mount/Dismount SD card

Parameters	Function Introduction
Delete	Enable cyclic storage, when the free disk space reach at a certain value, it will automatically delete the files at certain percentage according to your settings

### NAS:

The network disk should be available within the network and properly configured to store the recorded files, etc.

NAS (Network-Attached Storage), connecting the storage devices to the existing network, provides data and files services.


NAS Settings	
Server Address:	
File Path:	
Mounting Type:	NFS ¥
Add	

 Table 24. Description of the buttons

Parameters	Function Introduction
Server Address	IP address of NAS server
File Path	Input the NAS file path, e.g. "\path".
Mounting Type	NFS and SMB/CIFS are available. And you can set the user name and password to guarantee the security if SMB/CIFS is selected

**Note:** Up to 5 NAS disks can be connected to the camera.

## **Record Settings**

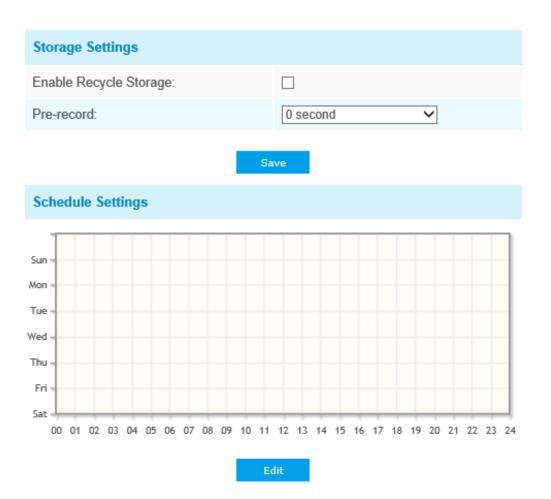

#### Table 25. Description of the buttons

Parameters	Function Introduction
Enable Recycle Storage	Enable/Disable Recycle Storage, if you enable this option, it will delete the files when the free disk space reach a certain value.
Pre-record	Reserve the record time before alarm, 0~10 sec
Schedule Settings	Click the Edit button to edit record schedule

**Note:** SD Card or NAS are available.

## **Snapshot Settings**

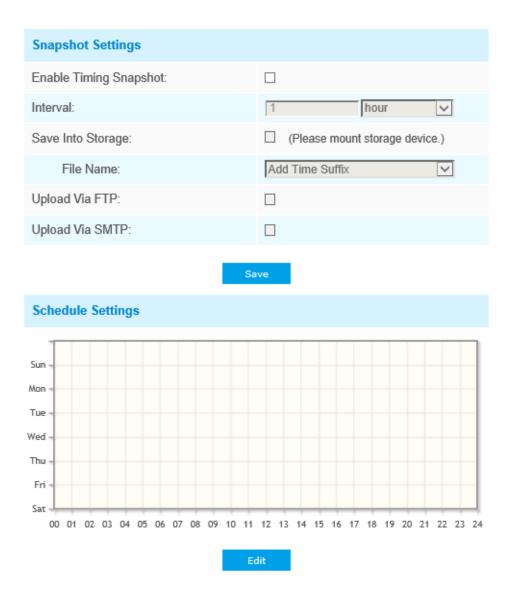


 Table 26. Description of the buttons

Parameters	Function Introduction
Snapshot Settings	<ul> <li>Enable Timing Snapshot: Check the checkbox to enable the Timing Snapshot function</li> <li>Interval: Set the snapshots interval, input the number and choose the unit(millisecond, second, minute, hour, day)</li> <li>Note: The interval must be between 1 and 604800.</li> <li>Save Into Storage: Save the snapshots into SD card or NAS, and choose the file name to add time suffix or overwrite the base file name.</li> <li>Save Into NAS: Save the snapshots into NAS, and choose the file name to add time suffix or overwrite the base file name.</li> <li>Upload Via FTP: Upload the snapshots via FTP</li> <li>Upload Via SMTP: Upload the snapshots via SMTP</li> <li>Note: If you choose to add time suffix, every snapshot picture will be saved, but if you choose to overwrite the base file name, only one latest picture will be saved. When you choose add overwrite the base file name to SD Card or NAS, it will create a file named "Snapshot" to place the snapshot.</li> </ul>
Schedule Settings	Click the Edit button to edit record schedule

### **Explorer**

Files will be seen on this page when they are configured to save into SD card or NAS. You can set time schedule every day for recording videos and save video files to your desired location.


**Note:** Files are visible once SD card is inserted. Don't insert or pull out SD card when power on

Video files are arranged by date. Set file type and start/end time to search out files. Each day files will be displayed under the corresponding date, from here you can copy and delete files etc. You can visit the files in SD card by ftp, for example, ftp://username:password@192.168.5.190(user name and password are the same as the camera account and the IP followed is the IP of your device.).

Show 10 🗸	entries				Download	
	File Name	Start Time	End Time	Туре	Size	File Search
		Please mount	storage device first!			Main Type: Record Sub Type: All
						Start Time: 2019-03-12 00:00:00 💼 End Time:
						2019-03-12 23:59:59
Showing	0 to 0 of 0 entries	First Previous Next	t Last		GO	

# 5.5.2 Security

### User

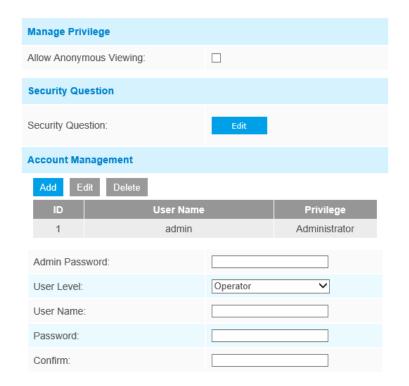

Use	er Privilege			
$\checkmark$	All			
✓	Live Video		$\checkmark$	Playback
$\checkmark$	Local Settings		$\checkmark$	Video Settings
✓	Audio Settings		$\checkmark$	Image Settings
✓	Network Settings		~	RTSP Access
✓	Date & Time		$\checkmark$	Event Settings
✓	Storage Settings		~	Storage Format
✓	Security Settings		$\checkmark$	SIP Settings
✓	Logs		~	System
✓	Maintenance			
		Note: You can only	/ add	d 20 users

 Table 27. Description of the buttons

Parameters	Function Introduction
Manage Privilege	Allow anonymous viewing: Check the checkbox to enable visit from whom doesn't have account of the device

Parameters	Function Introduction	
	Click "Edit" button to set three security questions for your camera. In case that you forget the password, you can click "Forget Password" button on login page to reset the password by answering three security questions correctly.	
Security Question	you forget the password, you can click "Forget Password" button on login page to	

Parameters	Function Introduction
Account Management	Click "Add" button, it will display Account Management page. You can add an account to the camera by entering Admin Password, User Level, User Name, New Password, Confirm, and edit user privilege by clicking . The added account will be displayed in the account list. Admin Password: You can add an account only after you enter the correct admin password. User Level: Set the privilege for the account. User Name: Input user name for creating an account. Password: Input password for the account. Confirm: Confirm the password. You can edit and delete the account in the account list under the admin account. For the default admin account, you can only change the password, and it cannot be deleted.

#### **Note:**

- Support up to 20 users, including a default user and 19 custom added users.
- The operator privilege is all checked by default.
- For camera firmware version 4X.7.0.69 or above, it removes the default admin password and allows to set a password when logging in for the first time. It also supports set-up of the security questions for the devices. Users can reset the password by answering the correct security questions in case of forgetting the password, which is more convenient for users.

## **Online User**

Here real-time status of user logging in camera will be shown.

Onl	ine User	r			
R	Refresh				
	No.	User Name	User Level	IP Address	User Login Time
	1	admin	Administrator	192.168.7.110	2021-02-20 10:12:29
	2	admin	Administrator	192.168.7.79	2021-02-20 09:16:06
	3	admin	Administrator	192.168.7.25	2021-02-19 17:12:02

#### Table 28. Description of the buttons

Parameters	Function Introduction	
Refresh	Click to get latest status of user accessing to camera.	
No.	<ul> <li>Record serial number of user logging in camera.</li> <li>Note:</li> <li>There are at most 30 records shown at the list.</li> <li>There is only one record if the same user logging on camera by the same IP address.</li> </ul>	
User Name	Name of user logging in camera.	
User Level	Level of user logging in camera.	
IP Address	Device IP address where user logging in camera web located.	
User Login Time	Camera system time of user logging in camera.	

## Access List

~
~
Deny

 Table 29. Description of the buttons

Parameters	Function Introduction
General Settings	<b>Maximum number of concurrent streaming:</b> Select the maximum number of concurrent streaming. Options include No Limit, 1~10
IP access list	Rule: Single, Network and Range are available IP address: Input the address to get the access to the device
Enable access list filtering	Able to access or restrict access for some IP address
Filter type	Access or restrict access

## **Security Service**

SSH Settings	
Enable SSH:	
SSH Port:	6022

## Table 30. Description of the buttons

Parameters	Function Introduction
SSH Settings	Secure Shell (SSH) has many functions: it can replace Telnet and also provides a secure channel for FTP, POP, even for PPP.

## Watermark

Watermark Settings	
Enable Watermark:	×
Watermark String:	IP CAMERA

Watermarking is an effective method to protect information security, realizing anti-counterfeiting traceability and copyright protection. Milesight network cameras supports Watermark function to ensure information security.

### About

Open Source Software Licen	ses	
	View Licenses	

User can view some open source software licenses about the camera by clicking the View Licenses button.

## 5.5.3 SIP

The Session Initiation Protocol(SIP) is a signaling communications protocol, widely used for controlling multimedia communication sessions such as voice and video calls over Internet Protocol (IP) networks. This page allows user to configure SIP related parameters. Milesight network cameras can be configured as SIP endpoint to call out when alarm triggered; or allow permitted number to call in to check the video if the video IP phone is used. To use this function, the settings in SIP page must be configured properly. There are two ways to get video through SIP, one is to dial the IP address directly, the other is account registration mode. the details are as follows:

### Method 1: IP Direct mode

Dial on the camera's IP address directly through SIP phone, so you can see the video.

**Note:** SIP phone and the camera should in the same network segment.

Method2: Account registration mode

- Before using the SIP, you need to register an account for the camera from the SIP server;
- Register another user account for the SIP device from the same SIP server;
- Call the camera User ID from the SIP device, you will get the video on the SIP device.

### **SIP** Settings

Unregistered		
Enable:		
Register Mode:	Enable	
User ID:	500	
User Name:	sipclient	
Password:		
Server Address:	192.168.5.101	
Server Port:	5060	
Connection Protocol:	UDP V	
Video Stream:	Secondary Stream	
Max Call Duration:	1800 s (0 means no limitation.)	

### Note:SIP supports Direct IP call.

Save

Table 31.	Description	of the	buttons

Parameters	Function Introduction
Unregistered/Registered	SIP registration status. Display "Unregistered" or "Registered"
Enable	Start or stop using SIP
Register Mode	Choose to use Enable mode or Disable mode. Enable mode means to use SIP with register account. Disable mode refers to use SIP without register account, just use the IP address to call.
User ID	SIP ID
User Name	SIP account name
Password	SIP account password

Parameters	Function Introduction
Server Address	Server IP address
Server Port	Server port
Connection Protocol	UDP/TCP
Video Stream	Choose the video stream
Max Call Duration	The max call duration when use SIP

**Note:** SIP supports Directly IP call.

## **Alarm Phone List**

Phone Type:	Phone Number
To Phone Number:	
Remark Name:	
Duration:	From 00 🗸 : 00 🗸 To 24 🖌 : 00 🗸
Ad	b

 Table 32. Description of the buttons

Parameters	Function Introduction
Phone Type	Phone Number(Call by phone number) & Direct IP Call(Check to accept peer to peer IP call).
To Phone Number/IP Address	Call by phone number or IP address.
Remark Name	Display name.
Duration	The time schedule to use SIP.

## White List

Phone Type:	Phone Number	
Phone Number:		
Add		
Enable White List Number Filter:		
	Save	

 Table 33. Description of the buttons

Parameters	Function Introduction
Phone Type	Phone Number(Call by phone number) & Direct IP Call
Phone Number/IP Address	Including the phone number or IP address on the white list
Enable White List Number Filter	When enabled, only the designated phone number or IP address can visit

## 5.5.4 PTZ

PTZ Settings provides you to configure the functions and parameters about Pan/Tilt/Zoom.

PTZ parameters are mainly include the Basic parameters, Auto Home, PTZ Limits, Initial Position(Mini PTZ Bullet), Privacy Mask, Scheduled Tasks, Auto Tracking, Config Clear, RS485(Speed Dome).

### Basic

PTZ OSD		
Zoom Status:	5 seconds	~
Pan & Tilt Status:	5 seconds	$\checkmark$
Preset Status:	5 seconds	$\checkmark$
Patrol Status:	Always Open	~
Pattern Status:	Always Open	$\checkmark$
Auto Scan Status:	Always Open	~
Preset		
Preset Freezing:		
Speed		
Preset Speed:	5	~
Manual Speed:	Medium	~
Patrol		
Patrol Recovering:		
Patrol Recovery Time(5-720s):	10	S
Focus		
Focus Mode:	Semi-Auto	~
Minimum Focus Distance:	1 meter	~
Power Off Memory		
Set Resume Time:	Disable	~
Dehumidifying		
Fan Working Mode:	General	~
Sa	ve	

Table 34. Description of the buttons

Parameters	Function Introduction
PTZ OSD	Configure the OSD parameter, you can set the <b>Zoom status OSD, Pan&amp;Tilt Status, Preset Status</b> with Always Close/Always Open/2s/5s/10s, and <b>Patrol Status, Pattern Status, Auto Scan Status</b> with Always Open/ Always Close.
Preset	If you enabled Preset Freezing, the live view of preset position will be showed directly instead of showing both the moving path to the position and the live view. It can also reduce the use of bandwidth in the digital network system.
	<b>Preset Speed:</b> It determines the speed of calling presets. Level 1~10 are available.
Speed	Manual Speed: it only for Speed Dome, and it determines the PTZ speed of Manually control. Low/ Medium/ High are available.
	<b>Scan Speed</b> : it is only for Speed Dome, and it determines the speed of Auto Scan. Level 1~10 are available.
	Patrol Recovering: Click to enable Patrol Recovering.
Patrol	<b>Patrol Recovery Time:</b> Set time for Patrol Recovering, which is between 5 to 720 seconds.
	Focus Mode: Three focus modes are available: Auto/ Semi-Auto/ Manual.
Focus	<b>Minimum Focus Distance</b> : Set the minimum focus distance to adjust the step length of each focus. 1 meter, 1.5 meters, 3 meters, 6 meters, 10 meters and 20 meters are available. The default minimum focus distance is 1 meter.
	If the camera stop working for a longer time than predefined,
Power Off Memory	the position of it will be recorded. And it will resume to the position after going back to the normal work from power off. You can set the resume time to
	30 seconds, 60 seconds, 300 seconds or 600 seconds to record its position.
	Fan Working Mode: Three fan working modes are available: General/ Enhancement/ Constant.
Dehumidifying	<b>General:</b> The fans are turned on from 4am to 7am and 5pm to 8pm every day.
	Enhancement: The fans are turned on from 5pm to 7am every day.
	Constant: The fans work 24 hours a day.

## Auto Home

	26/04/2020 16 00 18
Enable:	Current Come
Latency Time(5-720s):	5 s
Auto Home Mode:	Preset
Auto Home Mode Number:	Current Location V Call

Auto Home allows the PTZ camera to return to a predefined Home Position automatically after a period of latency time. Check the checkbox to enable the Auto Home mode.

Parameters	Function Introduction
Latency Time	Set a latency time to trigger Auto Home mode, 5-720s.
Auto Home Mode	Preset: A preset point will take effect when triggering the Auto Home.
Auto Home Mode Number	Select a predefined preset in the list, press "Call" to check the location. Also support to select current location.

### **PTZ Limit**

The PTZ camera can be programmed to move within the configurable PTZ Limits(Left/Right).

Network Cameras	001 Preset 1	(r .
Network carrenas	002 Preset 2	
	● U → 003 Preset 3	
The set of the	004 Preset 4	
	▶ ▼ ▲ 005 Preset 5	
	006 Preset 6	
	007 Preset 7	
	008 Preset 8	
	009 Preset 9	
	□ □ 010 Preset 10	
A CONTRACTOR OF THE OWNER OWNE	이 (고 이 이 Preset 11	
		$\sim$
	012 Preset 12	~
Limit Mode:	Manual Limit	×
Limit Mode: Enable:		~
	Manual Limit 🗸	~
Enable:	Manual Limit V	~

Step1: Check the checkbox to enable the PTZ Limit function.

Step2: Choose the limit mode as Manual limit or scanning limit.

• Manual Limit:

When Manual limit stops are set, you can operate the PTZ control panel manually only in the limited surveillance area.

• Scan Limit:

When Scan limit stops are set, the auto scan is performed only in the limited surveillance area.

Step3: Click the PTZ controller buttons to set the left/right limit stops; you can also call the defined presets and set them as the limits of the PTZ camera.


Step4: Click Set to save the limits or Clear to clear the limits.

### **Initial Position**

You can configure the Initial Position for PTZ cameras as a zero point.

Step1: Click the PTZ control buttons as the Initial Position of the Mini PTZ bullet, you can also call a defined preset and set it as the Initial Position.

Step2: Click Set to save the position as the Initial Position.

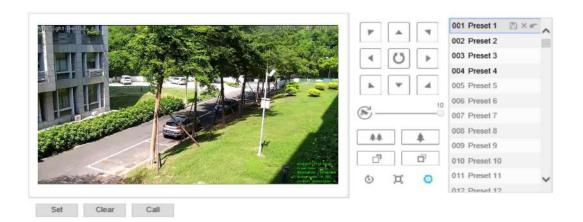

### Table 36. Description of the buttons

Parameters	Function Introduction
Set	Click to set the current position as a Initial Position
Clear	Clear the Initial Position to default settings.
Call	Click to call the Initial Position.

## **Privacy Mask**

Privacy mask enables to cover certain areas on the live video to prevent certain spots in the surveillance area from being viewed and recorded. The mask area does not move as the lens moves. You can set 28 mask areas at most, which include 24 mask areas and 4 mosaic areas.

### **Privacy Mask**

You can set 24 mask areas at most.

Fx       3       002 Preset 2         Color Preset 3       004 Preset 3         O05 Preset 5       006 Preset 6         O07 Preset 7       008 Preset 8         O08 Preset 9       010 Preset 10         O17 Preset 10       011 Preset 11         O19 Preset 12       011 Preset 11				001 Freset 1	- B×r
Fr       004 Preset 4         005 Preset 5       006 Preset 6         007 Preset 7       008 Preset 8         009 Preset 9       010 Preset 10         010 Preset 10       011 Preset 11         011 Preset 12       012 Preset 12	Vetwork Cameron	- A MARCAN TO		002 Preset 2	
Fr       3       005 Preset 5         007 Preset 7       008 Preset 8         009 Preset 9       010 Preset 10         011 Preset 10       011 Preset 11         012 Preset 12       011 Preset 11					
Fr       006 Preset 6         Fr       008 Preset 7         008 Preset 8       009 Preset 9         010 Preset 10       010 Preset 10         011 Preset 11       011 Preset 11         012 Preset 12       013 Preset 12				004 Preset 4	
Fr       Re       007 Freset 7         MA       A       009 Freset 8         Image: Construction of the sector of the sec				005 Preset 5	
Fr       007 Preset 7         Re       008 Preset 8         V1       009 Preset 9         Image: Control of the set o	ANY AND	T State Res In		006 Preset 6	
Regulation         Regulation <thregulation< th="">         Regulation         Regulati</thregulation<>			€—́—	007 Preset 7	
Image: Construction of the sector of the		Fra det		008 Preset 8	
● 口 ② 011 Preset 11 012 Preset 12	E Contraction	Re		009 Preset 9	
ОЦ (2 012 Freed 12	- Company	Sta Shull		010 Preset 10	
010 Prosot 10	A DECEMBER OF BUCCO			011 Preset 11	
				012 Procet 12	
e Type Enable Active Zoom Ratio Edit Del	Add Clear Delete All				

 Table 37. Description of the buttons

Parameters	Function Introduction
Enable	Check the checkbox to enable the Privacy Mask function
Add	Add the current drawing area as Privacy Mask
Clear	Clear the current drawing area
Clear All	Clear all areas you drew before
Name	Support to customize the name of Privacy Mask
Туре	Select the color for the privacy areas, there are eight colors available: White, Black, Blue, Yellow, Green, Brown, Red, Violet
Active Zoom Ratio	Set the value of Active Zoom Ratio according to your need, and then the mask will only appear when the zoom ratio is greater than the predefined value

Mosaic type of Privacy Mask (Optional)

You can set 28 mask areas at most, which includes 24 mask areas and 4 mosaic areas. The mosaic type can maintain the continuity of the picture and improve the visual effect.

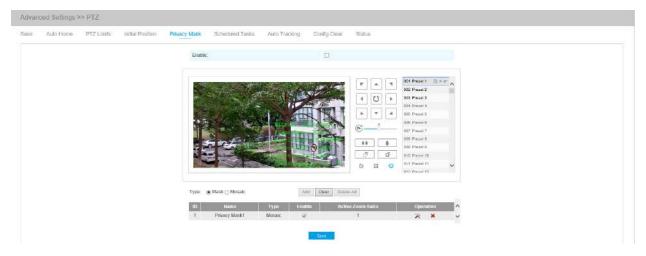


 Table 38. Description of the buttons

Parameters	Function Introduction						
Туре	Select the type to use for the	privacy areas, there are two types available: Mask and Mosaic					
Operation	*	Change the color of Mask area, there are eight colors available: White, Black, Blue, Yellow, Green, Brown, Red and Violet					
	×	Delete the privacy mask area					

## **Schedule Tasks**

You can configure the PTZ camera to perform a certain action automatically in a user-defined time period.

Step1: Enter the Scheduled Task Settings interface:

е	~	Sel	ect All	Í.												
Sun	0	2	4	6	5	8	10	12	14	16	18	20	22	24	1	Clo
Ion	0	2	4		5	8	10	12	14	16	18	20	22	24		Aut Pre
ue	0	2	4		ų.	8	10	12	14	16	16	20	22	24	-	Pat
/ed	0	2	4	ę	5	8	16	12	14	16	18	20	22	24	2	Pat
hu	0	2	4	6		8	10	12	14	16	18	20	22	24		
Fri	0	2	4	1		8	10	12	14	16	18	20	22	24		
Sat	0	2	4	6	3	8	10	12	14	16	18	20	22	24		
							e	lear All								
sks	Interf	erenc	e Setti	ngs												

Step2: Check the checkbox to Enable Scheduled Task.

Step3: Set the schedule and task details.

Step4: Set the Task Recovery Time(from 5 to 720 seconds). You can set the time(a period of inactivity) before the PTZ camera starts the schedule and task details.


Step5: Click button to save all the configurations.

#### **Note:**

- The time of each task cannot be overlapped. Up to 10 tasks can be configured for each day.
- The Scheduled Tasks function is prior to Auto Home function. When these two functions are set at the same time, only the Scheduled Tasks function takes effect.
- You can click button to select or close all schedule of different kinds of tasks.

### **Auto Tracking**

PTZ series cameras support to track the moving objects automatically after you configure this function.

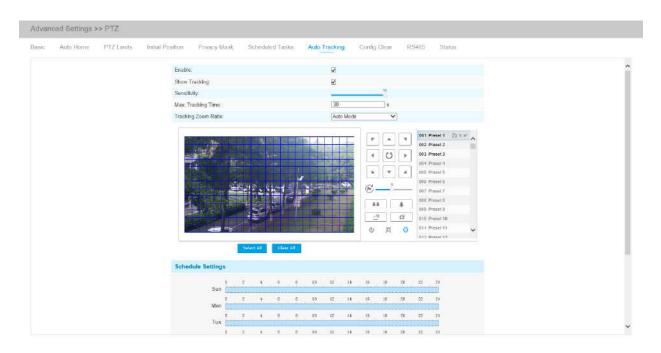

Step1: Check the checkbox to enable Auto Tracking;

Step2: Enable "Show Tracking" to show tracking in Auto Tracking function.

Step3: Set detecting sensitivity;

Step4: Set Max. Tracking Time which must be between 5~300s. The camera will stop tracking when the tracking time is used up.

Step5: Set Tracking Zoom Ratio including Auto Mode and Customize. The camera will automatically adjust tracking zoom ratio when Auto Mode is chosen. When Customize is chosen, user needs to set the tracking zoom ratio first by adjusting zoom button, then camera will automatically track the moving objects according to customized tracking zoom ratio and the object's proportion in the picture at the moment. At the same time, the object will always keep the same proportion in the picture during the tracking process.

Step6: Set Auto Tracking schedule.

Step7: Draw the screen to set the detection region.

Step8: Set Auto Tracking Schedule.

**Note:** Please turn off Auto Home before using Auto Tracking.

### **Config Clear**

Clear All:		
Clear All Presets:		
Clear All Patrols:		
Clear All Patterns:		
Clear All Auto Homes:		
Clear All PTZ Limits:		
Clear Initial Position:		
Clear All Privacy Masks:		
Clear All Scheduled Tasks:		
	Save	

Here you can clear PTZ configurations, including all PTZ configurations, Presets, Patrols, Patterns, Auto Homes, PTZ Limits, Initial Position(Mini PTZ Bullet), Privacy Masks and Scheduled Tasks.

### **RS485**

Protocol:	Pelco-D OPelco-P
Baudrate:	9600 🗸
Data Bit:	8
Stop Bit:	1 ~
Parity:	None 🗸
Flow Control:	None 🗸
PTZ Address:	1
Sa	ve

Here you can clear configure RS485 serial port to control the PTZ of Speed Dome. Protocol, Baudrate, Data Bit, Stop Bit, Parity, Flow Control, PTZ Address should be exactly the same as those of the control device.

**Note:** This function is only for Speed Dome.

## Logs

The logs contain the information about the time and IP that has accessed the camera through web.

Time	Main Type	Sub Type	Param	User	IP	Detail	Log Sea	
2017-09-04 13:35:41	Operation	RTSP Session Stop	*	-	192.168.8.50	stop one session.	~	Main Type:
017-09-04 13:29:18	Operation	RTSP Session Start	32		192 168 8 50	start one session.		All Types
017-09-04 13:29:14	Operation	RTSP Session Stop	1	23	192 168.8.50	stop one session.		Sub Type:
017-09-04 13:28:54	Operation	RTSP Session Start	7		192.168.8.50	start one session.		- Printer -
017-09-04 13:28:53	Operation	Login Remotely	-	admin	192.168.8.50	ā		All Types 🗸
017-09-04 05:50:00	Information	IR-CUT On		-	1			Start Time:
017-09-03 18:35:25	Information	IR-CUT Off	÷	18	1. <del>1.</del> 1	÷	1	2017-09-04 00:00:00
017-09-03 05:43:58	Information	IR-CUT On	5	-	123	2		End Time:
017-09-02 18:37:57	Information	IR-CUT Off	2	12	-	2		2017-09-04 13:30:26
017-09-02 05:41:22	Information	IR-CUT On	e'	-		ų		Search
017-09-01 18:43:37	Information	IR-CUT Off		=1		-		
017-09-01 17:00:57	Operation	RTSP Session Stop		-	192 168.8.50	stop one session.		
017-09-01 16:55:24	Event	Motion Detection Stop	a :					Log Export
017-09-01 16:55:19	Operation	RTSP Session Start	851	1	192.168.8.50	start one session.		Save Period:
017-09-01 16:55:17	Operation	RTSP Session Stop	-		192.168.8.50	stop one session.	5	Permanent V

## Table 39. Description of the buttons

Parameters	Function Introduction
Main Type	There are five main log types: <b>All Type, Event, Operation, Information,</b> <b>Exception, Event</b>
Sub Type	On the premise of main type has been selected, select the sub type to narrow the range of logs
Start Time	The time log starts
End Time	The time log ends
Log Export	Export the logs
Save Period	Set the period of log saving, there are eight options to choose: <b>Permanent</b> and <b>30/60/120/180/240/300/360 Days</b>
Go	Input the number of logs' page

# 5.6 Event

## 5.6.1 Basic Event

## **Motion Detection**

Step1: Check the checkbox to enable the motion detection;

Step2: Select the detection mode;

## Step3: Set motion region;

Enable Motion Detection:	
Detection Mode:	Normal Mode 🗸
Sensitivity:	5 
Onvif Motion ActiveCells Settings:	Normal 🗸
Enable Motion Analysis:	
Set Motion Region	
Select A	ll Clear All


Note: Please draw the screen for setting!

### **Table 40. Description of the buttons**

Parameters	Function Introduction
Enable Motion Detection	Check the checkbox to enable Motion Detection function

Parameters	Function Introduction			
Detection Mode	Normal Mode and Advanced Mode are available for the option. When Advanced Mode is selected, users can configure up to 4 detection regions and sensitivity for each detection region.			
Onvif Motion ActiveCells Settings	Normal and Compatible are available for the option. If the setting of motion region of the third-party software is different from ours, please set this option to Compatible			
Enable Motion Analysis	When Motion Analysis is enabled, the moving region will turn yellow so that the user can know exactly where the motion occurred.			
Select All	Click the button, the motion in the area will be detected			
Clear All	Click the button, the area drawn before will be removed			
Sensitivity	Sensitivity level, 1~10			

Step4: Set motion detection schedule;

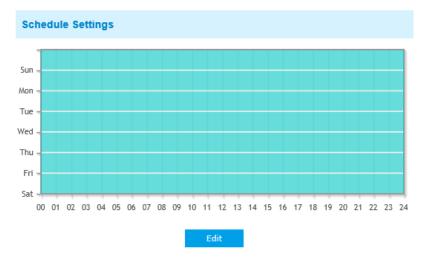

Step5: Set alarm action;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
White LED:	
PTZ Motion:	$\checkmark$

## **Table 41. Description of the buttons**

Parameters	Function Introduction
Save Into Storage	Save alarm recording files into SD Card or NAS
Upload Via FTP	Upload the recording files via FTP
Upload Via SMTP	Upload the files via SMTP
External Output	If the camera equips with External Output, you can enable the action after configuring the trigger duration
Play Audio	If the camera equips with Speaker, you can enable the action after configuring the audio speaker
Play Buzzer	If the camera equips with Buzzer, you can check the checkbox to enable the function.
Alarm to SIP Phone	Support to call the SIP phone after enable the SIP function.
HTTP Notification	<ul> <li>Support to pop up the alarm news to specified HTTP URL.</li> <li>Note:</li> <li>Three HTTP notifications at most can be added to the same event.</li> <li>HTTP Notification supports Basic &amp; Digest authentication</li> </ul>

Parameters	Function Introduction
White LED	When the alarm triggered, White LED will turn on to warning the detected objects (Only for Mini PTZ Bullet).
PTZ Motion	When the motion alarm triggered, PTZ Motion allows the camera move the lens to the motion triggered position and zoom in.
Call Preset/ Call Patrol/Call Pattern (only for External Input)	When the motion alarm triggered, the specified preset/patrol/pattern can be called.

**Note:** The **HTTP notification** function is just one way for camera to send messages to VMS Software. And it's the VMS that defines what the messages mean and decides what to do after receiving this kind of messages. So, we can use the **HTTP Notification** function of our cameras only if the VMS supports this kind of message format.

Here will take the Digifort as an example to introduce the HTTP Notification function.

The following are the detail steps of setting for HTTP Notification in Digifort VMS and our cameras.

Step1: Enable Alarm, set Motion Region and detection Schedule;

Step2: Check the HTTP Notification as Alarm Action, and fill the fields. Then save the alarm setting. You can add up to three HTTP notifications to the same event;

HTTP Notification:	$\checkmark$
HTTP Notification URL:	URL 1 🗸
Enable:	$\checkmark$
Trigger Interval:	5 (0-900) s
URL:	192.168.8.75:8601/Interface/Ca meras/MotionDetection/Notify? Camera=annie
User Name:	admin
Password:	•••••

HTTP User Name: admin (the user name of your camera)

HTTP Password: ms1234 (the password of your camera)

HTTP Notification URL:

http://IP:8601/Interface/Cameras/MotionDetection/Notify?Camera=CameraName

**IP** refers to the PC's IP where the Digifort installed.

**8601** is the port for Motion signal in Digifort.

CameraName is the camera name you set in Digifort VMS, like the picture shown below.

Close al		General								
Camera General		🦕 General camera data								
Lens										
	- 11	Camera name	Camera description	۱						
Motion detection	_	annie	sdf							
Audio		Manufacturer	and terms and there are							
Image filters		ONJF	Open Network Video Interfi	ace Forum						
Streaming		Camera model		Firmware				Channel		
Media profiles	-	ON/IF Conformant Device	•	1.02 or greater			+	1	3	
Recording		Camera address		Part (80)		User		Password		
Live view	-11	192.168.8.173		80	3	edmin		•••••	K	
Recording	- 11	Camera shortcut	Camera shortcut				Connection timeout (Miliseconds)			
Settings	-					30000			đ	
Archivino	-11	Recording directory								
	_	E:\2015\dsf\							12	
Rights		👿 Activate camera								
Users										
PTZ										
Settings										
Presets										
PTZ Patrol										
Auxiliany										
Joystick										
Menu control										

### Example:

http://192.168.8.75:8601/Interface/Cameras/MotionDetection/Notify?Camera=annie,

this URL format is exactly supported by Digifort VMS, so we can set as above to our cameras and get it work well.

Step3: choose use motion detection by external notification;

Step4: If successful, you can see the device icon turns yellow in the Surveillance when the camera is under Motion Detection Alarm;



So, it's the VMS Software which decides whether we can use this function successfully.

Step5: Set alarm settings.

5 seconds V
1 second V
Auto
30 seconds 🗸
Edit
Auto 🔽
Aı

### Table 42. Description of the buttons

Parameters	Function Introduction
Record Video Sections	Six different periods are available(5, 10, 15, 20, 25, 30 sec)
Snapshot	The number of snapshot, 1~5
Snapshot Interval	This cannot be edited unless you choose more than 1 to Snapshot
External Output Action Time	Length of time an alarm lasts, this cannot be edited unless you enable the External Output on the Alarm Action firstly.
Audio Action Settings	Set the audio schedule to trigger different audio files and action times in different time, which is corresponded to alarm action.
Play Audio Interval	Auto/ 10 seconds/ 30 seconds/ 1 minute/ 5 minutes/ 10 minutes are available.
White LED Flash Mode	<b>Twinkle:</b> The White LED will continuous flashing before recovered; <b>Always:</b> The White LED will always open before recovered.

Parameters	Function Introduction
White LED Flash Time	The duration of flash. Twinkle from 1 second to 10 seconds; Always from 1 second to 60 seconds.
Proportional Zoom Times	Support to zoom proportionally when PTZ Motion is triggered.
PTZ Motion Recovery Time	The duration of one alarm. It must be longer than flash time.


# **F** Note:


- Recovery time should not be less than flash time.
- You can customize the schedule of Audio Action.

Sched	ule Se	ttings				Default	udio Fil	~	× ]					
Default	~	Select	AN.		[	1 00]:[(		4]:00	3					
Sun	0	2	4	6	0	10		19	16	10	20	22	24	👱 Default
	9 0	2	4	6	8	10	12	14	16	18	20	22	24	<u> </u>
Mon			mui mi				100							_ 2
Tue	0	2	4	6	8	10	12	14	16	18	20	22	24	- 3
Wed	0	2	4	5	8	10	12	14	16	18	20	22	24	
	0	2	4	6	0	10	12	14	16	10	20	22	24	
Thu		dar og h		e sui e si		11	is - +5				112 - sin			
Fri	0	2	4	6	0	10	12	14	16	18	20	22	24	
	0	2	4	6	8	10	12	14	16	18	20	22	24	Copy to other Events:
Sat	Loontroor													Edit

# Audio Alarm

Enable the Audio before using Audio Alarm function.

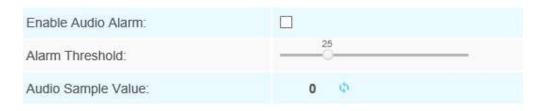

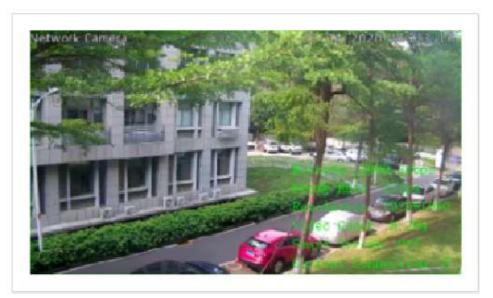


Schedule Settings

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto
External Output Action Time:	30 seconds
Audio Action Settings:	Edit
Play Audio Interval:	Auto
Sa	ve

Refer to the table in Motion Detection chapter for the meanings of the items, here will not repeat again.

# **External Input**

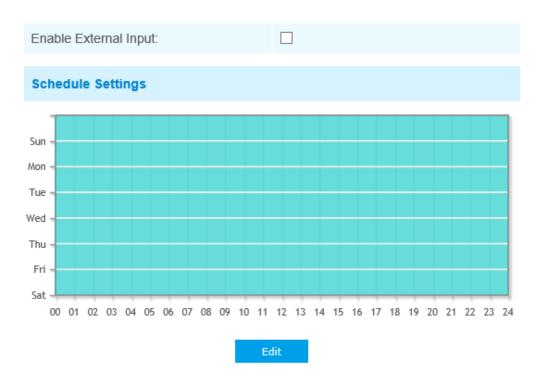

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
External Output:	(Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	

5 seconds	~
3	~
1 second	$\checkmark$
Auto	$\checkmark$
30 seconds	$\checkmark$
Edit	
Auto	$\checkmark$
	3 1 second Auto 30 seconds Edit

Refer to the table in Motion Detection chapter for the meanings of the items, here will not repeat again.

# **External Output**

External Output			
Normal Status:		○ Open   Grounded	
Current Status:		Grounded	
	Test	Save	

Please set the **Normal Status** firstly, when the **Current Status** is different with **Normal Status**, it will lead to the alarm.

# Exception

	Network Disconnected
Alarm Type	IP Address Conflict Record Failed
Enable Record Failed Alarm:	SD Card Full SD Card Uninitialized
	SD Card Error No SD Card
Alarm Action	
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	☐ (Please configure the Audio Action Settings and Audio Interval.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto
External Output Action Time:	30 seconds
Audio Action Settings:	Edit
Play Audio Interval:	Auto
Sa	ve

# Table 43. Description of the buttons

Parameters	Function Introduction
Alarm Type	Network Disconnected, IP Address Conflicted, Record Failed, SD Card Full, SD Card Uninitialized, SD Card Error and No SD Card are available Check the checkbox to enable the alarm type you selected

Parameters	Function Introduction
	Save Into Storage: Save alarm recording files into SD Card
	<b>Upload Via Email:</b> Upload alarm recording files via email. This option is available for Record Failed, SD Card Full, SD Card Uninitialized, SD Card Error and No SD Card
	<b>External Output:</b> If the camera equips with External Output, you can enable the action after configuring the trigger duration
	<b>Play Audio:</b> If the camera equips with Speaker, you can enable the action after configuring the audio speaker
	Alarm to SIP Phone: Support to call the SIP phone after enable the SIP function.
	HTTP Notification: Enable the HTTP Notification
	<b>HTTP Notification URL:</b> There are three types of HTTP Notification URL, including URL1, URL2 and URL3.
Alarm Action	<ul> <li>Enable: Check the checkbox to enable a kind of HTTP Notification URL.</li> <li>Trigger Interval: Trigger Interval of camera pushing information to some thirdparty devices.</li> <li>HTTP Method: There are two HTTP push methods, including Post and Get.</li> <li>URL: Camera can use the API URL to send face detection information to back-end devices when the detected face is captured. The format of the API URL depends on the back-end devices, including server, port and other required formats. For example, if you want to send information to Milesight VMS Enterprise, the format of the API URL is as follows: http://VMS server IP: VMS Port/api/httpEvent</li> </ul>
	<b>Note:</b> It supports HTTPS for HTTP Post.
	User Name: Receiver name.     Password: Receiver Password.
	<b>Play Buzzer:</b> If the camera equips with Buzzer, you can check the checkbox to enable the function
	White LED: The White LED could flash as a warning signal when the alarm triggered if the camera equipped with it(only for Mini PTZ Bullet)

Parameters	Function Introduction
	Record Video Sections: Six different periods are available(5, 10, 15, 20, 25, 30 sec)
	Snapshot: The number of snapshot, 1~5
	<b>Snapshot Interval:</b> This cannot be edited unless you choose more than 1 to Snapshot
	Email Triggered Interval: Auto / 10 seconds / 20 seconds / 40 seconds / 60 seconds / 100 seconds / 5 minutes / 15 minutes / 30 minutes / 1 hour / 8 hours / 12 hours / 24 hours are available. This cannot be set unless when you choose Record Failed, SD Card Full, SD Card Uninitialized, SD Card Error or No SD Card and check the Upload via Email checkbox of related Alarm type
	<b>External Output Action Time:</b> Length of time an alarm lasts, this cannot be edited unless when you enable the External Output on the Alarm Action firstly
Alarm Setting	Audio Action Settings: Set the audio schedule to trigger different audio files and action times in different time, which is corresponded to alarm action
	<b>Play Audio Interval:</b> Auto/ 10 seconds/ 30 seconds/ 1 minute/ 5 minutes/ 10 minutes are available, this cannot be edited unless when you check the Play Audio checkbox firstly
	White LED Flash Mode: Twinkle and Always are available.
	White LED Flash Time: The duration of flash. Twinkle from 1 second to 10 seconds; Always from 1 second to 60 seconds
	White LED Effective Mode: Always, Light Environment and Customize are available. Always Mode allows to keep White LED always on. Light Environment Mode allows to set the Effective Light Intensity to turn on White LED basing on Current Light Intensity. Customize Mode allows to set the start time and the end time to control White LED

# 5.6.2 VCA Event

Smart Event uses Milesight VCA(Video Content Analysis) technology, which provides advanced, accurate smart video analysis for Milesight network cameras. Powered by AI chip, the new generation video analytics is capable of recognizing vast attributes of human, vehicle, and object pattern recognition models. As vehicle and human related events are very important in security monitoring, the filtering is supported to better optimize the efficiency.

#### - Note:

• There are AI and non-AI cameras in Milesight network cameras.

# **Region Entrance**

Region entrance helps to protect a special area from potential threat of suspicious person's or object's entrance. An alarm will be triggered when objects enter the selected regions by enabling region entrance.

Region Entrance Interface (for non-AI cameras)

egion Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Grossing Lottering Human Detection Object Left/Removed	
			Enable Region Entrance Detection:	
			Sensitivity	
			Effective Region Settings: Normal	
			Set Entrance Detaction Region	
			Detection Region.	
			Object Size Limits:	
			@Min. Size: 3 pixel(1*1-320*240)	
			(Max Size 320) * 240 pixel(1*1~320*240)	

Region Entrance Interface (for AI cameras)

Event >> VCA 8	Svent				
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Grossin	Loitering Object Left/Removed	
			Enable Region Entrance Detection	8	^
			Sensitivity		
			Detection Object	🗷 Human 🛛 Vehicle	
			Effective Region Settings:	Normal	
			Set Entrance Detection Region		
			Detection Regian:	Edd	
			Object Size Limits:	Car Car	1
			- 99	- 40	
			Min. Sizu: 3	pixel(1+1-320*240)	~

Step1: Enable region entrance detection and set detecting sensitivity;

Choose detection object. Check Human or Vehicle attribute, and the camera will alarm once detecting people or vehicle and triggering related events;

**Note:** All AI Cameras support this function.

Step2: Set entrance detection region. If you choose **NormalMode**, it supports configuring the detection region for the current area. If you choose **AdvancedMode**(Only for PTZ series), it supports configuring the detection region for different PTZ presets (Only support Preset 1~4 so far). And set object size limits.

Parameters	Function Introduction
Minimum Size	Draw the screen or input pixel number to set the minimum size of the detected object. When the object is smaller than this size, it will not be detected. The default minimum size is 3*3.
Maximum Size	Draw the screen or input pixel number to set the maximum size of the detected object. When the object is larger than this size, it will not be detected. The default maximum size is 320*240.

#### Table 44. Description of the buttons

Step3: Set detection schedule;

Step4: Set alarm action. When enabling PTZ Auto Tracking and Region Entrance Detection, camera will automatically track objects and trigger an alarm if objects enter the selected regions;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	(Please configure the External Output     Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 🗸
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post 🗸
Snapshot:	
URL:	$\langle \rangle$
User Name:	
Password:	
PTZ Auto Tracking:	<ul> <li>(Please enable the Auto Tracking.)</li> </ul>

Step5: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when objects enter the selected regions, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🗸


#### **Note:**

- Please enable Auto Tracking on the PTZ interface first.
- PTZ Auto Tracking is checked by default.

#### **Region Exiting**

Region exiting is to make sure that any person or object won't exit the area that is being monitored. Any exit of people or objects will trigger an alarm.

Region Exiting Interface (for non-AI cameras)

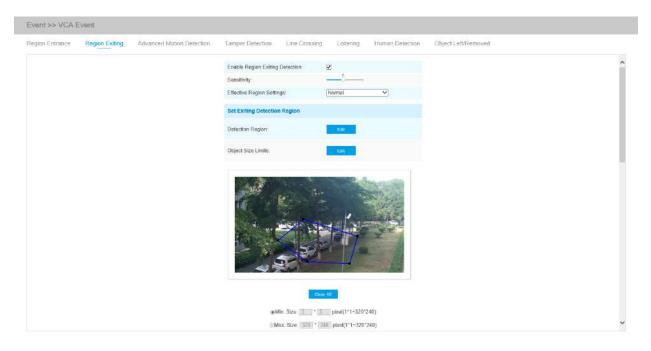

Region Exiting Interface (for non-AI cameras)

Event >> VCA I	Event				
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Crossi	Lottering Object Left/Removed	
			Enable Region Exiting Detection:	8	
			Sensitivity.		
			Detection Object:	2 Human 2 Vehicle	
			Effective Region Settings:	[Normal V]	
			Set Exiting Detection Region		
			Detection Region	Eide	
			Object Size Limits:	Eda	
				ar AB	
			·Min Size 3 *	pixel(1*1-320*240)	

Step1: Enable region exiting detection and set detecting sensitivity;

Choose detection object. Check Human or Vehicle attribute, and the camera will alarm once detecting people or vehicle and triggering related events;

**Note:** All AI Cameras support this function.

Step2: Set Exiting Detection Region. If you choose NormalMode, it supports configuring the

detection region for the current area. If you choose AdvancedMode(Only for PTZ series), it

supports configuring the detection region for different PTZ presets (Only support Preset 1~4 so far). And set object size limits;

Step3: Set detection schedule;

Step4: Set alarm action. When enabling PTZ Auto Tracking and Region Exiting Detection, camera will automatically track objects and trigger an alarm if any person or objects exit the area that is being monitored;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	(Please configure the External Output     Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 V
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post V
Snapshot:	
URL:	$\bigcirc$
User Name:	
Password:	
PTZ Auto Tracking:	(Please enable the Auto Tracking.)

Step5: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when objects exit the selected regions, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto

# **Advanced Motion Detection**

Different from traditional motion detection, Milesight advanced motion detection can filter out "noise" such as lighting changes, natural tree movements, etc. When an object moves in the selected area, it will trigger alarm.

Advanced Motion Detection Interface (for AI cameras)

egion Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Crossing	Loitering Human	Detection Object Left/Removed	
			Enable Advanced Motion Detection	R		
			Sensitivity			
			Ignore Short-Lived Mation:	[O# V]		
			Effective Region Settings	Noursal V		
			Set Advanced Motion Detection Regio	205		
			Detection Region:	Edit		
			Object Size Limits:	zale		
			ct+	ar All		

Advanced Motion Detection Interface (for AI cameras)

Event >> VCA I	Event >> VCA Event						
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Grossin	g Lottering Object Le	Removed		
			Enable Advanced Motion Detection:	2			^
			Semiltivity.				
			Ignore Short-Lived Motion.	0#			
			Detection Object	E Human SI Vehicle			
			Effective Region Settings:	Normal			
			Set Advanced Motion Detection Reg	ion			
			Detection Region:	Ede			ι.
			Object Size Limits:	544			
				ase: All			~

Step1: Enable region detection and set detecting sensitivity;

Step2: Set Ignore Short-Lived Motion time. If you set the time, when the moving duration of an object is within the setting time, the alarm will not be triggered;

Choose detection object. Check Human or Vehicle attribute, and the camera will alarm once detecting people or vehicle and triggering related events;

**Note:** All AI Cameras support this function.

Step3: Set advanced motion detection region. If you choose NormalMode, it supports configuring

the detection region for the current area. If you choose AdvancedMode(Only for PTZ series), it

supports configuring the detection region for different PTZ presets (Only support Preset 1~4 so far). And set object size limits.

Step4: Set detection schedule;

Step5: Set alarm action;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	(Please configure the External Output     Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 🗸
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post 🗸
Snapshot:	
URL:	0
User Name:	
Password:	
PTZ Motion:	

Step6: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when object motion time is longer than the Ignore Short-Lived Motion time which you set in the selected regions, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🔽

#### 📑 Note:

• The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.

• Ignore Short-Lived Motion time is to avoid false alarm caused by instant object movement within time setting.

# **Tamper Detection**

Tamper Detection is used to detect possible tampering like the camera being unfocused, obstructed or moved. This functionality alerts security staff immediately when any above-mentioned actions occur.

Event >> VCA	Event							
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection	Line Crossing	Loitering	Human Detection	Object Left/Removed	
		Enable Ta	mper Detection:					^
		Sensitivity						
		Schedule	Settings					
		Sum Mon Tue Wed Thu Fri Sat	92 03 04 05 06 07 00 06	10 11 12 13 14 15 16 1 Cdli	7 18 19 20 21	22 23 24		
		Alarm Ac	tion					
		Save Into	Storage:	III File Format (Please mount		<u> </u>		
		Upload Vi	a FTP:	🗌 File Format 🛛	Record	<u> </u>		
		Upload Vis	a Email:	File Format (Please enable		<u> </u>		~

Step1: Enable Tamper Detection and set detecting sensitivity;

Step2: Set detection schedule;

Step3: Set alarm action;

Alarm Action			
Save Into Storage:	File Format: Record		
Upload Via FTP:	File Format: Record		
Upload Via Email:	File Format: Snapshot		
External Output:	☐ (Please configure the External Output Action Time.)		
Play Audio:	(Please enable the Audio Speaker.)		
Alarm to SIP Phone:	(Please open the SIP.)		
HTTP Notification:			
HTTP Notification URL:	URL 1 V		
Enable:			
Trigger Interval:	0 (0-900) s		
HTTP Method:	Post 🗸		
Snapshot:			
URL:	< >		
User Name:			
Password:			

Step4: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when possible tampering is detected, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute s(1~999)
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🗸

**Note:** The algorithm supports defocus detection in Tamper Detection function.

# Line Crossing

Line Crossing detection is designed to work in most indoor and outdoor environment. An event will be triggered every time when the camera detects objects crossing a defined virtual line.

Line Crossing Interface(for non-AI cameras)

Event >> VCA E	Event					
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Crossi	ng Lotening Human Detec	ction Object Left/Removed	
			Line Crossing	1 4		^
			Enable Line Crossing Detection	2		
			Direction:	A->8 V		
			Sensitivity;	· <u></u> !		
			Effective Region Settings.	[Normal V		
			Set Detection Lines			
			Detection Line	Edit		
			Object Size Limits:	Edit		
				fuar Lind		ч

*Line Crossing Interface(for AI cameras)* 

Event >> VCA E	LVORL			
Region Entrance	Region Exiting Advanced Motion De	tection Tamper Detection Line Cri	ssing Lotening Object Left/Removed	
		Line Crossing	1	
		Enable Line Crossing Detection:	2	
		Direction:	A>B V	
		Detection Object	🗹 Human 🗹 Vehicle	
		Sensitivity.		
		Effective Region Settings:	Normal V	
		Set Detection Lines		
		Detection Une:	Edda -	
		Object Size Limits.	- Gan -	

#### Settings steps are shown as follows:

#### Step1: Choose a line number;

Line Crossing:	1
Enable Line Crossing Detection:	3
Direction:	A->B ✓
Sensitivity:	5

#### Step2: Enable Line Crossing Detection and define its direction;

Line Crossing:	1 🗸
Enable Line Crossing Detection:	
Direction:	A->B B >A
Sensitivity:	A<->B

Choose detection object. Check Human or Vehicle attribute, and the camera will alarm once detecting people or vehicle and triggering related events;

**Note:** All AI Cameras support this function.

Step3: Set detecting sensitivity;

Step4: Draw detection lines. If you choose **NormalMode**, it supports configuring the detection lines for the current area. If you choose **AdvancedMode**(Only for PTZ series), it supports configuring different detection lines for different PTZ presets (Only support Preset 1~4 so far). And set object size limits.

Step5: Set detection schedule;

Step6: Set alarm action. When enabling PTZ Auto Tracking, camera will automatically track objects and trigger an alarm if detecting objects crossing a defined virtual line;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 V
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post V
Snapshot:	
URL:	$\bigcirc$
User Name:	
Password:	
PTZ Auto Tracking:	(Please enable the Auto Tracking.)

Step7: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when objects cross a defined virtual line, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🗸

**Note:** Milesight network cameras allows to set up to four lines at a time. There are three direction modes to choose for triggering alarm. " $A \rightarrow B$ " means when there is any object crossing the line from the "A" side to the "B" side, the alarm will be triggered. " $B \rightarrow A$ " vice versa. " $A \leftrightarrow B$ " means that the alarm will be triggered when objects cross line from either side.

#### Loitering

When objects are loitering in a defined area for a specific period of time, it would trigger an alarm.

Event >> VCA Event Region Entrance Region Exiting Advanced Motion Detection Tamper Detection Line Crossing Lotering Human Detection Object Left/Removed Enable Loitering Detection.  $\mathbf{Z}$ Min. Loitering Time: (3-1800) s 7 Effective Region Settings: V Normal et Loitering Detection Region Detection Region Object Size Limits Min Size: 3 \* 3 pixel(1\*1-320\*240) Max Size 220 \* 240 pixel(1\*1-320\*240)

Loitering Interface(for non-AI cameras)

Loitering Interface(for AI cameras)

Event >> VCA	Event				
Region Entrance	Region Exiting	Advanced Motion Detection	Tamper Detection Line Gro	ising Lotering Object Left/Removed	
			Enable Loitering Detection	20	
			Min. Loitering Time:	7(3=1800) s	
			Detection Object	2 Human 2 Vehicle	
			Effective Region Settings	[Normal V	
			Set Loitering Detection Region		
			Detection Region	Edda	
			Object Size Limits	eve	
				Chair All	
			• Min. Size:	* 1 pixel(1*1-320*240)	

Step1: Enable loitering detection and set minimum loitering time;

Choose detection object. Check Human or Vehicle attribute, and the camera will alarm once detecting people or vehicle and triggering related events;

**Note:** This function is supported for all AI cameras.

Step2: Set loitering detection region. If you choose **NormalMode**, it supports configuring the detection region for the current area. If you choose **AdvancedMode**(Only for PTZ series), it supports configuring the detection region for different PTZ presets (Only support Preset 1~4 so far). And set object size limits.

Step3: Set detection schedule;

Step4: Set alarm action. When enabling PTZ Auto Tracking and Loitering Detection, camera will automatically track objects and trigger an alarm if objects have been loitering in a defined area for more than the Min. Loitering Time;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	(Please configure the External Output     Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 🗸
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post V
Snapshot:	
URL:	$\langle \rangle$
User Name:	
Password:	
PTZ Auto Tracking:	✓ (Please enable the Auto Tracking.)


Step5: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when objects loiter in the selected regions, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds 🗸
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🗸

**Note:** After setting minimum loitering time from 3s to 1800s, any objects loitering in the selected area over the minimum loitering time will trigger the alarm.

#### **Human Detection**

Human detection is used for figuring out whether an object is a human or not. Once human detection is enabled, when there is an object appearing in the detecting area, an ID will show on the frame. If the object is a person, it will mark as "person". When the Show Tracks is enabled, the tracks of the moving object will show on the screen.

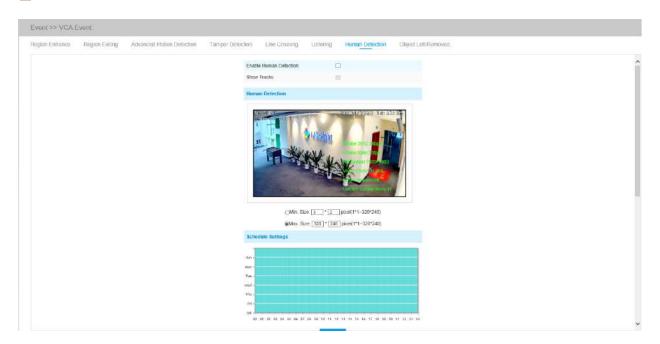

**Note:** Human Detection tab is no longer displayed separately for all AI cameras.

Step1: Enable Human Detection;

Step2: Check Show Tracks;

Step3: Set object size limits;

Step4: Set schedule settings;

Step5: Set alarm action. When enabling PTZ Auto Tracking, camera will mark as "person" and automatically track the person if the detected object is a person;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	□ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
White LED:	
PTZ Auto Tracking:	$\checkmark$

Step6: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when detected object is marked as "person", External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto

# **Object Left/Removed**

Object Left can detect and prompt an alarm if an object is left in a pre-defined region. Object Removed can detect and prompt an alarm if an object is removed from a pre-defined region.

Object Left/Removed Interface(for non-AI cameras)

Event >> VCA.I	Event					
Region Entrance	Region Exiling	Advanced Motion Detection	Tamper Detection Line Gr	ossing Lodering Human Detection	Object Left/Removed	
			Enable Object Left:			
			Enable Object Removed:	R		
			Min. Time.	20 (10~1800)s		
			Sensitivity:	<u> </u>		
			Effective Region Settings.	Normal		
			Set Detection Region			
			Dotoction Region	Edm		
			Object Size Limits	ndu.		
				Cheer All		

Object Left/Removed Interface(for AI cameras)

tegion Enfrance Region Exiling	Advanced Motion Detection	Tamper Detection Line Cre	assing Lottering Object Lett/Removed	
		Enable Object Left:	2	
		Enable Object Removed:	N	
		Mirs Time:	20 (10~1800)s	
		Sensitivity:		
		Effective Region Settings:	Normal	
		Set Detection Region		
		Detection Region	Edda -	
		Object Size Limits:	Edu	
		BERN CHI-201 CHINAST		

Step1: Enable Object Left or Object Removed(Or you can enable both features at the same time);

Step2: Set minimum time;

Step3: Set detecting sensitivity;

Step4: Set detection region. If you choose **NormalMode**, it supports configuring the detection region for the current area. If you choose **AdvancedMode**(Only for PTZ series), it supports configuring the detection region for different PTZ presets (Only support Preset 1~4 so far). And set object size limits.

Step5: Set detection schedule;

Step6: Set alarm action. When enabling PTZ Auto Tracking, camera will automatically track objects and trigger an alarm if an object is left or removed in a defined area;

Alarm Action	
Save Into Storage:	File Format: Snapshot (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	(Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	$\checkmark$
HTTP Notification URL:	URL 1 V
Enable:	$\checkmark$
Trigger Interval:	0 (0-900) s
HTTP Method:	Post V
Snapshot:	
URL:	$\langle \rangle$
User Name:	
Password:	
PTZ Auto Tracking:	✓ (Please enable the Auto Tracking.)

Step7: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when an object is left/removed from the selected regions, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute s(1~999)
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto 🗸


#### **Note:**

• After setting minimum time from 3s to 1800s, any objects are left in the selected area or removed from the selected area over the minimum time will trigger the alarm.

# 5.6.3 People Counting

### **People Counting**

People Counting is able to count how many people enter or exit during the setting period.

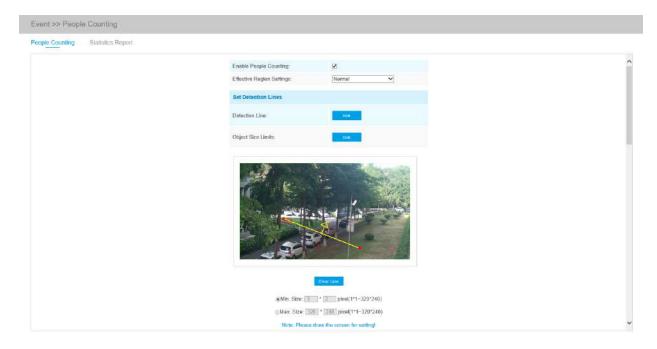

Settings steps are as shown below:

Step1: Enable People Counting;

Step2: Set detection line and object size limits. If you choose **NormalMode**, it supports configuring the detection line for the current area. If you choose **AdvancedMode**(Only for PTZ series), it supports configuring the detection line for different PTZ presets(Only support Preset 1~4 so far).

Step3: Set detection schedule;

Step4: Set counting OSD;

Counting OSD	
Show Video Title:	
Font Size:	Small V
Font Color:	<b>Q</b>
Text Position:	Top-Left 🗸

The OSD of the people counting supports manual reset and automatic zeroing;

Counting Reset:	Reset
Enable Auto Reset:	$\checkmark$
Day:	Everyday 🗸
Time:	00:00:00

Step5: Set alarm trigger. Alarm will be triggered when the thresholds reaches to a certain value from 1 to 9999.

Alarm Trigger	
Enable Alarm	$\checkmark$
Thresholds:	In:       9999         Out:       9999         Capacity:       9999         Sum:       9999

Step6: Set alarm action;

Alarm Action	
Save Into Storage:	File Format: Record (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 🗸
Enable:	$\checkmark$
Trigger Interval:	0 (0-900) s
HTTP Method:	Post V
Snapshot:	
URL:	$\langle \rangle$
User Name:	
Password:	

Step7: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when the thresholds reach to a certain value you set, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto

**Note:** Crossing along the direction of the arrow will record as "In", opposite is "Out".

### **Regional People Counting**

When enabling Regional People Counting, users can check the real-time number of people and the time of each person's stay in the detection region.

Event >> People C	Counting				
People Counting R	tegional People Counting	Statistics Report			
			Regional People Counting	1 4	^
			Enable:	2	
			Sensitivity:	<u> </u>	
			Effective Region Settings:	[Normal V]	
			Set Detection Region		
			Detection Region	Edit	
			Object Size Limits:	nite	
			BILLE DATEST CAUSES		
			#Min Size	* 3 pixel(1*1-320*240)	

Settings steps are as shown below:

Step1: Enable Region People Counting;

Step2: Set detection region and object size limits;

Step3: Set detection schedule;

Step4: Set alarm trigger. Alarm will be triggered when the thresholds exceeds the certain value.

Alarm Trigger	
Max. Stay:	☑ 60
Min. Stay:	☑ 1
Max. Length of Stay:	<b>√</b> 30 s

Step6: Set alarm action;


Alarm Action	
Save Into Storage:	File Format:       Record         (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
External Output:	☐ (Please configure the External Output Action Time.)
Play Audio:	(Please enable the Audio Speaker.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	
HTTP Notification URL:	URL 1 V
Enable:	
Trigger Interval:	0 (0-900) s
HTTP Method:	Post 🗸
Snapshot:	
URL:	undefined
User Name:	undefined
Password:	•••••

Step7: Set alarm settings. If you enable External Output and choose Constant External Output Action Time, when the thresholds exceeds the certain value you set, External Output Action alarm time will be always constant till the alarm is released.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot:	3 🗸
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto 🗸
External Output Action Time:	Customize 10 seconds
	30 seconds 1 minute
Audio Action Settings:	5 minutes 10 minutes Constant
Play Audio Interval:	Auto

Save

#### **Note:**

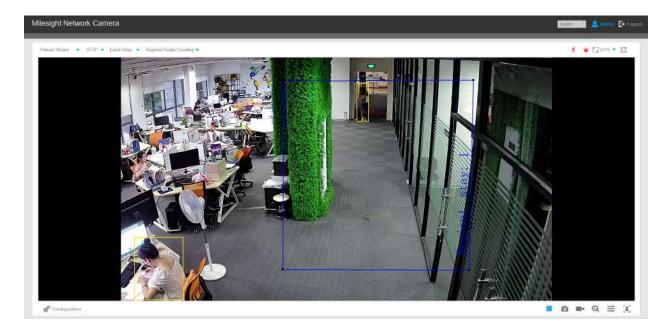

• Users can check the real-time number of people and the time of each person's stay in the detection region on Live View interface.

- For Regional People Counting, please make sure your camera model is MS-CXXXX-XXC.
- Support up to 4 detection regions for regional people counting.

#### **Statistics Report**

The results during the enabling period will be displayed on "Statistics Report" interface.

ple Counting Statistics Report		
	Statistics Result	Report Search
		Main Type:
		(Feople Counting 🗸
		Report Type:
		Daily Report 🛛 💌
		Statistics Type:
		People Entered 💙
		Start Time:
		2021-02-20 00.00.00
		- Search -
		Report Export
		Auto Export

Step 1: Select Main Type;


Step2: Select Report Type including Daily Report, Weekly Report, Monthly Report and Annual Report;

Step3: Select Statistics Type including People Entered, People Exited and Sum;

Step4: Select Start Time, then click Search button, the camera will automatically count the data for the day/ week/ month/ year (based on the report type selected by the user) from the start

time and generate the corresponding report. Moreover, you can also click or to switch display mode of Statistics Report as shown below.

People Counting-Statistics Report (Line Chart)

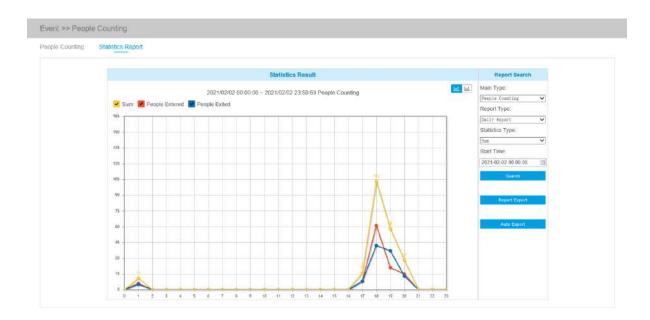


People Counting-Statistics Report (Bar Chart)



Regional People Counting-Statistics Report (Line Chart)



Regional People Counting-Statistics Report (Bar Chart)

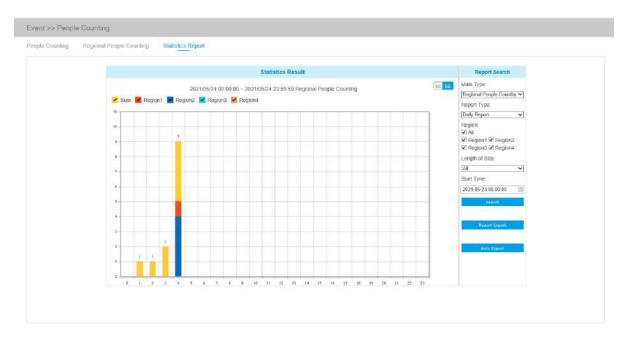

Step5: Click Report Export button to pop up the Export window as shown below, and you can choose File Format to export the report to local.

File Format:		
	PNG	CSV
	Save	
	Save	

Step6: Click

Auto Export

button to pop up the Statistics Report Settings as shown below.

Statistics Report Settings		
Export Type:	People Counting	$\checkmark$
Enable:		
Day:	Everyday	$\checkmark$
Time:	00:00:00	
Export Time Range:	Last 1 day	$\checkmark$
Export to:	FTP Email	Storage
s	ave	

- Set Export Type. User can check People Counting. When People Counting is checked, the gray item becomes editable as shown below;
- Set Day. User can choose Everyday to export daily reports, while choosing others to export reports on a specific day of the week;

Statistics Report Settings Export Type:	Regional People Counting V
Export Type.	
Enable:	
Length of Stay:	All More Than Less Than 60 ✓ s
Day:	Everyday 🗸
Time:	00:00:00
Export Time Range:	Last 1 day 🗸
Export to:	🗌 FTP 🔄 Email 🗌 Storage

• Set Time. User can choose the time of day to export the Statistics Report automatically, click the calendar icon to pop up the following Quick Selection;

Statistics Report Settings	
Export Type:	Regional People Counting V
Enable:	
Length of Stay:	All 🗸
Day:	Everyday Sunday
Time:	Monday Tuesday
Export Time Range:	Wednesday Thursday
Export to:	Friday Saturday Storage
	Save

• Set Export Time Range;

Day (Choose Everyday)

Statistics Report Settings	
Export Type:	People Counting
Enable:	V
Day:	Everyday V
Time:	00:00:00
Export Time Range:	Last 1 day Export All
Export to:	🗌 FTP 🗌 Email 🗌 Storage
	Save

#### Day (Choose Week)

Export Type:	Regional People Counting V
Enable:	$\mathbf{\Sigma}$
.ength of Stay:	All 🗸
Day:	Quick Selection
sul.	00:00:00
lme:	00:00:15
Export Time Range:	00:00:30
	00:00:45
Export to:	00:00:59
	Time 0 : 0 : 0

• Set the destination path of the automatically exported report. The report can be exported to FTP/ Email/Storage automatically as the form of an Excel spreadsheet according to the day, time and export time range you set. Then click "Save".

Export Type:	People Counting
Enable:	V
Day:	Everyday 🗸
Time:	00:00:00
Export Time Range:	Last 1 day 🗸 🗸
Export to:	🗆 FTP 🛛 Email 🔽 Storage
	Save

**Note:** If the current Statistics Report is generated, it will be saved as a csv form.

# 5.6.4 Face Detection (Optional)

The Face Detection function can detect the face appearing in the drawn area and support saving face snapshots into Storage, upload via FTP or Email, display in Live View.

#### General

**Note:** Currently Face Detection is only supported by AI cameras.

Event >> Face Detection General Face Capture Advanced		
	Enable Face Detection	
	Min, Size:	
	Set Face Detection Region	
	Detection Region: Edit.	
	Shield Region	
	With the screen for setting!	
	Clear	
	Schedule Settings	

Settings steps are as shown below:

Step1: Enable Face Detection;

Step2: Set Min. Object Size;

Step3: Set detection region, you can drag the detection region to adjust the size. Only faces in this region will be detected;

Step4: Set Shield Region is to make faces in the some places of detection region be not detected. The faces can be set to be not detected in some places of detection region via setting the Shield Region. You can draw a Shield Region in the preview interface firstly, then click Add button. There are at most four Shield Region drawn are available;

Step5: Set detection schedule and click "Save".

#### **Face Capture**

Here you can make configuration for face capture snapshot.


Face Capture Configuration	
Capture Mode:	Quality Priority
Capture Quality:	0
Snapshot Type:	Face Only 🗸 🗹 Background
Snapshot:	1
Record Video Sections:	30 seconds
Save Into NAS:	File Format: Snapshot
Upload Via FTP:	🗆 File Format: All 🗸
Upload Via Email:	File Format: Snapshot
Face Detection Message Post Setting	5
Enable Face Detection Message Post:	
Post Type:	HTTP 🗸
HTTP Notification URL:	URL 1 🗸
HTTP Notification URL: Enable:	URL 1 🗸
Enable:	
Enable: Trigger Interval:	✓ (0-900) s
Enable: Trigger Interval: HTTP Method:	✓ (0-900) s
Enable: Trigger Interval: HTTP Method: Snapshot:	✓ (0-900) s
Enable: Trigger Interval: HTTP Method: Snapshot: URL:	✓       0       (0-900) s       Post       ✓

 Table 45. Description of the buttons

Parameters	Function Introduction
Capture Mode	Auto Mode, Quality Priority, Timeliness Priority, Customize are available. Auto Mode: In this mode, it will push a face screenshot based on screenshot quality and push speed when the face is detected.
	<b>Quality Priority:</b> In this mode, it will push a face screenshot of best quality when the face is detected.
	<b>Timeliness Priority:</b> In this mode, it will push a face screenshot in the shortest time when the face is detected.
	<b>Customize:</b> In this mode, you can customize some detect conditions, including Snapshot Interval, Oblique Face Angle Limit, Pitching Face Angle Limit, Side Face Angle Limit, Blur Limit.
Snapshot Interval	80 milliseconds, 200 milliseconds, 500 milliseconds, 1 second, 2 seconds and 4 seconds are available.
	<b>Note:</b> Optional for Customize mode.
Obliguo Esco Anglo Limit	Set <b>Oblique Face Angle Limit to 1~180.</b> The larger the value, the larger angle the oblique face that can be detected.
Oblique Face Angle Limit	<b>Note:</b> Optional for Customize mode.
	Set <b>Pitching Face Angle Limit to 1~180.</b> The larger the value, the larger angle the pitching face that can be detected.
Pitching Face Angle Limit	<b>Note:</b> Optional for Customize mode.
Side Face Angle Limit	Set <b>Side Face Angle Limit to 1~180.</b> The larger the value, the larger angle the side face that can be detected.
	<b>Note:</b> Optional for Customize mode.
Blur Limit	Set <b>Blur Limit to 1~10.</b> The larger the value, the more blurred the face can be detected.
Biur Linnt	<b>Note:</b> Optional for Customize mode.
	Face Only, Upper Body, Whole Body are available.
	Face Only: Capture the screenshot of face only.
Snapshot Type	Upper Body: Capture the screenshot of upper body.
	Whole Body: Capture the screenshot of whole body.
	If you check the "Background" option, it will take another screenshot of the entire image.

Parameters	Function Introduction	
Snapshot	Set the number of screenshot to 1~5. It will take screenshot based on the snapshot interval you set.	
Record Video Sections	Six different periods are available(5, 10, 15, 20, 25, 30 sec).	
Save Into NAS	Save the alarm files into NAS.	
Upload Via FTP	Upload the alarm files via FTP.	
Upload Via Email	Upload the alarm files via Email.	
Enable Face Detection Message Post Settings	Check the checkbox to enable Face Detection Message Post. It will push information to some third-party devices or compatible software. Information can be pushed by TCP or HTTP.	
Post Type	Information can be pushed by <b>TCP</b> or <b>HTTP</b> .	
HTTP Notification URL	There are three types of HTTP Notification URL, including URL1,URL2 and URL3.	
Enable	Check the checkbox to enable a kind of HTTP Notification URL.	
Trigger Interval	Trigger Interval of camera pushing information to some third-party devices.	
HTTP Method	There are two HTTP push methods, including Post and Get.	
Snapshot	Choose whether to push information with snapshot to some third-party devices software.	
URL	Camera can use the API URL to send face detection information to back-end devices when the detected face is captured. The format of the API URL depends on the back-end devices, including server, port and other required formats. For example, if you want to send information to Milesight VMS Enterprise, the format of the API URL is as follows: http://VMS server IP: VMS Port/api/httpEvent Mote: It supports HTTPS for HTTP Post.	
User Name	Receiver name.	
Password	Receiver Password.	

Camera will detect faces in Live View according to the region and conditions you set. If you check the "Show Tracks" option, it will display the face screenshot with the ID on the left side of Live View.

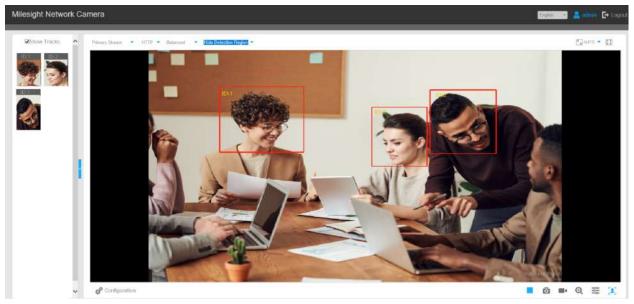

#### Advanced

Here you can enable Attribute Recognition and configure the attributes you want to detect. Or enable the Face Privacy Mode for Face Detection.

Event >> Face Detection					
General Face Capture Advanced					
	Attribute Recognition Settings				
	Enable Attribute Recognition:	₽I			
	Attribute:	IZI All IZI Age IZI Glasses IZI Cap	92) Gender 92) Mask		
	Face Privacy Settings				
	Enable Face Privacy Mode:	0			

 Table 46. Description of the buttons

Parameters	Function Introduction
Enable Attribute Recognition	<text><section-header><section-header></section-header></section-header></text>
Attribute	Users can choose the attributes as needed. All: Select or deselect all attributes in one click. Age: Recognize the age according the face, the types including Child (Age 0-17), Adult (Age 18-59), Elderly (Age more than 59). Gender: Recognize the gender according the face, the types including Male and Female. Glasses: Recognize whether person is wearing glasses or not. Mask: Recognize whether person is wearing mask or not. Cap: Recognize whether person is wearing cap or not. Mote: Unrecognized or abnormally recognized attributes will be displayed as


Parameters	Function Introduction
	When Face Privacy Mode is enabled, the detected faces in the face detection area will be mosaic automatically. The size of the mosaic is related to that of the detected faces, and users can customize the size of the detected faces as needed. The Face Privacy function meets the needs of users in some special scenarios, which greatly protects people's portrait rights.
	#Please make sure the face detection function is enabled.
	#To enable Face Privacy Mode, video parameters should be:
	<ul> <li>H.265 video codec (all streams)</li> <li>Primary Stream: 1080P@25fps</li> <li>Secondary Stream: 704*576@25fps</li> <li>Tertiary Stream: Disabled</li> </ul>
	You can change video parameters to recommended configuration in the pop up window:
Enable Face Privacy Mode	Milesight Network Camero       Image: Camero Camero         To enable Face Privacy Mode, video parameters will be modified to recommended configuration, are you sure to continue?         OK       Cancel
	#Face Capture/Face Detection Message Post/Attribute Recognition are not available in Face Privacy Mode. #Make sure your camera model is MS-CXXXX-XXC. (Except for LPR Camera Series)
	Medida Modernal Cancel The number of the intervention of the inte

# 5.7 LPR (Optional)

## 5.7.1 Live Video

Milesight LPR Camera supports professional LPR Live View interface, it can show the real-time license plate recognition results and display the snapshots of detected license plates, which realizes a stand-alone LPR solution.

#### LPR mode of Live View interface (Non-AI Series)

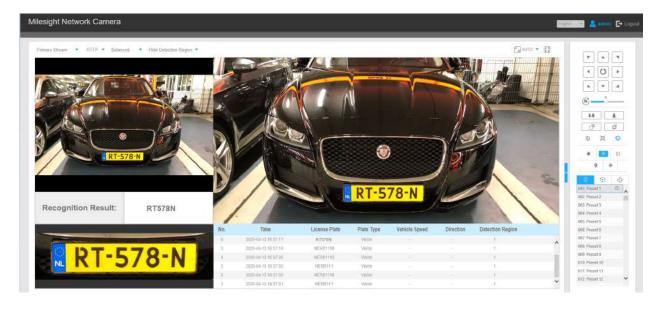

LPR mode of Live View interface (AI Series)



**Note:** For Snapshot/Recording (<sup>()</sup>), you can click to capture/record the current image/ video, but only when you using the IE browser with plugin, it will automatically be saved to the configured path on your PC and pop up the corresponding folder. If you using the Chrome/Firefox/ Safari/Edge browser in Plugin-Free Mode, it will not automatically pop up the corresponding folder to show you the details.

### 5.7.2 Settings

The LPR function will automatically detect and capture license plate in real time and compares to a predefined list, then takes appropriate action such as generating an alert once the license plate is on the predefined black list.

#### **Note:**

- LPR is optional for 12X AF Motorized Pro Bullet, Mini PoE PTZ Bullet, ABF Pro Box, Vandal-proof Motorized Mini Bullet, Motorized Pro Bullet Network Camera, Mini Bullet Network Camera.
- Currently we have three LPR versions, LPR1, LPR2 and LPR3. LPR1 is for Asian regions, LPR2 is for European regions and the former Soviet Union and LPR3 is for Korea.
- There is only Basic Event under Event Tab for LPR cameras.

#### General

•	Milesight	LPR >>	Settings							
	Live Video	General	Advanced	List Management	Black List Mode	White List Mode /	Visitor Mode			
	Playback					Snapshot OSO				
	Local Settings					Font Size:		Medium	v)	
*.	Poces permitigs					Fant Color			•	
3	Basic Settings					Background Color:		3		
						OSD Position		Тор	¥]	
Ë)	Advanced Settings							AI.		
1	Evont							Plate License Plat Plate Color	te 🕞Plate Type	
	LPR	8				OSD Information		Vehicle Vehicle Typ Direction	e 🗇 Vehicle Coke	
	Settings							Others		
	Smart Search							Time Device ID	Detection Region	
e :	System							Device Nat	e Line Bresk Character	
	Maintenance					Snapshot File Name	e.			
						Separator:		_	v	
								Plate Zillornse Plat Plate Color	te ⊡Plate Type	
						item of File Name		Vehicle Vehicle Typ	e 🗇 Vehicle Color	

Step1: Enter the license and click Save. When the License Status changes to Valid, the camera can start detecting the license plates.

Enable License Plate Recognition:	$\checkmark$
License:	7325220EC7B6C181B38A
License Status:	Valid
Processing Resolution:	1280*720 🗸

**Note:** Only LPR2 and LPR3 need to enter a license to activate the LPR function.

Step2: The LPR Night Mode supports the optimal LPR night recognition effect by adjusting different parameter levels. You can choose Customize to set effective time manually, or choose Auto Mode which can automatically switch to night mode according to illumination intensity.

#### Customize Mode

Image Settings	
Enable LPR Night Mode:	$\checkmark$
Effective Time:	Customize 🗸
Start Time:	18 🗸 00 🗸
End Time:	06 🗸 00 🗸
Level:	(i)

#### Auto Mode

Image Settings	
Enable LPR Night Mode:	$\checkmark$
Effective Time:	Auto Mode
Day to Night Value:	
Night to Day Value:	Reset
IR Light Sensor Value:	100 🔅
Level:	(i)


Step3: Check the checkbox "Enable License Plate Recognition", you can draw the screen to select area interested.

Parameters	Function Introduction
License (Only for LPR2 and LPR3)	Generated by camera's information
License Status (Only for LPR2 and LPR3)	Show present license status, including Valid and Invalid.
Processing Resolution	Resolution of the stream for LPR analysis, including 1920*1280, 1280*720, 640*360, 320*176.
Country/ Region (Only for LPR1)	Select country/ region to detect the license plate.
Effective Region Settings (Only for PTZ series)	<b>Normal:</b> configure the LPR detection regions for the current area. <b>Advanced:</b> configure different LPR detection regions for different PTZ presets(Only support Preset 1~4 so far).
Enable Day/Night Detection Mode (Only for LPR3)	With this option enabled, the camera will enable different detection modes according to Day/Night mode.

#### Table 47. Description of the buttons

		e speed an	d display				
	You need to draw two lines(Line1 and Line2) on the live vi	With this option enabled, the camera will detect the vehicle speed and display results on the Smart Search interface.					
	Installation Height, Horizontal Distance1 and Horizontal Di combine the lines you draw and the data filled to calculate	stance2, ca	amera will				
	Camera Installation Height: real height of camera.						
	Horizontal Distance1: real distance between camera pole	e and line1					
Enable Vehicle Speed Detection	Horizontal Distance2: real distance between camera pole and line2.						
(Only for LPR3)	Speed of vehicle						
	<ul> <li>Requirement         <ul> <li>Real height of camera (H) (<i>unit: meter</i>)</li> <li>Real distance between camera pole and line (d1, d2) (<i>unit: meter</i>)</li> <li>Pixel position of each line (y1, y2) (<i>unit: pare</i>)</li> </ul> </li> <li>To be changed UI         <ul> <li>Drawable two lines</li> <li>Edit boxes to input camera height and distance of each line</li> </ul> </li> </ul>	is 3m	H at				
	Draw the screen to select the area interested, then click "A area, only four recognition areas can be added. You can edit the name of the area or delete the area in the						
	ID Name	Edit	Delete				
Add	1 ROI_1 x 2 ROI 2	~	×				
	2 ROI_2 3 ROI_3	~	2				
	4 ROL_4	*	×				
	<b>Note:</b> Only license plates larger than 150 pixels can	be recogni	zed.				
Clear	Click the "Clear" button to clear the area being drawn.						
	Click the "Delete All" button to delete all the added areas.						

Step4: Schedule Settings. You can draw the schedule by clicking Edit button.

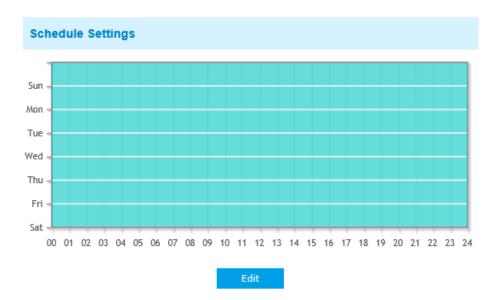

Step5: Set Detection Settings and LPR Message Post Settings.

Detection Settings	
Detection Trigger:	Always 🗸
Confidence Level:	<u>     4</u>
Repeat Plate Checktime:	0 millisecond ✔ (0~60000ms)
Features Identification:	□All □Direction □Detection Region □Region
LPR Message Post Settings	
Enable LPR Message Post:	$\checkmark$
Post Type:	HTTP
HTTP Method:	Post 🗸
Snapshot Type:	All
HTTP Notification URL:	
User Name:	
Password:	

#### Table 48. Description of the buttons

Parameters	Function Introduction
Detection Trigger	Always: in this mode, camera will always detect license plates. Alarm Input: in this mode, camera will only detect license plates during Alarm Input is being triggered.
Confidence Level (Only for LPR1 and LPR2)	You can set the confidence level from 1 to 10. When the confidence level of the license plate is higher than the set confidence level, it will push the license plate image to the Smart Search interface.
Repeat Plate Checktime	Set the time interval for repeatedly reading license plates to effectively avoid duplicate identification of parking vehicles. You can set Repeat Plate Checktime from 0 to 60min or 0 to 60000ms.
Feature Identification	Check <b>Region(Only for LPR2)</b> , <b>Direction Region</b> , <b>Direction</b> or <b>All</b> to enable Feature Identification, it will display the corresponding information on the Smart Search interface.
Enable LPR Message Post	Check the checkbox to enable LPR Message Post. It will push information to some third-party devices or software that are compatible with ours.
Post Type	Information can be pushed by RTSP, TCP or HTTP.
HTTP Method	There are two HTTP push methods, including Post and Get.
Snapshot Type	Three kinds of snapshot can be chosen: All, License Plate and Full Snapshot. When you choose All, License Plate Snapshot and Full Snapshot will be pushed. Note: This option is available just for Post HTTP Method.
HTTP Notification URL	LPR camera can use the API URL to send LPR information to back-end devices when the license plate is recognized. API URL format fills as below: <u>http://IP:Port/api/Ipr</u> ?
User Name	Receiver name
Password	Receiver Password

**Note:** License Plate Serial Format function supports formulating identification rules and can automatically do further processing, filter license plates in non-compliant formats to achieve more intelligent and accurate license plate recognition.

Settings Add	Delete All				
ID	License Plate Character Count	License Plate Serial Format	Enable	Edit	Delete
0	ALL	*			
1	6	AA111A	$\checkmark$	$\mathbf{x}$	×
2	7	AA111A*	$\checkmark$	$\mathbf{x}$	×
- Letters - Numbe	rs Only icted Type	nt			
		Save			

### Advanced

In the interface, you can set display information on snapshot of license plate recognition, and also customize the file name of snapshots which are uploaded via FTP or Email or stored on local LPR Picture File Path.

📀 Milesight	LPR >> Settings				
H Live Video	General Advanced I	ist Managemeint - Black List Me	ode White List Mode Visitor )	Abde	
Playback			Snapshot OSD		· · · · · · · · · · · · · · · · · · ·
			Font Size.	[Medium V]	
<ul> <li>Local Settings</li> </ul>			Fant Color	•	
Basic Settings			Background Color:		
			OSD Pesition	[Top 🛩]	
<ul> <li>Advanced Settings</li> </ul>					
Evont				Plate     Dicense Plate      Plate Type     District Color	
LPR	8		OSD Information	Vehicle Vehicle Type Vehicle Color Directon Bread	
Settings				Others	
Smart Search				Time Position Device ID Detection Region	
🖉 System				Device Name Line Break Character	
Maintenance			Snapshot File Name		
			Separator		
				□AL	
				Plate     ZiLicence Plate  Plate Type     Plate Celor	
			item of File Name:	I Vebicte ⊡Vebicte Type ⊡Vebicle Color	

 Table 49. Description of the buttons

Parameters	Function Introduction
Font Size	Small/Medium/Large are available for OSD information.  Note: Snapshot OSD font size and Image OSD font size are corresponded.
Font Color	Enable to set different color for OSD information. <b>Note:</b> Snapshot OSD font color and Image OSD font color are corresponded.
Background Color	Check the checkbox to select background color of snapshot OSD information.           Image: Note:         Background color cannot be the same with font color.
OSD Position	Check the checkbox to show OSD information position.

Parameters	Function I	ntroduction
	Customize the OSD content. You can s	set OSD Information as shown below:
OSD Information	OSD Information: When license plate is recognized and t license plate recognition will show as b	elow:
Separator	"-", "_" and Space are available for File The default separator is "-".	Name Separator format.

Parameters	Function I	ntroduction		
	You can customize the snapshot file name according to items chosen.			
		All		
		Plate ✓License Plate □Plate Type □Plate Color		
Item of File Name	Item of File Name:	Vehicle         Vehicle Type       Vehicle Color         Direction       Speed		
		Others         Time       Position         Device ID       Detection Region         Device Name		

Each time when an item is checked, the list will add the item row, including the item name and

sorting operation. You can click  $\equiv \uparrow$  and  $\equiv \downarrow$  button to sort these items, and choose separator to connect these items name. Also, the content of Position and Device ID items can be customized. When you check all items, the function interface will show as below:

Snapshot File Name			
Separator:	-		~
Item of File Name:	<ul> <li>✔AII</li> <li>✔Time</li> <li>✔Plate Type</li> <li>✔Direction</li> <li>✔Position</li> <li>✔Device ID</li> </ul>	✓Vehi	nse Plate cle Speed ection Region ce Name
Item of File Name	•		Sorting
Plate Type			E↑ E↓
Vehicle Speed			E↑ E↓
License Plate			E↑ E↓
Direction			≘t ≣↓
Detection Region			≘t ≣↓
Position: Position			E↑ E↓
Device Name			≘t ≣↓
Time			Ξ↑ Ξ↓
Device ID: Device I	ID		Et E↓

Note: The file name of full-snapshot will be preceded by a number of 4.

**Note:** You need to check at least one item.

For example, you can choose items, separator and items sorting as below:

Snapshot File Name		
Separator:		
Item of File Name:	All         ✓Time       ✓License Plate         Plate Type       Vehicle Speed         Direction       Detection Region         Position       Device Name         Device ID       Formation	
Item of File Name	e Sorting	
Time	≘↑ ≡↓	
License Plate	≘↑ E↓	
Note: The file name of full-snapshot will be preceded by a number of 4.		

Once license plate is recognized, and the snapshot will be uploaded via FTP or Email or stored on your local LPR Picture File Path. Then, You can see the snapshot file name which you customize as shown below:

Full-snapshot Recognized successfully



Full-snapshot Recognized failed



License plate snapshot Recognized successfully



License plate snapshot Recognized failed



📑 Note:

- If the item checked is not recognized successfully, then the item will be displayed with the specific symbol "#".
- The file name of full-snapshot will be preceded by a number of 4.

#### List Management

Add the license plates to this interface as Black or White type (Black/White List), and then you can set the alarm action for these license plates in the corresponding black list mode or white list

mode interface. When these license plates are detected, the camera will respond accordingly to your settings.

Milesight	LPR >> Settings							
IN Live Video	General Advanced	List Management Black List	Mode White List Mode	Visitor Mode				
Playback		Ptate Type: All	License Plate				Search -	
Local Settings		Show 30 w entries						
Basic Settings		License Plate	Plate Type	Schedule Rule	Valid Time	Note	Operation	
Control Control of		EDZEVB	White	*	Abways		××	
Advanced Settings		RT57BM	Black		Always		××	
9 Eyets								
D LPR								
Settings								
Smart Search								
System .								
Namesance								
		Showing 1 to 2 of 2 entries	First Previous 🚺 Next L	36t				
		m			tele Statement (D) Sold	Delete Li	Example 1	

 
 Table 50. Description of the buttons
 Г

Parameters	Function Introduction				
		as black or white, enter the license plate, click the te will be added successfully.			
	Add License Plate				
	License Plate:*	X243499			
	Туре:*	Black			
Add License Plate	Valid Time:*	Customized V			
	Start Time:	2021-06-10 00:00:00			
	End Time:	2021-06-10 23:59:59			
	Note:	welcome			
		Save Cancel			

Parameters	Function Introduction
Batch Upload	You can add a csv form with the license plate you want to add, click the "Browse" button to import the form to this interface, click the "Upload" button, the license plates will be added successfully.
List Search	Select Plate Type or directly enter the license plate number, click the "Search" button, the corresponding license plate will be displayed in the list below.
Export List	Click the "Export List" button to export the license plate in the current list to a csv form locally.
Delete List	Click the "Delete List" button to delete all the license plate in the current list.

Parameters	Function Introduction
Parameters	<image/>
	<b>Note:</b> Support setting up to 4 Schedule Rules for Schedule Mode.

**Note:** It supports adding 1000 Black List and White List.

## **Black List Mode**

Milesight	LPR >> Settings	£ .			
III Live Video	General Advan	ced List Management	Black List Mode White List Mod	e Visitor Mode	
Playback			Enable Black List Mode:		^
Local Sattings			Schedule Settings		
Ø Basic Settings			Sun -		
P Advanced Sottings			Tur -		
Event			The -		
🖨 LPR			541 . 86 01 02 03 04 65 04 07	08 09 16 11 12 13 14 15 14 17 18 19 28 21 22 23 24	
Settings				Edit .	
Smart Search			Alarm Action		
🕎 System			Save Into Storage	(Please mount storage device.)	
Maintenance			Upload Via FTP:	File Format Record	
			Upload Via Emait	File Format Snapshot     (Please enable the Email.)	
			Alarm to SIP Phone:	(Please open the SIP.)	Y

Step1: Check the checkbox to enable Black List Mode.

Step2: Schedule Settings. You can draw the schedule by clicking Edit button.

Step3: Set alarm action.

Alarm Action	
Save Into Storage:	File Format: Snapshot (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	

Step4: Set alarm settings.

Alarm Setting	
Record Video Sections:	5 seconds 🗸
Snapshot Type:	License Plate V
Snapshot:	1
Snapshot Interval:	1 second 🗸
Email Triggered Interval:	Auto 🗸
External Output Action Time:	30 seconds 🗸
Play Audio Interval:	Auto 🗸

After that, when a license plate marked as "black" is detected, the camera will respond accordingly to your settings.

### White List Mode

Milesight	LPR >> Settings
Live Video	General Advanced List Management Black List Mode White List Mode Visitor Mode
Playback	Enable White List Mode
le Local Settings	Schedule Settings
Basic Softings	
e <sup>®</sup> Advanced Settings	Tue
😰 Evont	The
🚔 LPR	541 60 01 00 03 04 05 06 07 08 09 10 13 13 13 14 15 15 15 19 20 21 32 25 24
Settings	fat
Smart Search	Afarm Action
🖷 System	Save Into Storage: [Pease mount storage device )
Maintenance	Upload Via FTP
	Lipicad Via Email.
	Alarm to SIP Phone

Step1: Check the checkbox to enable White List Mode.

Step2: Schedule Settings. You can draw the schedule by clicking Edit button.

Step3: Set alarm action.

Alarm Action	
Save Into Storage:	File Format: Snapshot (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	

#### Step4: Set alarm settings.

Alarm Setting	
Record Video Sections:	5 seconds
Snapshot Type:	License Plate
Snapshot:	1
Snapshot Interval:	1 second V
Email Triggered Interval:	Auto
External Output Action Time:	30 seconds
Play Audio Interval:	Auto 🗸

After that, when a license plate marked as "White" is detected, the camera will respond accordingly to your settings.

### Visitor Mode

Milesight	LPR >> Settings	
Live Video	General Advanced List Management Black List Mode	White List Mode Visitor Mode
Playback	Enable	e Visior Mode.
Local Settings	Scheo	dule Settings
Basic Settings	Sun - Ren -	
d Advanced Settings	Tue -	
😰 Event	The -	
📾 LPR	Sat	机能的 04 经 66 团 66 和 11 11 11 14 15 14 17 18 18 25 28 24
Settings	1	Este )
Smart Search	Alarm	n Action
🖷 System		Into Storage: CRease mount storage device.)
Maintenance	Upload	d Via FTP:
	Uploa	d Via Email (Piesei enable the Email)
	Alarm	to SIP Phone: (Please open the SIP.)

Step1: Check the checkbox to enable Visitor Mode.

Step2: Schedule Settings. You can draw the schedule by clicking Edit button.

Step3: Set alarm action.

Alarm Action	
Save Into Storage:	File Format: Snapshot (Please mount storage device.)
Upload Via FTP:	File Format: Record
Upload Via Email:	File Format: Snapshot (Please enable the Email.)
Alarm to SIP Phone:	(Please open the SIP.)
HTTP Notification:	

Step4: Set alarm settings.

Alarm Setting	
Record Video Sections:	5 seconds 🗸
Snapshot Type:	License Plate V
Snapshot:	1 🗸
Snapshot Interval:	1 second 🗸
Email Triggered Interval:	Auto 🗸
External Output Action Time:	30 seconds
Play Audio Interval:	Auto 🗸

After that, when a license plate that is not marked as "Black" or "White" is detected, the camera will respond accordingly to your settings.

## 5.7.3 Smart Search

The real-time detection results will be displayed on the right side of Smart Search page, including detected time, live screenshot, and license plate.


Step1: Select Plate Type or directly enter the license plate number and then select Start Time and End Time. The related license plate information will be displayed as below by one click on the "**Search**" button.

Milesight Network Carn	iera 🖉 🔒 kom 🗗 Logon
🚳 Milesight	LPR >> Smart Search
🗰 Live Video	Smart Search
Playback	Plate Type: [A] V License Plate Speed AI V
🐲 Local Settings	Dilection: 🕅 💙 Start Time: 2021-05-01 00 00:00 🖩 End Time: 2021-05-27 23 59:59 🗐
Ø Basic Settings	Plade Color: All v Vehicle Type: All v Vehicle Color: All v const.
# Advanced Sellings	LPR Logs
Event	
🚔 LPR	
Settings	<b>RT-578-N SR-937-P ST-775-X ST-775-X</b>
Smart Bearch	
🖤 System	SH-987-DI SJ-364-H   KEAT 477   BIS NOB   B88 JNG
Maintenance	
	Time: 2021-06-17 13:24/25 License Plate: RTS78N Plate Contrivellew State Plate: Contribute State Plate: Contrivellew State Plate: Contrivellew State
	Stever 1 de Castron de
	sequet AP seque

#### **F** Note:

- It supports displaying 4,000 logs.
- Only when there is a SD Card or NAS has been set on the storage management, then the logs can be stored and show on Smart Search page.
- For Plate Color/Vehicle Color Recognition and Vehicle Type Classification, please make sure your model is MS-CXXXX-XXC.

Step2: Click on the thumbnail photo under the LPR Logs, then the license plate details will be shown as below :

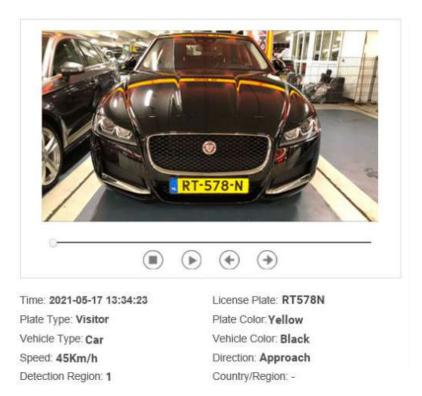

Step3: Click the "**Export**" or "**Export All**" button to export the desired files in the current list to a local folder.

Export		
Export File:	<ul> <li>Plate List</li> <li>Video</li> <li>Picture</li> <li>Plate List(With pictures)</li> </ul>	
Video File Format:	MP4 V	
	Export Cancel	

Step4: Click the "Auto Export" button to automatically export the logs to FTP, Email or Storage.

Log Settings	
Enable Auto Export Logs:	
Day:	Everyday 🗸
Time:	00:00:00
Export Time Range:	Export All
Export to:	FTP Email Storage
Sa	ve

# 5.8 System

All information about the hardware and software of the camera can be checked on this page.

System	
Device Name:	Network Camera
Product Model:	MS-C2942-B
Hardware Version:	V1.2
Software Version:	40.7.0.78
MAC Address:	1C:C3:16:23:8D:13
Device Information:	SD010ES2p0N6
Alarm Input:	2
Alarm Output:	2
Uptime:	4 days 17 minutes
QR Code:	Please scan this QR code on App to get a remote view.

 Table 51. Description of the buttons

Parameters	Function Introduction
Device Name	The device name can be customized. It will be seen in file names of video files
Product Model	The product model of the camera
Hardware Version	The hardware version of the camera
Software Version	The software version of the camera can be upgraded
MAC Address	Media Access Control address

Parameters	Function Introduction
Device Information	The device information, including information about alarm I/O and clipper chip
Alarm Input	The number of Alarm Input interface
Alarm Output	The number of Alarm Output interface
Up Time	The elapsed time since the last restarted of the device

**Note:** The Alarm Input/Alarm Output will appear only when the camera have alarm input/output interface.

# 5.9 Maintenance

# 5.9.1 System Maintenance

System Upgrade	
Software Version:	43.7.0.77
Local Upgrade:	Browse Upgrade Reset after Upgrading
Online Upgrade:	Check

Note: Do not disconnect the power of the device during the upgrade.

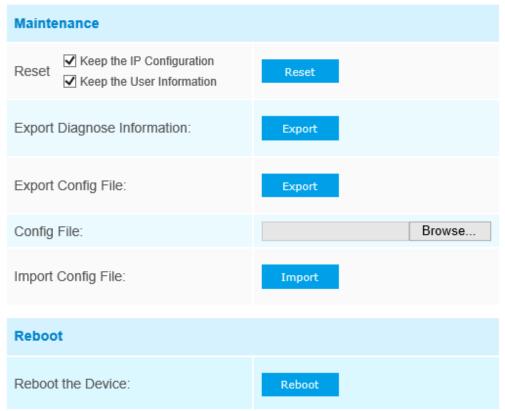


 Table 52. Description of the buttons

Parameters	Function Introduction
System Upgrade	Software Version: The software version of the camera. Local Upgrade: Click the "Browse" button and select the upgrading file, then click the "Upgrade" button to upgrade. After the system reboots successfully, the update is done. You can check "Reset after Upgrading" to reset the camera after upgrading it. Online Upgrade: Click the "Check" button to check the current latest firmware version on our website, and then click "OK" to upgrade to this version. It will prompt "The current version is the latest version" if your camera is already the latest version. Newer version 43.7.0.77-r3 detected, upgrade? OK Cancel It will prompt "The current version is the latest version" if your camera is already the latest version. It will prompt "The current version is the latest version" if your camera is already the latest version. It will prompt "The current version is the latest version" if your camera is already the latest version. It will prompt "The current version is the latest version" if your camera is already the latest version. It will prompt "The current version is the latest version" if your camera is already the latest version. It will prompt "The current version is the latest version" if your camera is already the latest version. It is the latest version. It is the latest version. It is born to disconnect the power of the device during the update. The device will be restarted to complete the upgrading.

Parameters	Function Introduction
Parameters	Reset settings: Click "Reset" button to reset the camera to factory default settings         Keep the IP Configuration: Check this option to keep the IP configuration when resetting the camera.         Keep the User information: Check this option to keep the user information when resetting the camera.         Export Diagnose Information: Click this button to export logs and system information of the device operation status.         Image: Note: The file format is ".txt".         Export Config File: Click this button and a window will pop up as shown below:         File Encryption Configuration         Input the encryption password:         Confirm:         Save         Cancel    You need to enter and confirm password again, then click save button to export configuration file. Import Config File: Click this button, then a window will pop up and you can click "OK" to update the configuration.
	File Decryption     Input the password of config file:       Input the password of config file:     Input the password of config file:       Save     Cancel
	<b>Note:</b> Export and import the same configuration file. Password must be the same.

Parameters	Function Introduction
Reboot	Click "Reboot" button to restart the device immediately

# 5.9.2 Auto Reboot

Set the date and time to enable Auto Reboot function, the camera will reboot automatically according to the customized time in case that camera overload after running a long time.

Auto Reboot Settings	
Enable Auto Reboot:	
Day:	Everyday 🗸
Time:	00:00:00
Sa	ve

# Chapter 6. Services

Milesight Technology Co., Ltd provides customers with timely and comprehensive technical support services. End-users can contact your local dealer to obtain technical support. Distributors and resellers can contact directly with Milesight for technical support.

Technical Support Mailbox: support@milesight.com

Web: http://www.milesight.com

Online Problem Submission System: http://www.milesight.com/service/feedback.asp

#### MILESIGHT USA

TEL: +1-800-561-0485

Add: 7509 N.W. 36th Street, Miami, Florida 33166, USA

#### MILESIGHT KOREA

TEL: +82-2-839-3335

Add: 925, Anyang SK V1 Center, LS-ro 116beon-gil, Dongan-gu, Anyang-si, Korea

#### MILESIGHT CHINA

TEL: +86-592-5922772

Add: No.23 Wanghai Road, 2nd Software Park, Xiamen, China